

## Contents

<b>24 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	1
1.3 Rules for cleanliness	2
1.4 Important: Required procedure prior to opening high-pressure injection system	3
1.5 Checking vacuum system	4
<b>2 Injection system</b>	<b>6</b>
2.1 Technical data	6
2.2 Overview of fitting locations	6
2.3 Air cleaner - exploded view	15
2.4 Removing and installing air filter element	16
2.5 Throttle valve module, exhaust gas recirculation valve and intake manifold - exploded view	17
2.6 Fuel rail with intake manifold flap motor V157 - exploded view (for engine code letters AXW and BHD)	19
2.7 Fuel rail with intake manifold flap motor V157 - exploded view (for engine code letters BMB, BLX, BLY, BLR, BVZ and BVY)	21
2.8 Intake manifold - exploded view	22
2.9 Checking intake manifold change-over function	23
2.10 Removing and installing intake manifold	24
2.11 Removing and installing fuel rail	25
2.12 Checking fuel pressure and residual pressure (up to high-pressure pump)	26
2.13 High-pressure pump - exploded view (for engine code letters AXW and BHD)	29
2.14 High-pressure pump - exploded view (for engine code letters BMB, BLX, BLY, BLR, BVZ and BVY)	31
2.15 Removing and installing high-pressure pump	32
2.16 Removing and installing injectors, renewing combustion chamber (teflon) ring seal	34
2.17 Removing and installing Lambda probes (before catalytic converter)	39
2.18 Removing and installing Lambda probes (after catalytic converter)	40
2.19 Removing and installing NOx sensor control unit J583 and NOx sender G295	41
2.20 Removing and installing exhaust gas temperature sender 1 G235	43
2.21 Lambda probe 3 after catalytic converter G287 and Lambda probe heater 3 after catalytic converter Z64	44
<b>3 Engine control unit</b>	<b>46</b>
3.1 Wiring and component check with test box V.A.G 1598/42	46
3.2 Renewing Motronic control unit J220	47
<b>28 - Ignition system</b>	<b>52</b>
<b>1 General notes and safety precautions</b>	<b>52</b>
1.1 General notes on ignition system	52
1.2 Safety precautions	52
<b>2 Servicing ignition system</b>	<b>54</b>
2.1 Test data	54
2.2 Ignition system - exploded view	54
2.3 Removing and installing ignition coils with output stages	55