

Contents

| | |
|--|-----------|
| 24 - Mixture preparation - injection | 1 |
| 1 Safety precautions and rules for cleanliness | 1 |
| 1.1 General notes on self-diagnosis | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1 |
| 1.3 Rules for cleanliness and instructions for working on fuel system | 2 |
| 1.4 Rules for cleanliness | 2 |
| 1.5 Important: Required procedure prior to opening high-pressure injection system | 3 |
| 1.6 Checking vacuum system | 4 |
| 2 Injection system | 6 |
| 2.1 Technical data | 6 |
| 2.2 Overviews - fitting locations | 6 |
| 2.3 Air cleaner / engine cover panel - exploded view | 19 |
| 2.4 Removing and installing engine cover panel with air filter element | 20 |
| 2.5 Removing and installing air mass meter G70 | 22 |
| 2.6 Intake manifold - exploded view (for engines with code letters AXX, BPY and BWA) | 23 |
| 2.7 Intake manifold - exploded view (for engines with code letters BHZ, BZC, CDLA and CDLC) | 26 |
| 2.8 Fuel rail - exploded view | 28 |
| 2.9 Removing and installing intake manifold with fuel rail | 29 |
| 2.10 Removing and installing throttle valve module J338 | 33 |
| 2.11 Cleaning throttle valve module J338 | 34 |
| 2.12 Removing and installing intake manifold flap motor V157 with intake manifold flap potentiometer G336 | 35 |
| 2.13 Removing and installing fuel pressure sender G247 | 36 |
| 2.14 Checking fuel pressure (low pressure) up to high-pressure pump | 37 |
| 2.15 Checking fuel pressure and residual pressure (up to high-pressure pump) | 38 |
| 2.16 High-pressure pump - exploded view | 41 |
| 2.17 Removing and installing high-pressure pump | 43 |
| 2.18 Removing and installing injectors | 46 |
| 2.19 Cleaning injectors | 50 |
| 2.20 Lambda probes - overview | 51 |
| 2.21 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter | 52 |
| 2.22 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29 | 53 |
| 3 Engine control unit | 55 |
| 3.1 Wiring and component check with test box V.A.G 1598/42 | 55 |
| 3.2 Renewing engine control unit J623 | 57 |
| 28 - Ignition system | 61 |
| 1 General notes and safety precautions | 61 |
| 1.1 General notes on ignition system | 61 |
| 2 Servicing ignition system | 62 |
| 2.1 Test data | 62 |
| 2.2 Ignition system - exploded view | 62 |
| 2.3 Removing and installing ignition coils with output stages | 63 |
| 2.4 Removing and installing knock sensor 1 G61 and knock sensor 2 G66 | 65 |