

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions when working on the fuel system	2
1.3 Safety precautions when working on the injection and ignition system	3
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Rules for cleanliness when working on fuel supply system and injection system	4
1.7 Important: Required procedure prior to opening high-pressure injection system	5
1.8 Checking for leaks in the fuel system	6
1.9 Checking vacuum system	6
2 Injection system	8
2.1 Test data	8
2.2 Overview of fitting locations	8
3 Air cleaner	15
3.1 Air cleaner - exploded view	15
3.2 Removing and installing air filter element	16
3.3 Removing and installing air cleaner housing	18
4 Intake manifold, fuel rail and injectors	19
4.1 Intake manifold (top section) - exploded view	19
4.2 Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	21
4.3 Removing and installing throttle valve module J338	22
4.4 Removing and installing intake manifold (top section)	23
4.5 Intake manifold (bottom section), fuel rail and injectors - exploded view	25
4.6 Removing and installing intake manifold (bottom section) with fuel rail	27
4.7 Removing and installing injectors	29
4.8 Removing and installing fuel pressure sender G247	34
4.9 Checking fuel pressure and residual pressure (up to high-pressure pump)	34
5 High-pressure pump	39
5.1 High-pressure pump - exploded view	39
5.2 Removing and installing high-pressure pump	40
5.3 Removing and installing high-pressure pipe	41
6 Lambda probes	44
6.1 Lambda probes - overview	44
6.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	45
6.3 Removing and installing Lambda probe after catalytic converter G130 with Lambda probe 1 heater after catalytic converter Z29	46
7 Engine control unit	49
7.1 Wiring and component check with isolator boxes VAS 6606	49
7.2 Removing and installing engine control unit J623	50
28 - Ignition system	54
1 General notes and safety precautions	54
1.1 General notes on ignition system	54
1.2 Safety precautions when working on the injection and ignition system	54
1.3 Safety precautions when working on vehicles with start/stop system	55
1.4 Safety precautions when using testers and measuring instruments during a road test	55
2 Servicing ignition system	56
2.1 Test data	56
2.2 Ignition system - exploded view	56
2.3 Removing and installing ignition coils	57



2.4	Removing and installing knock sensors G61 / G66	58
2.5	Removing and installing Hall senders G40 / G300	59
2.6	Removing and installing engine speed sender G28	60