

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions	1
1.2 Rules for cleanliness when working on fuel supply system and injection system	2
2 Servicing Motronic injection system	3
2.1 Test data	3
2.2 Overview of fitting locations	3
2.3 Air cleaner - exploded view	10
2.4 Removing and installing air filter element	12
2.5 Removing and installing air cleaner housing	13
2.6 Removing and installing air mass meter G70	14
2.7 Intake manifold - exploded view	14
2.8 Removing and installing intake manifold	16
2.9 Wiring and component check on engine control unit with adapter cable V.A.G 1598/31 (test box)	24
2.10 Removing and installing engine control unit	26
2.11 Checking system pressure, fuel pressure regulator and residual pressure	28
2.12 Dismantling and assembling fuel rail with injectors	31
2.13 Removing and installing injectors	32
2.14 Checking injection quantity and spray pattern of injectors; checking for leaks	33
2.15 Removing and installing Lambda probes (before catalytic converter)	36
2.16 Removing and installing Lambda probes (after catalytic converter)	38
28 - Ignition system	40
1 General notes and safety precautions	40
1.1 General notes on ignition system	40
1.2 Safety precautions	40
2 Servicing ignition system	42
2.1 Test data	42
2.2 Exploded view - ignition system	42
2.3 Removing and installing ignition coils	44