

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions	1
1.2 Rules for cleanliness	1
2 Injection system	3
2.1 Technical data	3
2.2 Fitting locations - overview	3
2.3 Air cleaner - exploded view	7
2.4 Removing and installing air filter element	9
2.5 Intake manifold - exploded view	9
2.6 Removing and installing intake manifold (top and bottom sections)	11
2.7 Removing and installing intake manifold (bottom section)	15
2.8 Checking intake manifold change-over function	17
2.9 Fuel rail with injectors - exploded view	18
2.10 Removing and installing injectors	19
2.11 Checking fuel pressure regulator and residual pressure	21
2.12 Checking for leaks, checking injection quantity and spray pattern of injectors	24
2.13 Bleeding fuel system without return pipe	26
2.14 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter	29
2.15 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29	30
3 Engine control unit	32
3.1 Wiring and component check with adapter cable, 121-pin V.A.G 1598/31 (test box)	32
3.2 Renewing engine control unit	32
28 - Ignition system	37
1 General notes and safety precautions	37
1.1 General notes on ignition system	37
1.2 Safety precautions	37
2 Servicing ignition system	38
2.1 Technical data for ignition system	38
2.2 Ignition system - exploded view	38