

Contents

00 - Technical data	1
1 Engine number	1
2 Safety precautions	2
2.1 Working on the fuel system	2
2.2 Safety precautions when working on the ignition system	2
2.3 Working on the cooling system	3
2.4 Working on vehicles with start/stop system	3
2.5 Using testers and measuring instruments during a road test	3
2.6 Working on the exhaust system	4
3 General repair instructions	5
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
3.2 Checking fuel system for leaks	5
3.3 Foreign particles in engine	6
3.4 Contact corrosion	6
3.5 Routing and attachment of pipes, hoses and wiring	6
3.6 Installing radiators, condensers and charge air coolers	6
3.7 Nuts, bolts	6
3.8 Identification plates	7
3.9 Use of impact wrenches	7
3.10 Checking vacuum system	7
10 - Removing and installing engine	9
1 Removing engine	9
2 Separating engine and manual gearbox	27
3 Separating engine and dual clutch gearbox	30
4 Securing engine to engine and gearbox support	32
5 Installing engine	34
6 Assembly mountings	39
6.1 Exploded view - assembly mountings	39
6.2 Removing and installing engine mountings	40
6.3 Checking adjustment of assembly mountings (engine/gearbox mountings)	42
6.4 Adjusting assembly mountings	43
13 - Crankshaft group	47
1 Cylinder block (pulley end)	47
1.1 Exploded view - poly V-belt drive	47
1.2 Removing and installing poly V-belt	49
1.3 Removing and installing idler roller for poly V-belt	50
1.4 Poly V-belt tensioner	50
1.5 Removing and installing poly V-belt pulley for crankshaft	51
1.6 Removing and installing bracket for ancillaries	54
2 Cylinder block (gearbox end)	55
2.1 Exploded view - flywheel and sealing flange	55
2.2 Removing and installing flywheel	56
2.3 Renewing sealing flange	57
3 Crankshaft	65
3.1 Extracting and driving in needle bearing for crankshaft - vehicles with dual clutch gearbox	65
4 Pistons and conrods	67
4.1 Exploded view - pistons and conrods	67
4.2 Removing and installing pistons	69



4.3	Measuring radial clearance of conrods	70
4.4	Checking pistons and cylinder bores	71
15	- Cylinder head, valve gear	73
1	Chain drive	73
1.1	Exploded view - timing chain covers	73
1.2	Renewing crankshaft oil seal	75
1.3	Removing and installing timing chain cover (top)	77
1.4	Removing and installing timing chain cover (bottom)	79
1.5	Exploded view - camshaft timing chain	82
1.6	Checking valve timing	83
1.7	Detaching camshaft timing chain from camshaft sprocket	85
1.8	Removing and installing camshaft timing chain	92
1.9	Checking timing chain	99
2	Cylinder head	104
2.1	Exploded view - cylinder head	104
2.2	Removing and installing cylinder head	106
2.3	Checking compression	113
3	Valve gear	116
3.1	Exploded view - camshaft housing	116
3.2	Checking axial clearance of camshaft	118
3.3	Removing and installing camshaft housing	118
3.4	Removing and installing camshaft	124
3.5	Renewing valve stem oil seals with cylinder head installed	125
3.6	Renewing valve stem oil seals with cylinder head removed	128
3.7	Valve dimensions	131
3.8	Checking valve guides	131
3.9	Checking valves	132
17	- Lubrication	133
1	Sump and oil pump	133
1.1	Exploded view - sump, oil pump	133
1.2	Removing and installing oil level and oil temperature sender G266	135
1.3	Removing and installing sump	135
1.4	Removing and installing drive chain for oil pump	138
1.5	Removing and installing oil pump	139
1.6	Removing and installing non-return valve	141
2	Oil filter bracket and engine oil cooler	143
2.1	Exploded view - oil filter bracket and engine oil cooler	143
2.2	Removing and installing oil filter bracket	144
2.3	Removing and installing engine oil cooler	145
2.4	Removing and installing oil pressure switch F1	146
2.5	Checking oil pressure switch F1 and oil pressure	147
2.6	Exploded view - oil separator	149
2.7	Removing and installing oil separator	150
2.8	Engine oil	152
2.9	Checking oil level	152
19	- Cooling	153
1	Cooling system	153
1.1	Connection diagram - coolant hoses	153
1.2	Draining and filling cooling system	155
1.3	Checking cooling system for leaks	161
2	Coolant pump and thermostat	163
2.1	Exploded view - coolant pump	163

2.2	Removing and installing coolant pump pulley	164
2.3	Removing and installing coolant pump	165
2.4	Removing and installing coolant circulation pump V50	165
2.5	Exploded view - housing for thermostat with rear coolant pipe	166
2.6	Removing and installing coolant temperature sender G62	168
2.7	Removing and installing radiator outlet coolant temperature sender G83	169
2.8	Removing and installing thermostat housing and coolant pipe (rear)	170
2.9	Removing and installing coolant pipe (right-side)	171
3	Radiator and radiator fans	174
3.1	Exploded view - radiator and radiator fans	174
3.2	Removing and installing radiator cowl	175
3.3	Removing and installing radiator fan V7 with radiator fan control unit J293	176
3.4	Removing and installing radiator	176
21	Turbocharging/supercharging	181
1	Turbocharger	181
1.1	Exploded view - turbocharger	181
1.2	Removing and installing turbocharger	182
1.3	Removing and installing charge pressure positioner V465	186
2	Charge air cooler	189
2.1	Exploded view - charge air cooler	189
2.2	Removing and installing charge pressure sender G31 / intake air temperature sender 2 G299	190
2.3	Removing and installing charge air cooler	190
2.4	Checking charge air system for leaks	191
26	Exhaust system	194
1	Silencers	194
1.1	Exploded view - silencers	194
1.2	Removing and installing front exhaust pipe	197
1.3	Removing and installing catalytic converter	198
1.4	Separating centre and rear silencers	200
1.5	Stress-free alignment of exhaust system	201
1.6	Checking exhaust system for leaks	202
2	Exhaust manifold	203