

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
2 Safety precautions	3
2.1 Working on the fuel system	3
2.2 Procedure before opening high-pressure section of injection system	3
2.3 Working on the cooling system	4
2.4 Using testers and measuring instruments during a road test	4
2.5 Working on the exhaust system	4
3 General repair instructions	5
3.1 Rules for cleanliness when working on fuel supply system and injection system	5
3.2 Routing and attachment of pipes, hoses and wiring	5
3.3 Checking for leaks in the fuel system	5
3.4 Foreign particles in engine	5
3.5 Checking cylinder bore	6
3.6 Contact corrosion!	6
3.7 Checking vacuum system	6
3.8 Installing radiators and condensers	7
10 - Removing and installing engine	8
1 Removing and installing engine, detaching from gearbox	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	24
1.3 Securing engine to assembly stand	24
1.4 Installing engine	26
2 Assembly mountings	30
2.1 Assembly mountings - exploded view	30
2.2 Checking adjustment of assembly mountings (engine/gearbox mountings)	31
2.3 Adjusting assembly mountings	32
3 Overview of fitting locations	35
13 - Crankshaft group	40
1 Dismantling and assembling engine	40
1.1 Poly V-belt - exploded view	40
1.2 Removing and installing poly V-belt	41
1.3 Removing and installing crankshaft pulley	43
1.4 Removing and installing bracket for ancillaries	44
2 Sealing flanges and flywheel/drive plate - exploded view	49
2.1 Renewing crankshaft oil seal - pulley end	51
2.2 Removing and installing sealing flange (front), engine code AXW, BLX, BHD, BLY, BLR, BMB	53
2.3 Removing and installing sealing flange (front), engine code BVY, BVZ	56
2.4 Removing and installing flywheel/drive plate	59
2.5 Removing and installing crankshaft sealing flange (gearbox end), engine code AXW, BLX, BHD, BLY, BLR, BMB	62
2.6 Removing and installing crankshaft sealing flange (gearbox end), engine code BVY, BVZ	63
3 Crankshaft - exploded view	68
3.1 Identification of top crankshaft bearings	69
3.2 Crankshaft dimensions	69
3.3 Removing and installing chain sprocket	70

4	Pistons and conrods	72
4.1	Pistons and conrods - exploded view	72
4.2	Removing and installing pistons	73
4.3	Checking piston, piston rings and cylinder bore	74
4.4	Measuring axial clearance of conrods	76
4.5	Measuring radial clearance of conrods	77
15 - Cylinder head, valve gear	78	
1	Toothed belt drive	78
1.1	Toothed belt drive - exploded view, engine code AXW, BMB, BHD	78
1.2	Removing and installing toothed belt, engine code AXW, BMB, BHD	81
1.3	Toothed belt drive - exploded view, engine code BLX, BLY, BLR, BVY and BVZ	90
1.4	Removing and installing toothed belt, engine code BLX, BLY, BLR, BVY, BVZ	92
2	Removing and installing cylinder head	101
2.1	Cylinder head - exploded view	101
2.2	Removing and installing camshaft control valve 1 N205	103
2.3	Removing and installing cylinder head cover	105
2.4	Removing cylinder head	108
2.5	Checking compression	125
3	Servicing valve gear	129
3.1	Cylinder head, camshafts - exploded view	129
3.2	Removing and installing camshaft adjuster	131
3.3	Removing and installing camshafts	135
3.4	Renewing valve stem oil seals with cylinder head installed	142
3.5	Renewing valve stem oil seals with cylinder head removed	146
3.6	Checking valve guides	149
3.7	Renewing exhaust camshaft oil seal	149
17 - Lubrication	157	
1	Removing and installing parts of lubrication system	157
1.1	Part I: Sump, balance shaft assembly - exploded view	157
1.2	Balance shaft assembly with oil pump - exploded view	159
1.3	Removing and installing sump with balance shaft assembly and oil pump, engine code AXW, BLX, BHD, BLY, BLR, BMB	162
1.4	Removing and installing sump, engine code BVY, BVZ	166
1.5	Removing and installing oil pump with balance shaft assembly, engine code BVY, BVZ	170
1.6	Pre-tensioning chain tensioner	173
1.7	Oil filter bracket - exploded view	173
1.8	Draining oil filter housing	176
1.9	Checking oil pressure and oil pressure switch	176
1.10	Removing and installing oil cooler	178
1.11	Removing and installing oil filter bracket	181
19 - Cooling	186	
1	Removing and installing parts of cooling system	186
1.1	Connection diagram for coolant hoses without auxiliary heater, engine code AXW, BLX, BHD, BLY, BLR, BMB	186
1.2	Connection diagram for coolant hoses with auxiliary heater, engine code AXW, BLX, BHD, BLY, BLR, BMB	188
1.3	Connection diagram for coolant hoses, engine code BVY, BVZ	189
1.4	Draining and filling cooling system	190
1.5	Parts of cooling system (on engine) - exploded view, engine code AXW, BLX, BHD, BLY, BLR, BMB	194
1.6	Parts of cooling system (on engine) - exploded view, engine code BVY, BVZ	196
1.7	Coolant distributor housing with thermostat - exploded view, engine code AXW, BLX, BHD, BLY, BLR, BMB	197

1.8	Removing and installing map-controlled engine cooling thermostat F265 , engine code AXW, BLX, BHD, BLY, BLR, BMB	197
1.9	Checking map-controlled engine cooling thermostat F265 , engine code AXW, BLX, BHD, BLY, BLR, BMB	204
1.10	Removing and installing coolant distributor housing with thermostat, engine code BVY, BVZ	205
1.11	Removing and installing coolant pump	206
1.12	Removing and installing coolant pipe	210
1.13	Parts of cooling system (on body) - exploded view	213
1.14	Removing and installing radiator fan V7 and radiator fan 2 V177	215
1.15	Removing and installing radiator	216
1.16	Checking cooling system for leaks	219
26 - Exhaust system	221
1	Removing and installing parts of exhaust system	221
1.1	Exhaust manifold with catalytic converter - exploded view, engine code AXW, BLX, BHD, BLR, BMB	221
1.2	Exhaust manifold with catalytic converter - exploded view, engine code BVY	223
1.3	Exhaust manifold - exploded view, engine code BLY, BVZ	224
1.4	Removing and installing exhaust manifold	224
1.5	Exhaust system - exploded view, engine code AXW, BLX	229
1.6	Exhaust system - exploded view, engine code BLR, BVY	233
1.7	Exhaust system - exploded view, engine code BLY, BVZ, BMB, BHD	235
1.8	Removing and installing front exhaust pipe with catalytic converter	237
1.9	Separating centre and rear silencers	239
1.10	Stress-free alignment of exhaust system	240
1.11	Checking exhaust system for leaks	241
2	Exhaust gas recirculation system, engine code AXW, BLX, BLR, BVY	242
2.1	Exhaust gas recirculation system - exploded view	242
2.2	Exhaust gas recirculation valve N18 with exhaust gas recirculation potentiometer G212	243