

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Procedure before opening high-pressure section of injection system	3
3.3 Working on the cooling system	4
3.4 Using testers and measuring instruments during a road test	4
3.5 Working on the exhaust system	4
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
4.2 Checking fuel system for leaks	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion	5
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Checking vacuum system	6
4.7 Installing radiators, condensers and charge air coolers	7
10 - Removing and installing engine	8
1 Removing and installing engine, detaching from gearbox	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	21
1.3 Securing engine to assembly stand	21
1.4 Installing engine	23
2 Assembly mountings	26
2.1 Exploded view - assembly mountings	26
2.2 Checking adjustment of assembly mountings (engine/gearbox mountings)	27
2.3 Adjusting assembly mountings	28
13 - Crankshaft group	31
1 Cylinder block (pulley end)	31
1.1 Exploded view - poly V-belt, bracket for ancillaries	31
1.2 Removing and installing poly V-belt	32
1.3 Removing and installing bracket for ancillaries	34
1.4 Removing and installing vibration damper	37
1.5 Front sealing flange - exploded view	38
1.6 Renewing crankshaft oil seal - pulley end	40
1.7 Removing and installing sealing flange (front)	42
2 Cylinder block (gearbox end)	47
2.1 Rear sealing flange and dual-mass flywheel - exploded view	47
2.2 Removing and installing dual-mass flywheel	48
2.3 Removing and installing sealing flange (rear)	49
3 Crankshaft	52
3.1 Exploded view - crankshaft	52
3.2 Crankshaft dimensions	54
3.3 Measuring axial clearance of crankshaft	54
3.4 Measuring radial clearance of crankshaft	54
3.5 Extracting and driving in needle bearing for crankshaft	55
3.6 Removing and installing chain sprocket	56
4 Exploded view - pistons and conrods	58
4.1 Piston and cylinder dimensions	60



15 - Cylinder head, valve gear	61
1 Toothed belt drive	61
1.1 Toothed belt drive - exploded view (vehicles without separate toothed belt covers)	61
1.2 Removing and installing toothed belt (vehicles without separate toothed belt covers)	64
1.3 Toothed belt drive - exploded view (vehicles with separate toothed belt covers)	72
1.4 Removing and installing toothed belt (vehicles with separate toothed belt covers)	75
2 Cylinder head	84
2.1 Cylinder head - exploded view	84
2.2 Removing and installing camshaft control valve 1 N205	86
2.3 Removing and installing cylinder head cover	88
2.4 Removing and installing cylinder head	90
2.5 Checking compression	100
3 Valve gear	103
3.1 Exploded view - valve gear	103
3.2 Removing and installing camshaft adjuster	105
3.3 Removing and installing camshafts	108
3.4 Checking axial clearance of camshafts	112
3.5 Renewing valve stem oil seals with cylinder head installed	113
3.6 Renewing valve stem oil seals with cylinder head removed	118
3.7 Checking valve guides	121
3.8 Renewing exhaust camshaft oil seal	121
17 - Lubrication	126
1 Oil pump and sump	126
1.1 Sump - exploded view	126
1.2 Removing and installing oil level and oil temperature sender G266	127
1.3 Removing and installing sump	128
1.4 Balance shaft assembly with oil pump - exploded view	131
1.5 Removing and installing balance shaft assembly with oil pump	133
2 Oil filter bracket and oil cooler	138
2.1 Exploded view - oil filter bracket	138
2.2 Draining oil filter housing	139
2.3 Removing and installing oil cooler	140
2.4 Removing and installing oil filter bracket	142
2.5 Checking oil pressure and oil pressure switch	145
2.6 Removing and installing oil pressure switch F1	147
2.7 Checking oil pressure and oil pressure switch (1-pin oil pressure switch)	148
2.8 Checking oil pressure and oil pressure switch (2-pin oil pressure switch)	150
2.9 Checking oil pressure	151
19 - Cooling	153
1 Parts of cooling system (on engine)	153
1.1 Cooling system components (on engine) - exploded view	153
1.2 Exploded view - continued coolant circulation pump V51	155
1.3 Connection diagram - coolant hoses	156
1.4 Draining and filling cooling system	157
1.5 Checking cooling system for leaks	160
1.6 Removing and installing coolant pipes	162
1.7 Removing and installing coolant distributor housing with map-controlled engine cooling thermostat F265	164
1.8 Removing and installing coolant pump	165
2 Parts of cooling system (on body)	167
2.1 Exploded view - radiator and radiator fans	167
2.2 Removing and installing radiator	168

2.3	Removing and installing radiator cowl	171
2.4	Removing and installing radiator fan V7 and radiator fan 2 V177	172
21	Turbocharging/supercharging	173
1	Turbocharger with charge air system, engine codes AXX, BPY, BWA	173
1.1	Fitting hose connections with plug-in connectors - vehicles with engine codes AXX, BPY, BWA	173
1.2	Turbocharger - exploded view, vehicles with engine codes AXX, BPY, BWA	174
1.3	Removing and installing turbocharger, vehicles with engine codes AXX, BPY, BWA	178
1.4	Checking vacuum unit for turbocharger, engines with code letters AXX, BPY, BWA	185
1.5	Removing and installing vacuum unit for turbocharger	186
1.6	Adjusting vacuum unit for turbocharger, engines with code letters AXX, BPY, BWA	187
1.7	Charge air cooler - exploded view, engine codes AXX, BPY, BWA	192
1.8	Diagram of turbocharger system, engines with code letters AXX, BPY, BWA	193
1.9	Removing and installing charge air cooler - vehicles with engine codes AXX, BPY and BWA	193
1.10	Checking charge air system for leaks, vehicles with engine codes AXX, BPY, BWA	195
2	Turbocharger with charge air system, engines with code letters BHZ, BZC, CDLA, CDLC	198
2.1	Turbocharger - exploded view, engines with code letters BHZ, BZC, CDLA, CDLC	198
2.2	Removing and installing turbocharger, engines with code letters BHZ, BZC, CDLA, CDLC	202
2.3	Charge air system - exploded view, engines with code letters BHZ, BZC, CDLA, CDLC	208
2.4	Diagram of turbocharger system, engines with code letters BHZ, BZC, CDLA, CDLC	211
2.5	Removing and installing charge air cooler, engines with code letters BHZ, BZC, CDLA, CDLC	211
2.6	Checking charge air system for leaks, engines with code letters BHZ, BZC, CDLA, CDLC	213
26	Exhaust system	216
1	Exhaust system, engines with code letters AXX, BPY, BWA	216
1.1	Exhaust system - exploded view, engines with code letters AXX, BPY, BWA	216
1.2	Removing and installing front exhaust pipe with catalytic converters and front silencer, engines with code letters AXX, BPY, BWA	218
1.3	Separating centre and rear silencers, engines with code letters AXX, BPY, BWA	221
1.4	Stress-free alignment of exhaust system, vehicles with engine codes AXX, BPY, BWA	221
1.5	Checking exhaust system for leaks, vehicles with engine codes AXX, BPY, BWA	222
2	Exhaust system, engines with code letters BHZ, BZC, CDLA, CDLC	223
2.1	Exhaust system - exploded view, engines with code letters BHZ, BZC, CDLA, CDLC	223
2.2	Removing and installing front exhaust pipe with catalytic converter and front silencer, engines with code letters BHZ, BZC, CDLA, CDLC	225
2.3	Stress-free alignment of exhaust system, engines with code letters BHZ, BZC, CDLA, CDLC	227
2.4	Checking exhaust system for leaks, engines with code letters BHZ, BZC, CDLA, CDLC	228
3	Exhaust manifold	229