

## Contents

<b>23 - Mixture preparation - injection</b>	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions for vehicles with start/stop system	1
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on the injection and glow plug system	3
1.5 Safety precautions when working on the exhaust system	4
1.6 Checking vacuum system	4
<b>2 Overview of fitting locations - injection system</b>	<b>5</b>
<b>3 Overview - fuel system</b>	<b>15</b>
3.1 Conversion from 0.5 bar low-pressure fuel system to 6.0 bar low-pressure fuel system	17
<b>4 Filling and bleeding fuel system</b>	<b>19</b>
<b>5 Air cleaner</b>	<b>20</b>
5.1 Exploded view - air cleaner	20
5.2 Removing and installing engine cover panel	21
5.3 Removing and installing air filter element	22
5.4 Removing air cleaner (bottom section)	23
<b>6 Exploded view - intake manifold</b>	<b>25</b>
6.1 Exploded view - intake manifold, vehicles with intake manifold flap V157	25
6.2 Exploded view - intake manifold, vehicles without intake manifold flap V157	26
6.3 Removing and installing intake manifold	27
<b>7 Fuel rail and injectors</b>	<b>33</b>
7.1 Exploded view - fuel rail and injectors	33
7.2 Removing and installing fuel rail	36
7.3 Exploded view - injectors with clamping piece	40
7.4 Checking injectors	41
7.5 Performing adaption of correction values for injectors	42
7.6 Checking for injectors sticking open	42
7.7 Checking return flow rate of injectors with engine running	44
7.8 Checking return flow rate of injectors at starter cranking speed	47
7.9 Removing and installing injectors	49
7.10 Checking pressure retention valve in fuel return line	55
7.11 Installing high-pressure pipes	56
7.12 Installing fuel return lines	59
<b>8 High-pressure pump</b>	<b>61</b>
8.1 Exploded view - high-pressure pump	61
8.2 Removing and installing high-pressure pump	62
8.3 Performing first fuel filling after installing high-pressure pump	65
<b>9 Senders and sensors</b>	<b>67</b>
9.1 Removing and installing air mass meter G70	67
9.2 Removing and installing throttle valve module J338	67
9.3 Checking fuel pressure regulating valve N276	69
9.4 Removing and installing fuel pressure regulating valve N276	70
9.5 Removing and installing fuel pressure sender G247	72
9.6 Checking fuel pump delivery rate	75
9.7 Checking for leaks in the fuel system	76
<b>10 Lambda probes</b>	<b>77</b>
10.1 Exploded view - Lambda probe and exhaust gas temperature sensors	77
10.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	78
10.3 Removing and installing exhaust gas pressure sensor 1 G450	80
<b>11 Engine control unit</b>	<b>81</b>



11.1	Wiring and component check with test box V.A.G 1598/42	81
11.2	Renewing engine control unit J623	83
<b>28</b>	<b>Glow plug system</b>	<b>87</b>
<b>1</b>	<b>Glow plug system</b>	<b>87</b>
1.1	Exploded view - glow plug system	87
1.2	Checking glow plug system	88
1.3	Removing and installing glow plugs	88
1.4	Removing and installing Hall sender G40	90
1.5	Removing and installing engine speed sender G28	91