

## Contents

<b>23</b>	<b>Mixture preparation - injection</b>	<b>1</b>
1	<b>Servicing diesel direct injection system</b>	<b>1</b>
1.1	Safety precautions	1
1.2	Rules for cleanliness	1
1.3	Overview of fitting locations	2
1.4	Exploded view - air cleaner	8
1.5	Removing and installing air filter element	9
1.6	Removing and installing air mass meter G70	11
1.7	Exploded view - intake manifold	12
1.8	Removing and installing intake manifold flap motor V157	14
1.9	Removing and installing intake manifold	15
1.10	Removing and installing engine speed sender G28	19
1.11	Removing and installing sender wheel for engine speed sender G28	20
1.12	Servicing unit injector	21
1.13	Removing and installing unit injector	22
1.14	Renewing O-rings for unit injector	25
1.15	Removing and installing electrical wiring harness for unit injectors	27
1.16	Wiring and component check with test box V.A.G 1598/42	30
1.17	Removing and installing diesel direct injection system control unit J248	31
<b>28</b>	<b>Glow plug system</b>	<b>35</b>
1	<b>Glow plug system</b>	<b>35</b>
1.1	Removing and installing glow plugs	35
1.2	Removing and installing automatic glow period control unit J179	35