

## Contents

<b>23 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test .....	1
1.2 Safety precautions for vehicles with start/stop system .....	1
1.3 Safety precautions when working on the fuel system .....	2
1.4 Safety precautions when working on the injection and glow plug system .....	3
1.5 Safety precautions when working on the exhaust system .....	4
1.6 Checking vacuum system .....	4
<b>2 Overview of fitting locations - injection system</b> .....	<b>6</b>
<b>3 System layout</b> .....	<b>19</b>
<b>4 Assembly overview - fuel system</b> .....	<b>21</b>
<b>5 Filling and bleeding fuel system</b> .....	<b>25</b>
<b>6 Checking fuel system for leaks</b> .....	<b>26</b>
<b>7 Air filter</b> .....	<b>27</b>
7.1 Assembly overview - air filter .....	27
7.2 Removing and installing engine cover panel .....	29
7.3 Removing and installing air filter element .....	29
7.4 Removing lower part of air filter .....	30
<b>8 Intake manifold</b> .....	<b>32</b>
8.1 Assembly overview - intake manifold with attached components .....	32
8.2 Removing and installing intake manifold .....	34
8.3 Removing and installing fuel rail .....	39
8.4 Removing and installing intake manifold flap motor V157 .....	42
8.5 Removing and installing throttle valve module J338 .....	45
<b>9 High-pressure pump</b> .....	<b>48</b>
9.1 Removing and installing high-pressure pump .....	48
9.2 Checking fuel pressure regulating valve N276 for dirt/swarf if high-pressure pump is defective .....	49
<b>10 Injectors</b> .....	<b>51</b>
10.1 Checking injectors .....	51
10.2 Performing adaptation of correction values for injectors .....	51
10.3 Checking for injectors sticking open .....	52
10.4 Checking return flow rate of injectors with engine running .....	53
10.5 Checking return flow rate of injectors at starter cranking speed .....	56
10.6 Removing and installing injectors .....	58
<b>11 Senders and sensors</b> .....	<b>65</b>
11.1 Removing and installing air mass meter G70 .....	65
11.2 Installing high-pressure pipes .....	65
11.3 Checking pressure retention valve in fuel return line .....	67
11.4 Checking fuel pressure regulating valve N276 .....	69
11.5 Checking fuel pressure (low pressure) system .....	70
11.6 Checking delivery rate of fuel pumps .....	72
11.7 Removing and installing fuel pressure regulating valve N276 .....	73
11.8 Removing and installing fuel pressure sender G247 .....	76
<b>12 Lambda probe and exhaust gas temperature sensors (CBAA, CBAB, CBBB)</b> .....	<b>80</b>
12.1 Assembly overview - Lambda probe and exhaust gas temperature sensors .....	80
12.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19 .....	81
12.3 Removing and installing exhaust gas pressure sensor 1 G450 .....	83
<b>13 Lambda probe and exhaust gas temperature sensors (CBEA)</b> .....	<b>85</b>
13.1 Assembly overview - Lambda probe and exhaust gas temperature sensors .....	85
13.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19 .....	88



13.3	Removing and installing Lambda probe after catalytic converter G130 with Lambda probe 1 heater after catalytic converter Z29 .....	89
13.4	Removing and installing pressure differential sender G505 .....	91
13.5	Removing and installing exhaust gas pressure sensor 1 G450 .....	92
13.6	Removing and installing control pipe for pressure sensors .....	93
13.7	Removing and installing control pipe for exhaust gas pressure sensor 1 G450 .....	96
<b>14</b>	<b>Engine control unit .....</b>	<b>99</b>
14.1	Wiring and component check with test box V.A.G 1598/42 .....	99
14.2	Renewing engine control unit J623 .....	101
<b>28</b>	<b>- Glow plug system .....</b>	<b>105</b>
<b>1</b>	<b>.....</b>	<b>105</b>
1.1	Removing and installing glow plugs .....	106
1.2	Removing and installing automatic glow period control unit J179 .....	109
1.3	Removing and installing Hall sender G40 .....	110
1.4	Removing and installing engine speed sender G28 .....	111