

Contents

23	Mixture preparation - injection	1
1	Servicing diesel direct injection system	1
1.1	Safety precautions when working on the fuel supply system	1
1.2	Safety precautions when using testers and measuring instruments during a road test	2
1.3	Safety precautions when working on the cooling system	2
1.4	Safety precautions when working on the exhaust system	2
1.5	Rules for cleanliness	3
1.6	Installing radiators and condensers	3
1.7	Overview of fitting locations (AZV, BKD)	3
1.8	Overview of fitting locations (BMN, BUY)	9
1.9	Air cleaner - exploded view	17
1.10	Removing and installing air filter element	18
1.11	Removing and installing air mass meter G70	21
1.12	Intake manifold for vehicles with engine codes AZV, BKD - exploded view	22
1.13	Removing and installing intake manifold flap motor V157 - vehicles with engine codes AZV, BKD	24
1.14	Removing and installing intake manifold - vehicles with engine codes AZV, BKD	25
1.15	Intake manifold for vehicles with engine codes BMN, BUY - exploded view	26
1.16	Removing and installing intake manifold flap motor V157 - vehicles with engine codes BMN, BUY	27
1.17	Removing and installing intake manifold - vehicles with engine codes BMN, BUY	28
1.18	Removing and installing engine speed sender G28	29
1.19	Removing and installing sender wheel for engine speed sender G28	30
1.20	Removing and installing charge pressure sender G31 with intake air temperature sender G42	30
1.21	Servicing unit injectors	31
1.22	Removing and installing unit injectors	33
1.23	Renewing O-rings for unit injectors	38
1.24	Cleaning unit injectors (BMN, BUY)	40
1.25	Electrical wiring harness for unit injectors and glow plugs - exploded view	42
1.26	Removing and installing electrical wiring harness for unit injectors and glow plugs	43
1.27	Wiring and component check with test box V.A.G 1598/42	46
1.28	Removing and installing engine control unit	47
1.29	Removing and installing Lambda probe G39 with Lambda probe heater Z19	49
1.30	Removing and installing exhaust gas pressure sensor 1 G450	50
28	Glow plug system	52
1	Glow plug system	52
1.1	Removing and installing glow plugs	52
1.2	Removing and installing metal glow plugs	55
1.3	Removing and installing automatic glow period control unit J179	56
1.4	Removing and installing engine speed sender G28	58