

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
2 General repair instructions	2
2.1 Rules for cleanliness	2
2.2 Checking for leaks in the fuel system	2
2.3 Contact corrosion!	2
3 Safety precautions	3
10 - Removing and installing engine	5
1 Removing and installing engine	5
1.1 Removing engine	5
1.2 Separating engine and gearbox	19
1.3 Securing engine to assembly stand	19
1.4 Installing engine	21
2 Assembly mountings	25
2.1 Checking adjustment of assembly mountings (engine/gearbox mountings)	25
2.2 Adjusting assembly mountings	25
2.3 Tightening torques for engine support	27
13 - Crankshaft group	29
1 Dismantling and assembling engine	29
1.1 Poly V-belt drive - exploded view	29
1.2 Removing and installing poly V-belt	30
1.3 Removing and installing vibration damper	31
1.4 Removing and installing bracket for ancillaries	34
1.5 Toothed belt drive - exploded view	38
1.6 Removing and installing toothed belt - vehicles up to approx. 05.2005	41
1.7 Removing and installing toothed belt - vehicles from approx. 06.2005 onwards	53
2 Removing and installing sealing flanges and dual-mass flywheel	63
2.1 Sealing flanges and dual-mass flywheel - exploded view	63
2.2 Renewing crankshaft oil seal (pulley end)	64
2.3 Removing and installing sealing flange, pulley end	66
2.4 Renewing sealing flange (flywheel end)	69
2.5 Removing and installing dual-mass flywheel	77
3 Removing and installing crankshaft	79
3.1 Crankshaft dimensions	80
3.2 Removing and installing drive chain sprocket	80
4 Dismantling and assembling pistons and conrods	82
4.1 Pistons and conrods - exploded view	82
4.2 Checking piston projection at TDC	85
4.3 Piston and cylinder dimensions	87
15 - Cylinder head, valve gear	88
1 Removing and installing cylinder head	88
1.1 Cylinder head - exploded view	88
1.2 Removing and installing cylinder head cover	90
1.3 Removing cylinder head - vehicles up to approx. 05.2005	93
1.4 Removing cylinder head - vehicles from approx. 06.2005 onwards	110
1.5 Installing cylinder head	126
1.6 Checking compression	130



2	Servicing valve gear	133
2.1	Valve gear - exploded view	133
2.2	Checking axial clearance of camshaft	135
2.3	Renewing camshaft oil seal	136
2.4	Removing and installing camshaft	139
2.5	Checking hydraulic bucket tappets	144
2.6	Renewing valve stem oil seals	145
2.7	Valve dimensions	149
2.8	Checking valve guides	149
2.9	Machining valve seats	150
2.10	Checking valves	152
17	- Lubrication	153
1	Removing and installing parts of lubrication system	153
1.1	Sump, oil pump - exploded view	153
1.2	Removing and installing sump	155
1.3	Removing and installing oil pump	159
1.4	Oil filter bracket with oil cooler - exploded view	159
1.5	Removing and installing oil filter bracket with oil cooler	161
1.6	Removing and installing oil pressure switch F1	165
1.7	Checking oil pressure and oil pressure switch	166
1.8	Engine oil	168
1.9	Checking oil level	168
19	- Cooling	170
1	Removing and installing parts of cooling system	170
1.1	Diagram of coolant hose connections	170
1.2	Draining and filling cooling system	172
1.3	Removing and installing coolant pump	176
1.4	Removing and installing thermostat	177
1.5	Checking thermostat	181
1.6	Removing and installing coolant pipe	181
1.7	Radiator and radiator fan - exploded view of components	187
1.8	Removing and installing radiator	188
1.9	Checking cooling system for leaks	191
1.10	Removing and installing electrical radiator fan V7 and radiator fan 2 V177	193
21	- Turbocharging/supercharging	196
1	Servicing charge air system with turbocharger	196
1.1	Removing and installing air pipes and hoses with plug-in connectors	196
1.2	Hose connection diagram for charge pressure control	197
1.3	Connection diagram for solenoid valve block	198
1.4	Turbocharger - exploded view	198
1.5	Removing and installing turbocharger	199
1.6	Charge air cooler - exploded view	205
1.7	Removing and installing parts of charge air cooler	206
1.8	Removing and installing charge air cooler	207
26	- Exhaust system	208
1	Removing and installing parts of exhaust system	208
1.1	Exhaust system - exploded view	208
1.2	Separating centre and rear silencers	210
1.3	Removing and installing front exhaust pipe with catalytic converter	211
1.4	Stress-free alignment of exhaust system	212
1.5	Aligning tailpipes	213
1.6	Checking exhaust system for leaks	213

2	Exhaust gas recirculation system	214
2.1	Hose connection diagram for exhaust gas recirculation	214
2.2	Connection diagram for solenoid valve block	215
2.3	Checking mechanical exhaust gas recirculation valve	215
2.4	Cooling for exhaust gas recirculation	216
2.5	Checking exhaust gas recirculation change-over	216
2.6	Removing and installing exhaust gas recirculation cooler	217