

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number</b>	<b>1</b>
<b>2 Engine data</b>	<b>2</b>
<b>3 General repair instructions</b>	<b>3</b>
3.1 Safety precautions when working on TDI engines	3
3.2 Handling ceramic glow plugs	5
3.3 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
3.4 Checking for leaks in the fuel system	6
3.5 Foreign particles in engine	6
3.6 Contact corrosion!	6
3.7 Routing and attachment of pipes, hoses and wiring	7
3.8 Installing radiators, condensers and charge air coolers	7
3.9 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing engine</b>	<b>8</b>
<b>2 Separating engine from manual gearbox</b>	<b>28</b>
<b>3 Separating engine and dual clutch gearbox</b>	<b>30</b>
<b>4 Securing engine to engine and gearbox support</b>	<b>32</b>
<b>5 Installing engine</b>	<b>34</b>
<b>6 Assembly mountings</b>	<b>39</b>
6.1 Assembly mountings - exploded view	39
6.2 Checking adjustment of assembly mountings (engine/gearbox mountings)	41
6.3 Adjusting assembly mountings	41
<b>13 - Crankshaft group</b>	<b>46</b>
<b>1 Cylinder block (pulley end)</b>	<b>46</b>
1.1 Poly V-belt drive - exploded view	46
1.2 Removing and installing poly V-belt - vehicles with tensioner	47
1.3 Removing and installing poly V-belt - vehicles without tensioner	50
1.4 Removing and installing vibration damper	50
1.5 Removing and installing bracket for ancillaries	52
1.6 Toothed belt drive - exploded view	54
1.7 Removing and installing toothed belt	57
<b>2 Sealing flanges and dual-mass flywheel</b>	<b>67</b>
2.1 Sealing flanges and dual-mass flywheel - exploded view	67
2.2 Renewing crankshaft oil seal	68
2.3 Removing and installing sealing flange (pulley end)	70
2.4 Renewing sealing flange (flywheel end)	72
2.5 Removing and installing dual-mass flywheel	80
<b>3 Crankshaft</b>	<b>82</b>
3.1 Crankshaft - exploded view	82
3.2 Extracting and driving in needle bearing for crankshaft	83
3.3 Crankshaft dimensions	84
3.4 Measuring axial clearance of crankshaft	84
3.5 Measuring radial clearance of crankshaft	85
3.6 Removing and installing chain sprocket	86
<b>4 Pistons and conrods</b>	<b>88</b>
4.1 Pistons and conrods - exploded view	88
4.2 Measuring piston projection at TDC	92



4.3	Piston and cylinder dimensions .....	93
4.4	Measuring radial clearance of conrods .....	93
<b>15</b>	<b>- Cylinder head, valve gear .....</b>	<b>95</b>
<b>1</b>	<b>Glow plugs .....</b>	<b>95</b>
1.1	Handling ceramic glow plugs .....	96
<b>2</b>	<b>Cylinder head .....</b>	<b>97</b>
2.1	Cylinder head - exploded view .....	97
2.2	Removing and installing cylinder head cover .....	100
2.3	Removing cylinder head - vehicles with large engine support .....	102
2.4	Removing cylinder head - vehicles with small engine support .....	119
2.5	Installing cylinder head .....	136
2.6	Checking compression .....	141
<b>3</b>	<b>Valve gear .....</b>	<b>142</b>
3.1	Valve gear - exploded view .....	142
3.2	Measuring axial clearance of camshaft .....	144
3.3	Measuring radial clearance of camshaft .....	145
3.4	Renewing camshaft oil seal .....	145
3.5	Removing and installing camshaft .....	148
3.6	Renewing valve stem oil seals with cylinder head installed .....	153
3.7	Renewing valve stem oil seals with cylinder head removed .....	158
3.8	Checking hydraulic bucket tappets .....	163
3.9	Valve dimensions .....	164
3.10	Checking valve guides .....	164
3.11	Checking valves .....	165
<b>17</b>	<b>- Lubrication .....</b>	<b>166</b>
<b>1</b>	<b>Lubrication system .....</b>	<b>166</b>
1.1	Sump, oil pump - exploded view .....	166
1.2	Removing and installing oil level and oil temperature sender G266 .....	168
1.3	Removing and installing sump .....	168
1.4	Removing and installing oil pump .....	171
1.5	Oil filter bracket and engine oil cooler - exploded view .....	171
1.6	Removing and installing oil filter bracket with engine oil cooler .....	173
1.7	Removing and installing oil pressure switch F1 .....	176
1.8	Checking oil pressure and oil pressure switch .....	177
1.9	Engine oil .....	179
1.10	Checking oil level .....	179
<b>19</b>	<b>- Cooling .....</b>	<b>180</b>
<b>1</b>	<b>Cooling system .....</b>	<b>180</b>
1.1	Diagram of coolant hose connections .....	180
1.2	Draining and filling cooling system .....	182
1.3	Removing and installing coolant pump .....	187
1.4	Removing and installing thermostat .....	187
1.5	Checking thermostat .....	189
1.6	Removing and installing coolant pipe .....	189
1.7	Radiator and radiator fans - exploded view .....	196
1.8	Removing and installing radiator .....	197
1.9	Removing and installing radiator fan V7 and radiator fan 2 V177 .....	202
1.10	Checking cooling system for leaks .....	205
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>208</b>
<b>1</b>	<b>Turbocharger and charge air cooler .....</b>	<b>208</b>
1.1	Turbocharger - exploded view .....	208
1.2	Removing and installing turbocharger .....	209

1.3	Renewing and adjusting vacuum unit for turbocharger - vehicles with engine code BLS from model year 2008 onwards only	210
1.4	Diagram of vacuum hose connections	218
1.5	Charge air cooling - exploded view	220
1.6	Removing and installing air pipes and hoses with plug-in connectors	220
1.7	Removing and installing charge air cooler	222
1.8	Checking charge air system for leaks	223
<b>26</b>	<b>Exhaust system</b>	<b>226</b>
<b>1</b>	<b>Exhaust system</b>	<b>226</b>
1.1	Exhaust system - exploded view	226
1.2	Separating centre and rear silencers	228
1.3	Removing and installing particulate filter	229
1.4	Stress-free alignment of exhaust system	235
1.5	Checking exhaust system for leaks	235
<b>2</b>	<b>Exhaust gas temperature control</b>	<b>236</b>
2.1	Removing and installing exhaust gas temperature sender 1 G235	236
2.2	Removing and installing temperature sender before particulate filter G506	239
2.3	Removing and installing temperature sender after particulate filter G527	241
<b>3</b>	<b>Exhaust gas recirculation system</b>	<b>244</b>
3.1	Exhaust gas recirculation system - exploded view	244
3.2	Removing and installing exhaust gas recirculation valve N18 with exhaust gas recirculation potentiometer G212	245
3.3	Exhaust gas recirculation cooler	246
3.4	Checking exhaust gas recirculation cooler change-over	247
3.5	Removing and installing exhaust gas recirculation cooler	248