

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Engine number</b> .....	<b>1</b>
<b>2 Engine data</b> .....	<b>2</b>
<b>3 Safety precautions</b> .....	<b>3</b>
3.1 Working on the fuel system .....	3
3.2 Working on the cooling system .....	4
3.3 Using testers and measuring instruments during a road test .....	4
3.4 Working on the exhaust system .....	4
<b>4 General repair instructions</b> .....	<b>5</b>
4.1 Different types of glow plugs .....	5
4.2 Handling ceramic glow plugs .....	5
4.3 Rules for cleanliness when working on fuel supply system, injection system and turbocharger .....	6
4.4 Checking vacuum system .....	6
4.5 Routing and attachment of pipes, hoses and wiring .....	7
4.6 Checking fuel system for leaks .....	7
4.7 Contact corrosion! .....	7
4.8 Installing radiators, condensers and charge air coolers .....	7
<b>10 - Removing and installing engine</b> .....	<b>8</b>
<b>1 Removing engine - vehicles with engine codes AZV, BKD</b> .....	<b>8</b>
<b>2 Removing engine - vehicles with front-wheel drive with engine codes BMN, BUY</b> .....	<b>29</b>
<b>3 Removing engine - vehicles with four-wheel drive with engine codes BMN, BUY</b> .....	<b>48</b>
<b>4 Separating engine from manual gearbox</b> .....	<b>69</b>
<b>5 Separating engine from direct shift gearbox</b> .....	<b>71</b>
<b>6 Securing engine to engine and gearbox support</b> .....	<b>73</b>
<b>7 Installing engine</b> .....	<b>75</b>
<b>8 Adjusting assembly mountings</b> .....	<b>80</b>
8.1 Checking adjustment .....	80
8.2 Adjusting assembly mountings .....	81
8.3 Tightening torques for engine support .....	84
<b>13 - Crankshaft group</b> .....	<b>85</b>
<b>1 Servicing work on pulley end</b> .....	<b>85</b>
1.1 Poly V-belt drive - exploded view .....	85
1.2 Removing and installing poly V-belt .....	86
1.3 Removing and installing vibration damper .....	89
1.4 Removing and installing bracket for ancillaries - vehicles with small engine support .....	90
1.5 Removing and installing bracket for ancillaries - vehicles with large engine support .....	93
1.6 Toothed belt drive - exploded view .....	97
1.7 Removing and installing toothed belt - vehicles with small engine support .....	102
1.8 Removing and installing toothed belt - vehicles with large engine support .....	116
<b>2 Removing and installing sealing flanges and dual-mass flywheel</b> .....	<b>127</b>
2.1 Sealing flanges and dual-mass flywheel - exploded view .....	127
2.2 Renewing crankshaft oil seal (pulley end) .....	128
2.3 Removing and installing sealing flange (pulley end) .....	130
2.4 Removing and installing dual-mass flywheel .....	133
2.5 Renewing sealing flange (gearbox end) .....	134
<b>3 Removing and installing crankshaft</b> .....	<b>143</b>
3.1 Crankshaft - exploded view .....	143
3.2 Crankshaft dimensions .....	144



3.3	Removing and installing drive chain sprocket .....	144
3.4	Extracting and driving in needle bearing for crankshaft .....	145
<b>4</b>	<b>Dismantling and assembling pistons and conrods .....</b>	<b>147</b>
4.1	Pistons and conrods - exploded view .....	147
4.2	Checking piston projection at TDC .....	150
4.3	Piston and cylinder dimensions .....	151
4.4	Measuring radial clearance of conrods .....	151
<b>15</b>	<b>Cylinder head, valve gear .....</b>	<b>152</b>
<b>1</b>	<b>Handling glow plugs .....</b>	<b>152</b>
1.1	Ceramic glow plugs .....	152
1.2	Handling ceramic glow plugs .....	153
<b>2</b>	<b>Removing and installing cylinder head .....</b>	<b>154</b>
2.1	Cylinder head - exploded view .....	154
2.2	Removing and installing cylinder head cover - vehicles with engine codes AZV, BKD .....	157
2.3	Removing and installing cylinder head cover - vehicles with engine codes BMN, BUY .....	160
2.4	Removing cylinder head - vehicles with small engine support .....	162
2.5	Removing cylinder head - vehicles with large engine support .....	180
2.6	Installing cylinder head .....	197
2.7	Checking compression .....	203
<b>3</b>	<b>Servicing valve gear .....</b>	<b>204</b>
3.1	Valve gear - exploded view .....	204
3.2	Checking axial clearance of camshafts .....	206
3.3	Renewing camshaft oil seals .....	207
3.4	Removing and installing camshafts .....	210
3.5	Removing and installing roller rocker fingers .....	217
3.6	Renewing valve stem oil seals with cylinder head installed .....	218
3.7	Renewing valve stem oil seals with cylinder head removed .....	221
3.8	Checking hydraulic tappets .....	226
3.9	Valve dimensions .....	227
3.10	Machining valve seats .....	227
3.11	Checking valve guides .....	227
3.12	Checking valves .....	228
<b>17</b>	<b>Lubrication .....</b>	<b>229</b>
<b>1</b>	<b>Removing and installing parts of lubrication system .....</b>	<b>229</b>
1.1	Sump, oil pump - exploded view .....	229
1.2	Removing and installing sump .....	231
1.3	Removing and installing oil pump .....	235
1.4	Oil filter bracket with oil cooler - exploded view .....	235
1.5	Removing and installing oil filter bracket with oil cooler .....	237
1.6	Checking oil pressure and oil pressure switch .....	241
1.7	Engine oil .....	244
1.8	Checking oil level .....	244
<b>19</b>	<b>Cooling .....</b>	<b>245</b>
<b>1</b>	<b>Removing and installing parts of cooling system .....</b>	<b>245</b>
1.1	Diagram of coolant hose connections .....	245
1.2	Draining and filling cooling system .....	248
1.3	Removing and installing coolant pump .....	254
1.4	Removing and installing thermostat .....	254
1.5	Checking thermostat .....	256
1.6	Removing and installing coolant pipe .....	256
1.7	Radiator and radiator fans - exploded view .....	258
1.8	Removing and installing radiator .....	259

1.9	Checking cooling system for leaks	264
1.10	Removing and installing radiator fan V7 and radiator fan 2 V177	266
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>269</b>
<b>1</b>	<b>Servicing charge air system with turbocharger</b>	<b>269</b>
1.1	Removing and installing air pipes and hoses with plug-in connectors	269
<b>2</b>	<b>Turbocharger and charge air cooling - vehicles with engine codes AZV, BKD</b>	<b>271</b>
2.1	Connection diagram for vacuum lines	271
2.2	Connection diagram for solenoid valve block	272
2.3	Connection diagram for vacuum hose connector	272
2.4	Turbocharger - exploded view	272
2.5	Removing and installing turbocharger	274
2.6	Charge air cooler - exploded view	279
2.7	Removing and installing charge air cooler	280
<b>3</b>	<b>Turbocharger and charge air cooling - vehicles with engine codes BMN, BUY</b>	<b>282</b>
3.1	Connection diagram for vacuum lines	282
3.2	Turbocharger - exploded view	283
3.3	Removing and installing turbocharger - vehicles with front-wheel drive	284
3.4	Removing and installing turbocharger - vehicles with four-wheel drive	292
3.5	Charge air cooler - exploded view	299
3.6	Removing and installing charge air cooler	300
<b>26</b>	<b>Exhaust system</b>	<b>302</b>
<b>1</b>	<b>Exhaust system on vehicles without particulate filter</b>	<b>302</b>
1.1	Exhaust system - exploded view	302
1.2	Removing and installing front exhaust pipe with catalytic converter	304
1.3	Separating centre and rear silencers	307
1.4	Stress-free alignment of exhaust system	308
1.5	Checking exhaust system for leaks	308
<b>2</b>	<b>Exhaust system on vehicles with front-wheel drive and particulate filter</b>	<b>310</b>
2.1	Exhaust system - exploded view	310
2.2	Removing and installing particulate filter	313
2.3	Separating centre and rear silencers	317
2.4	Stress-free alignment of exhaust system	318
2.5	Checking exhaust system for leaks	319
<b>3</b>	<b>Exhaust system on vehicles with four-wheel drive and particulate filter</b>	<b>320</b>
3.1	Exhaust system - exploded view	320
3.2	Removing and installing particulate filter	322
3.3	Stress-free alignment of exhaust system	331
3.4	Checking exhaust system for leaks	331
<b>4</b>	<b>Exhaust gas temperature control</b>	<b>332</b>
4.1	Removing and installing exhaust gas temperature sender 1 G235	332
4.2	Removing and installing temperature sender before particulate filter G506	334
4.3	Removing and installing temperature sender after particulate filter G527	335
<b>5</b>	<b>Exhaust gas recirculation system and cooling for exhaust gas recirculation system</b>	<b>338</b>
<b>6</b>	<b>Exhaust gas recirculation system - vehicles with engine codes AZV, BKD</b>	<b>339</b>
6.1	Connection diagram for vacuum lines	339
6.2	Connection diagram for solenoid valve block	340
6.3	Connection diagram for vacuum hose connector	340
6.4	Checking mechanical exhaust gas recirculation valve	340
6.5	Removing and installing mechanical exhaust gas recirculation valve	341
6.6	Exhaust gas recirculation cooler - exploded view	343
6.7	Checking exhaust gas recirculation cooler change-over	345
6.8	Removing and installing exhaust gas recirculation cooler	346



<b>7</b>	<b>Exhaust gas recirculation system - vehicles with engine codes BMN, BUY</b>	<b>349</b>
7.1	Connection diagram for vacuum lines	349
7.2	Removing and installing exhaust gas recirculation valve N18 with exhaust gas recirculation potentiometer G212	350
7.3	Exhaust gas recirculation cooler - exploded view	351
7.4	Checking exhaust gas recirculation cooler change-over	352
7.5	Removing and installing exhaust gas recirculation cooler	353