

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number/engine data</b>	<b>1</b>
<b>2 Safety precautions</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on the cooling system	3
2.3 Safety precautions when working on vehicles with start/stop system	3
2.4 Using testers and measuring instruments during a road test	3
2.5 Safety precautions when working on the exhaust system	4
<b>3 General repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 General repair instructions	5
3.3 Checking for leaks in the fuel system	6
3.4 Bolts/nuts	6
3.5 Identification plates	7
3.6 Use of impact wrenches	7
3.7 Foreign material in engine	8
3.8 Contact corrosion	8
3.9 Routing and attachment of pipes, hoses and wiring	8
3.10 Installing radiators, condensers and charge air coolers	8
3.11 Checking vacuum system	9
<b>10 - Removing and installing engine</b>	<b>10</b>
<b>1 Removing engine</b>	<b>10</b>
<b>2 Separating engine and manual gearbox</b>	<b>44</b>
<b>3 Separating engine and dual clutch gearbox</b>	<b>47</b>
<b>4 Securing engine to engine and gearbox support</b>	<b>50</b>
<b>5 Installing engine</b>	<b>52</b>
<b>6 Assembly mountings</b>	<b>58</b>
6.1 Assembly overview - assembly mountings	58
6.2 Removing and installing engine mountings	61
6.3 Removing and installing engine support	66
6.4 Checking adjustment of assembly mountings	69
6.5 Adjusting assembly mountings	71
<b>13 - Crankshaft group</b>	<b>78</b>
<b>1 Cylinder block (pulley end)</b>	<b>78</b>
1.1 Assembly overview - poly V-belt drive, vehicles without air conditioner compressor	78
1.2 Removing and installing poly V-belt - vehicles without air conditioner compressor	80
1.3 Assembly overview - poly V-belt drive, vehicles with air conditioner compressor and tensioner	81
1.4 Removing and installing poly V-belt - vehicles with air conditioner compressor and tensioner	84
1.5 Removing and installing tensioner for poly V-belt	86
1.6 Poly V-belt drive for vehicles with air conditioner compressor and tensioning roller - assembly overview	87
1.7 Removing and installing poly V-belt - vehicles with air conditioner compressor and tensioning roller	90
1.8 Removing and installing vibration damper	92
1.9 Removing and installing bracket for ancillaries	93
1.10 Assembly overview - sealing flange (pulley end)	96
1.11 Renewing crankshaft oil seal (pulley end)	97
1.12 Removing and installing sealing flange (pulley end)	99



<b>2</b>	<b>Cylinder block (gearbox end)</b>	<b>104</b>
2.1	Assembly overview - dual-mass flywheel and sealing flange (gearbox end)	104
2.2	Removing and installing dual-mass flywheel	105
2.3	Renewing sealing flange (gearbox end)	107
<b>3</b>	<b>Crankshaft</b>	<b>117</b>
3.1	Assembly overview - crankshaft	117
3.2	Crankshaft dimensions	118
3.3	Measuring axial clearance of crankshaft	119
3.4	Measuring radial clearance of crankshaft	120
3.5	Extracting and driving in needle bearing for crankshaft	120
3.6	Pulling spur gear off crankshaft and shrink-fitting new spur gear	122
<b>4</b>	<b>Pistons and conrods</b>	<b>127</b>
4.1	Assembly overview - pistons and conrods	127
4.2	Measuring piston projection at "TDC"	133
4.3	Piston and cylinder dimensions	135
4.4	Measuring radial clearance of conrods	135
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>137</b>
<b>1</b>	<b>Toothed belt drive</b>	<b>137</b>
1.1	Assembly overview - toothed belt	137
1.2	Removing and installing toothed belt	139
<b>2</b>	<b>Cylinder head</b>	<b>155</b>
2.1	Assembly overview - cylinder head cover	155
2.2	Removing and installing cylinder head cover	157
2.3	Renewing injector seals	160
2.4	Assembly overview - cylinder head	161
2.5	Removing and installing cylinder head	165
2.6	Checking compression	181
<b>3</b>	<b>Valve gear</b>	<b>183</b>
3.1	Assembly overview - valve gear	183
3.2	Measuring axial clearance of camshafts	185
3.3	Measuring radial clearance of camshafts	186
3.4	Renewing camshaft oil seal	187
3.5	Removing and installing camshafts	191
3.6	Renewing valve stem oil seals with cylinder head installed	199
3.7	Renewing valve stem oil seals with cylinder head removed	203
3.8	Valve dimensions	208
3.9	Reworking valve seats	208
3.10	Checking valve guides	208
3.11	Checking valves	209
<b>17</b>	<b>Lubrication</b>	<b>210</b>
<b>1</b>	<b>Oil pump, sump - engines with balance shaft module</b>	<b>210</b>
1.1	Assembly overview - oil pump, sump - engines with balance shaft module	210
1.2	Removing and installing oil level and oil temperature sender G266	214
1.3	Removing and installing sump	215
1.4	Removing and installing oil pump	222
1.5	Removing balance shaft module	223
1.6	Installing a new balance shaft module	224
1.7	Re-installing a used balance shaft module	228
<b>2</b>	<b>Assembly overview - oil pump, sump - engines without balance shaft module</b>	<b>231</b>
2.1	Assembly overview - oil pump, sump - engines without balance shaft module	231
2.2	Removing and installing oil level and oil temperature sender G266	233
2.3	Removing and installing sump	234
2.4	Removing and installing oil pump	241

<b>3</b>	<b>Oil filter bracket and engine oil cooler</b>	<b>243</b>
3.1	Assembly overview - oil filter bracket and engine oil cooler	243
3.2	Removing and installing oil filter bracket with engine oil cooler	245
3.3	Removing and installing oil pressure switch F1	249
3.4	Checking oil pressure switch F1	250
3.5	Checking oil pressure	252
3.6	Engine oil	253
3.7	Checking oil level	253
<b>19</b>	<b>Cooling</b>	<b>254</b>
<b>1</b>	<b>Cooling system</b>	<b>254</b>
1.1	Connection diagram - coolant hoses	254
1.2	Draining and filling cooling system	255
1.3	Checking cooling system for leaks	265
<b>2</b>	<b>Coolant pump and 4/2-way valve</b>	<b>269</b>
2.1	Coolant pump and 4/2-way valve - assembly overview	269
2.2	Removing and installing coolant pump	270
2.3	Removing and installing 4/2-way valve	270
2.4	Checking thermostat	276
<b>3</b>	<b>Coolant pipes, coolant temperature senders, coolant circulation pump</b>	<b>277</b>
3.1	Assembly overview - coolant pipes, coolant temperature senders, coolant circulation pump	277
3.2	Removing and installing coolant temperature sender G62	279
3.3	Removing and installing radiator outlet coolant temperature sender G83	282
3.4	Removing and installing pump for exhaust gas recirculation cooler V400	284
3.5	Removing and installing coolant pipe (front)	286
3.6	Removing and installing coolant pipe (top front)	291
3.7	Removing and installing coolant pipe (left-side)	293
3.8	Removing and installing coolant pipe (right-side)	296
<b>4</b>	<b>Radiator and radiator fans</b>	<b>300</b>
4.1	Assembly overview - radiator and radiator fans	300
4.2	Removing and installing radiator	302
4.3	Removing and installing radiator cowl	305
4.4	Removing and installing radiator fans V7 and V177	308
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>309</b>
<b>1</b>	<b>Turbocharger</b>	<b>309</b>
1.1	Diagram of vacuum connections	309
1.2	Exploded view - turbocharger	310
1.3	Removing and installing turbocharger	312
1.4	Renewing vacuum unit with position sender for charge pressure positioner G581	318
<b>2</b>	<b>Charge air cooling</b>	<b>326</b>
2.1	Assembly overview - charge air cooler	326
2.2	Removing and installing charge pressure sender G31 / intake air temperature sender G42	328
2.3	Removing and installing charge air cooler	329
2.4	Checking charge air system for leaks	330
<b>26</b>	<b>Exhaust system</b>	<b>334</b>
<b>1</b>	<b>Silencers</b>	<b>334</b>
1.1	Assembly overview - silencers	334
1.2	Removing and installing particulate filter	337
1.3	Renewing flexible joint	350
1.4	Stress-free alignment of exhaust system	352
1.5	Aligning tailpipes	353
1.6	Checking exhaust system for leaks	353



<b>2</b>	<b>Exhaust gas temperature regulation</b> .....	<b>354</b>
2.1	Assembly overview - exhaust gas temperature regulation .....	354
2.2	Removing and installing exhaust gas temperature sender 1 G235 .....	356
2.3	Removing and installing exhaust gas temperature sender 3 G495 .....	357
2.4	Removing and installing exhaust gas temperature sender 4 G648 .....	359
<b>3</b>	<b>Exhaust gas recirculation system</b> .....	<b>362</b>
3.1	Diagram of vacuum connections .....	362
3.2	Assembly overview - exhaust gas recirculation with exhaust gas recirculation cooler ....	362
3.3	Checking exhaust gas recirculation cooler change-over .....	364
3.4	Removing and installing exhaust gas recirculation cooler .....	365
3.5	Cleaning exhaust gas recirculation system .....	369