

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 General repair instructions</b> .....	<b>1</b>
1.1 Safety precautions when working on the fuel system .....	1
1.2 Safety precautions when working on vehicles with start/stop system .....	2
1.3 Safety precautions when using testers and measuring instruments during a road test .....	2
1.4 Rules for cleanliness .....	2
1.5 Test conditions .....	2
1.6 Contact corrosion .....	3
<b>20 - Fuel supply system</b> .....	<b>4</b>
<b>1 Fuel tank - rest-of-world vehicles with front-wheel drive</b> .....	<b>4</b>
1.1 Exploded view - fuel tank with attached components .....	4
1.2 Draining fuel tank .....	5
1.3 Removing and installing fuel tank with attached components .....	6
<b>2 Fuel tank - USA vehicles with front-wheel drive</b> .....	<b>12</b>
2.1 Exploded view - fuel tank with attached components .....	12
2.2 Draining fuel tank .....	13
2.3 Removing and installing fuel tank with attached components .....	15
<b>3 Fuel delivery unit and fuel gauge sender - all vehicles with front-wheel drive</b> .....	<b>20</b>
3.1 Exploded view - fuel delivery unit and fuel gauge sender .....	20
3.2 Checking fuel pump (electrical test) - all engines .....	21
3.3 Checking fuel pressure and residual pressure (up to high-pressure pump) .....	22
3.4 Checking fuel pump delivery rate - 1.6 ltr. engine (2 valve) .....	25
3.5 Checking fuel pump control unit J538 - FSI and TFSI engines .....	27
3.6 Checking fuel pump delivery rate - FSI and TFSI engines .....	27
3.7 Removing and installing fuel delivery unit .....	30
3.8 Adapting fuel pump after renewing fuel delivery unit - FSI and TFSI engines .....	33
3.9 Checking fuel gauge sender G .....	35
3.10 Removing and installing fuel gauge sender G - vehicles up to approx. 11.2004 .....	38
3.11 Removing and installing fuel gauge sender G - vehicles from approx. 11.2004 onwards ..	38
<b>4 Fuel tank - rest-of-world vehicles with four-wheel drive</b> .....	<b>41</b>
4.1 Exploded view - fuel tank with attached components .....	41
4.2 Draining fuel tank .....	42
4.3 Removing and installing fuel tank with attached components .....	43
<b>5 Fuel tank - USA vehicles with four-wheel drive</b> .....	<b>49</b>
5.1 Exploded view - fuel tank with attached components .....	49
5.2 Draining fuel tank .....	50
5.3 Removing and installing fuel tank with attached components .....	52
<b>6 Fuel delivery unit and fuel gauge senders - version 1 for vehicles with four-wheel drive</b> ..	<b>58</b>
6.1 Exploded view - fuel delivery unit and fuel gauge senders .....	58
6.2 Checking fuel pump (electrical test) - TFSI and 6-cylinder engines .....	60
6.3 Checking fuel pump control unit J538 - TFSI engine .....	61
6.4 Checking fuel pump delivery rate - TFSI engine .....	62
6.5 Checking fuel pump delivery rate - 6-cylinder engine .....	64
6.6 Removing and installing fuel delivery unit .....	66
6.7 Adapting fuel pump after renewing fuel delivery unit - TFSI engine .....	69
6.8 Checking fuel gauge sender G .....	71
6.9 Removing and installing fuel gauge sender G - vehicles up to approx. 11.2004 .....	75
6.10 Removing and installing fuel gauge sender G - vehicles from approx. 11.2004 onwards ..	76
6.11 Checking fuel gauge sender 2 G169 .....	76
6.12 Removing and installing fuel gauge sender 2 G169 .....	79
6.13 Suction-jet pump .....	82



6.14	Removing and installing suction-jet pump	82
<b>7</b>	<b>Fuel delivery unit and fuel gauge senders - version 2 for vehicles with four-wheel drive</b>	<b>88</b>
7.1	Exploded view - fuel delivery unit and fuel gauge senders	88
7.2	Checking fuel pump (electrical test) - TFSI and 6-cylinder engines	90
7.3	Checking fuel pump control unit J538 - TFSI engine	91
7.4	Removing and installing fuel pump control unit J538 - vehicles with 1.8 ltr./2.0 ltr. TFSI engine	92
7.5	Removing and installing fuel pump control unit J538 - vehicles with 2.5 ltr. TFSI engine	92
7.6	Checking fuel pump delivery rate - vehicles with 1.8 ltr./2.0 ltr. TFSI engine	94
7.7	Checking fuel pump delivery rate - vehicles with 2.5 ltr. TFSI engine	97
7.8	Checking fuel pump delivery rate - 6-cylinder engine	100
7.9	Removing and installing fuel delivery unit	102
7.10	Adapting fuel pump after renewing fuel delivery unit - TFSI engine	106
7.11	Checking fuel gauge sender G	108
7.12	Removing and installing fuel gauge sender G	110
7.13	Checking fuel gauge sender 2 G169	111
7.14	Removing and installing fuel gauge sender 2 G169	113
7.15	Suction-jet pump	116
7.16	Removing and installing suction-jet pump	116
<b>8</b>	<b>Fuel filter - all vehicles</b>	<b>123</b>
8.1	Exploded view - fuel filter with fuel pressure regulator, vehicles with MPI engine	123
8.2	Removing and installing fuel filter with fuel pressure regulator - vehicles with MPI engine	124
8.3	Exploded view - fuel filter for fuel system with return line, vehicles with FSI engine up to approx. 05.2004	124
8.4	Removing and installing fuel filter for fuel system with return line - vehicles with FSI engine up to approx. 05.2004	125
8.5	Exploded view - fuel filter with fuel pressure limiting valve, vehicles with FSI engine from approx. 06.2004 onwards and all vehicles with TFSI engine	126
8.6	Removing and installing fuel filter with fuel pressure limiting valve - vehicles with FSI engine from approx. 06.2004 onwards and all vehicles with TFSI engine	127
<b>9</b>	<b>Activated charcoal filter system - rest-of-world vehicles</b>	<b>128</b>
9.1	Exploded view - activated charcoal filter system	128
9.2	Removing and installing activated charcoal filter	128
<b>10</b>	<b>Activated charcoal filter system/tank leak diagnostic system - USA vehicles</b>	<b>130</b>
10.1	Exploded view - activated charcoal filter system/tank leak diagnostic system	130
10.2	Removing and installing activated charcoal filter	131
10.3	Routing of pipes/hoses for activated charcoal filter system/tank leak diagnostic system - TFSI engine	133
10.4	Routing of pipes/hoses for activated charcoal filter system/tank leak diagnostic system - 6-cylinder engine	135
10.5	Tank leak diagnostic system	136
10.6	Performing tank leak diagnosis	137
10.7	Removing and installing fuel system diagnostic pump V144	139
<b>11</b>	<b>Accelerator mechanism</b>	<b>140</b>
11.1	Exploded view - accelerator mechanism	140
11.2	Removing and installing accelerator pedal module with accelerator position sender	140
11.3	Adapting kick-down function - vehicles with automatic gearbox or dual clutch gearbox	142