

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	2
1.2 Safety precautions when working in the vicinity of high-voltage components	3
1.3 Safety precautions when working on vehicles with start/stop system	3
1.4 Safety precautions when using testers and measuring instruments during a road test	4
1.5 Safety precautions when working on pyrotechnic components	4
1.6 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	6
1.7 Additional safety regulations for side airbags	6
1.8 Additional safety regulations for curtain airbags	7
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbag	7
1.10 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	8
1.11 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	8
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	9
1.13 Checking airbag mounting components following an accident	10
1.14 Accident in which no airbag was triggered	11
1.15 Checking seat belts	11
1.16 Checking belt webbing	11
1.17 Checking automatic belt retractor (locking action)	12
1.18 Visual inspection of belt buckle	13
1.19 Functional check of belt buckle	13
1.20 Checking guide fittings and latch plate	13
1.21 Checking securing components and anchorage points following an accident	13
1.22 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	14
1.23 Checking child seat anchors following an accident	14
1.24 Safety regulations for automatic anti-dazzle interior mirror	15
2 Repair instructions	16
2.1 Contact corrosion	16
2.2 Routing and attachment of pipes, hoses and wiring	16
68 - Interior equipment	17
1 Storage compartments/covers/trim panels	17
1.1 Overview of fitting locations - storage compartments/covers/trim panels	17
1.2 Assembly overview - dash panel cover (driver side)	18
1.3 Assembly overview - steering column trim	19
1.4 Assembly overview - glove compartment	20
1.5 Removing and installing dash panel cover (driver side)	22
1.6 Removing and installing upper steering column trim	23
1.7 Removing and installing lower steering column trim	25
1.8 Removing and installing glove compartment opening mechanism	26
1.9 Removing and installing lock cylinder for glove compartment opening mechanism	27
1.10 Removing and installing glove compartment	29
1.11 Removing and installing glove compartment cover	32
1.12 Removing and installing restrictor for glove compartment cover	33
2 Equipment	34
2.1 Assembly overview - sun visors	34
2.2 Removing and installing sun visor	34
2.3 Removing and installing sun visor centre mount	36
2.4 Removing and installing grab handle	37



3	Centre console	39
3.1	Assembly overview - centre console	39
3.2	Removing and installing rear centre console trim	44
3.3	Removing and installing coin holder	46
3.4	Removing and installing centre console insert	46
3.5	Removing and installing trim panel for centre console	48
3.6	Removing and installing centre console	51
3.7	Removing and installing brackets for centre console	55
3.8	Removing and installing front centre console storage compartment	57
4	Front centre armrest	60
4.1	Assembly overview - front centre armrest	60
4.2	Removing and installing upper part of centre armrest	60
4.3	Removing and installing front centre armrest	62
5	Interior mirror	63
5.1	Assembly overview - interior mirror	63
5.2	Removing and installing interior mirror	64
5.3	Switching automatic anti-dazzle function on and off	68
5.4	Switching compass display on and off	69
5.5	Setting magnetic deflection zone	69
5.6	Calibrating digital compass	71
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	72
5.8	Selecting the applicable deflection zone from the map	73
5.9	Checking operation of automatic anti-dazzle interior mirror	78
69	- Passenger protection	80
1	Seat belts	80
1.1	Overview of fitting locations - seat belts and anchorage points	80
1.2	Assembly overview - front three-point seat belt	84
1.3	Assembly overview - rear outer three-point seat belt	90
1.4	Assembly overview - rear centre three-point seat belt	92
1.5	Assembly overview - front belt buckle	93
1.6	Assembly overview - rear belt buckle	94
1.7	Removing and installing front three-point seat belt	96
1.8	Removing and installing rear three-point seat belt	105
1.9	Removing and installing front belt guide	111
1.10	Removing and installing rear belt guide	112
1.11	Removing and installing front belt end fitting	116
1.12	Removing and installing belt height adjuster	120
1.13	Removing and installing front belt buckle	121
1.14	Removing and installing rear belt buckle	122
2	Child seat anchors	125
2.1	Assembly overview - front child seat anchors	125
2.2	Assembly overview - rear child seat anchors	125
2.3	Removing and installing front child seat anchor	126
2.4	Removing and installing rear child seat anchor	127
3	Airbag system	130
3.1	Overview of fitting locations - airbag system	130
4	Airbag control unit	137
4.1	Assembly overview - airbag control unit	137
4.2	Removing and installing airbag control unit J234	137
5	Battery isolation igniter	140
5.1	Assembly overview - battery isolation igniter	140
5.2	Removing and installing battery isolation igniter	142
6	Airbag (driver side)	145

6.1	Assembly overview - driver airbag	145
6.2	Removing and installing airbag unit with igniters	148
6.3	Renewing connector at airbag	158
7	Front passenger airbag	162
7.1	Assembly overview - front passenger airbag	162
7.2	Removing and installing front passenger airbag unit with igniters	166
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	170
8	Side airbags	173
8.1	Assembly overview - front side airbag	173
8.2	Assembly overview - rear side airbag	173
8.3	Removing and installing front side airbag with igniter	174
8.4	Removing and installing rear side airbag with igniter	176
9	Curtain airbags	179
9.1	Assembly overview - curtain airbag	179
9.2	Removing and installing curtain airbag with igniter	183
10	Knee airbags	196
10.1	Assembly overview - knee airbag	196
10.2	Removing and installing knee airbag with igniter	198
11	Crash sensors for airbags	204
11.1	Overview of fitting locations - crash sensors for airbags	204
11.2	Removing and installing front airbag crash sensor G283/G284	207
11.3	Removing and installing front side airbag crash sensor G179/G180	212
11.4	Removing and installing rear side airbag crash sensor G256/G257	216
12	Seat position sensor	219
12.1	Assembly overview - seat position sensor	219
12.2	Removing and installing seat position sensor	219
13	Belt-fastened recognition system	222
13.1	Removing and installing seat occupied sensor on front passenger side G128	222
14	Seat occupied recognition system	224
14.1	Overview of fitting locations - seat occupied recognition system	224
14.2	Removing and installing seat occupied sensor	226
15	Pedestrian protection	229
15.1	Assembly overview - pedestrian protection	229
15.2	Removing and installing crash sensor for pedestrian protection G570/G571	234
15.3	Removing and installing centre crash sensor for pedestrian protection G693	236
15.4	Removing and installing crash sensor 2 for pedestrian protection G851 and G852	239
15.5	Removing and installing trigger for pedestrian protection G598/G599	247
15.6	Resetting triggered pedestrian protection system	248
70	Trim, insulation	249
1	Front door trim	249
1.1	Assembly overview - front door trim	249
1.2	Removing and installing front door trim	252
1.3	Removing and installing trim panel	257
1.4	Removing and installing front armrest	257
1.5	Removing and installing interior door handle	263
1.6	Removing and installing window frame trim	263
2	Rear door trim	266
2.1	Assembly overview - rear door trim	266
2.2	Removing and installing rear door trim	268
2.3	Removing and installing trim panel	272
2.4	Removing and installing rear armrest	272
2.5	Removing and installing interior door handle	275
2.6	Removing and installing window frame trim	275



3	Dash panel	278
3.1	Overview of fitting locations - dash panel	278
3.2	Assembly overview - dash panel	278
3.3	Removing and installing dash panel cover (side)	282
3.4	Removing and installing dash panel vents	283
3.5	Removing and installing front centre defroster vent	284
3.6	Removing and installing side defroster vent	286
3.7	Removing and installing loudspeaker trim	286
3.8	Removing and installing trim panel for dash panel	287
3.9	Removing and installing cover for MMI screen	290
3.10	Removing and installing dash panel	291
4	Dash panel cross member	297
4.1	Assembly overview - dash panel cross member	297
4.2	Removing and installing crash bar	299
4.3	Removing and installing dash panel cross member	301
5	Passenger compartment trim panels	306
5.1	Overview of fitting locations - passenger compartment trim panels	306
5.2	Assembly overview - sill panel moulding	309
5.3	Assembly overview - A-pillar trim	312
5.4	Assembly overview - B-pillar trim	316
5.5	Assembly overview - C-pillar trim	320
5.6	Assembly overview - D-pillar trim	323
5.7	Assembly overview - side trim	325
5.8	Assembly overview - foot rest and floor covering	326
5.9	Assembly overview - rear shelf	327
5.10	Removing and installing sill panel moulding	329
5.11	Removing and installing A-pillar trim	334
5.12	Removing and installing B-pillar trim	342
5.13	Removing and installing C-pillar trim	349
5.14	Removing and installing D-pillar trim	355
5.15	Removing and installing loudspeaker trim	359
5.16	Removing and installing side trim	361
5.17	Removing and installing foot rest	363
5.18	Removing and installing floor covering	365
5.19	Removing and installing rear shelf	367
6	Luggage compartment trim panels	369
6.1	Overview of fitting locations - luggage compartment trim panels	369
6.2	Assembly overview - upper rear lid trim	371
6.3	Assembly overview - lower rear lid trim	372
6.4	Assembly overview - lock carrier trim	375
6.5	Assembly overview - luggage compartment side trim	376
6.6	Assembly overview - luggage compartment floor	380
6.7	Removing and installing tail light cover	383
6.8	Removing and installing lower rear lid trim	383
6.9	Removing and installing upper rear lid trim	388
6.10	Removing and installing lock carrier trim	389
6.11	Removing and installing bag hook	391
6.12	Removing and installing fastening ring	392
6.13	Removing and installing luggage compartment side trim	393
6.14	Removing and installing grip for rear luggage compartment floor	398
6.15	Removing and installing lining for spare wheel well	399
7	Roof trim panels	402
7.1	Assembly overview - moulded headliner	402
7.2	Removing and installing moulded headliner	406
7.3	Lowering moulded headliner for removal of roof aerial	418

7.4	Attaching roof reinforcement to body	421
72	Seat frames	426
1	Overview - seat versions	426
1.1	Overview of fitting locations - seat versions	426
2	Front seats	429
2.1	Overview of fitting locations - electrical and electronic components	429
2.2	Assembly overview - front seat	432
2.3	Assembly overview - front seat backrest	438
2.4	Assembly overview - backrest release mechanism and easy entry system	442
2.5	Assembly overview - head restraint	445
2.6	Assembly overview - seat pan	447
2.7	Removing and installing front seat	457
2.8	Connecting and disconnecting airbag adapter	463
2.9	Attaching front seat to seat repair stand	465
2.10	Removing and installing backrest adjustment unit	466
2.11	Removing and installing front seat backrest	471
2.12	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	477
2.13	Removing and installing trim for backrest release mechanism	480
2.14	Removing and installing backrest release mechanism	483
2.15	Removing and installing slider	503
2.16	Removing and installing head restraint	504
2.17	Removing and installing head restraint guide	505
2.18	Removing and installing lumbar support adjustment switch E176/E177	507
2.19	Removing and installing massage function button E670/E671	508
2.20	Removing and installing seat height adjustment unit	508
2.21	Removing and installing seat rake adjustment unit	514
2.22	Dismantling and assembling seat pan	517
2.23	Removing and installing control unit for seat functions	538
3	Rear seats	539
3.1	Assembly overview - bench seat/individual seats	539
3.2	Assembly overview - rear seat backrest	540
3.3	Assembly overview - locking mechanism	543
3.4	Assembly overview - centre armrest	543
3.5	Assembly overview - head restraint and head restraint guide	544
3.6	Removing and installing bench seat/individual seats	545
3.7	Removing and installing centre storage compartment	547
3.8	Removing and installing rear seat backrest	548
3.9	Removing and installing trim for locking mechanism	554
3.10	Removing and installing locking mechanism for rear seat backrest	555
3.11	Removing and installing trim frame for load-through hatch	555
3.12	Removing and installing flap for load-through hatch	558
3.13	Removing and installing centre armrest	559
3.14	Removing and installing head restraint	561
3.15	Removing and installing head restraint guide	562
74	Seat - padding, covers	563
1	Covers and padding on front seats	563
1.1	Assembly overview - seat pan cover and padding	563
1.2	Assembly overview - backrest cover and padding	566
1.3	Assembly overview - head restraint cover and padding	569
1.4	Overview - seat heating elements	570
1.5	Removing and installing seat pan cover and padding	574
1.6	Separating seat pan cover and padding	579
1.7	Removing and installing backrest cover and padding	582
1.8	Separating backrest cover and padding	589



1.9	Removing and installing head restraint cover and padding	590
1.10	Removing and installing seat heater element Z6/Z8	593
1.11	Removing and installing backrest heater element Z7/Z9	596
2	Covers and padding on rear seats	600
2.1	Assembly overview - cover and padding	600
2.2	Removing and installing cover and padding	604
2.3	Removing and installing intermediate padding - backrest with load-through hatch	608
2.4	Detaching cover from padding	609