

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety precautions</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with natural gas systems	2
1.4 Safety precautions when working on vehicles with start/stop system	4
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Safety precautions when working on the cooling system	4
<b>2 Repair instructions</b>	<b>5</b>
2.1 Routing and attachment of pipes, hoses and wiring	5
2.2 Contact corrosion	5
2.3 Bonding surfaces for adhesive strips	5
2.4 Self-locking bolts	5
2.5 Identification plates	6
<b>50 - Body - front</b>	<b>7</b>
<b>1 Safety precautions</b>	<b>7</b>
<b>2 Safety precautions</b>	<b>8</b>
<b>3 Lock carrier</b>	<b>9</b>
3.1 Exploded view - lock carrier	9
3.2 Removing and installing lock carrier	11
3.3 Removing and installing cover for arrester	27
3.4 Removing and installing air duct for radiator	28
3.5 Removing and installing air duct - vehicles with manual gearbox	29
<b>4 Wing</b>	<b>31</b>
4.1 Exploded view - wing	31
4.2 Exploded view - brackets on wing (right-side)	35
4.3 Exploded view - repair set for wing	36
4.4 Removing and installing wing	37
4.5 Removing and installing wing panel brace	40
4.6 Removing and installing closure plate	41
<b>5 Bulkhead</b>	<b>42</b>
5.1 Exploded view - plenum chamber partition panel	42
5.2 Exploded view - plenum chamber cover	42
5.3 Removing and installing plenum chamber cover	43
5.4 Removing and installing plenum chamber partition panel	44
5.5 Removing and installing sealing element	45
<b>55 - Bonnet, rear lid</b>	<b>47</b>
<b>1 Safety precautions</b>	<b>47</b>
<b>2 Bonnet</b>	<b>48</b>
2.1 Exploded view - bonnet	48
2.2 Exploded view - Bowden cable	49
2.3 Removing and installing bonnet	50
2.4 Adjusting bonnet	51
2.5 Removing and installing hinges	52
2.6 Resetting hinge	55
2.7 Removing and installing striker	55
2.8 Removing and installing gas strut	56
2.9 Releasing gas from gas strut	58
2.10 Removing and installing insulation	58
2.11 Removing and installing impact guard	59



2.12	Removing and installing Bowden cable	61
2.13	Removing and installing arrester	64
2.14	Removing and installing bonnet lock	64
2.15	Removing and installing operating lever for bonnet lock	66
<b>3</b>	<b>Rear lid</b>	<b>69</b>
3.1	Exploded view - rear lid	69
3.2	Removing and installing rear lid	71
3.3	Adjusting rear lid	72
3.4	Removing and installing hinges	78
3.5	Removing and installing rear lid seal	83
3.6	Removing and installing stop and adjusting buffer	85
3.7	Removing and installing gas strut	88
3.8	Releasing gas from gas strut	91
3.9	Removing and installing extension spring	92
3.10	Removing and installing rear lid lock	92
3.11	Removing and installing actuator	93
<b>4</b>	<b>Tank flap unit</b>	<b>96</b>
4.1	Exploded view - tank flap unit	96
4.2	Removing and installing tank flap unit	96
4.3	Removing and installing trim panel for tank flap	98
4.4	Removing and installing water drain hose for tank flap unit	99
4.5	Removing and installing manual release cable	100
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>102</b>
<b>1</b>	<b>Safety precautions</b>	<b>102</b>
<b>2</b>	<b>Door</b>	<b>103</b>
2.1	Exploded view - door	103
2.2	Exploded view - door seals	104
2.3	Removing and installing door	105
2.4	Adjusting door	106
2.5	Removing and installing door arrester	114
2.6	Removing and installing inner door seal	116
2.7	Removing and installing outer door seal	117
<b>3</b>	<b>Door components</b>	<b>121</b>
3.1	Exploded view - window regulator	121
3.2	Exploded view - door handle and door lock	122
3.3	Exploded view - window guides and window slot trim strips	124
3.4	Removing and installing window regulator	125
3.5	Removing and installing window regulator motor	127
3.6	Removing and installing door handle	127
3.7	Removing and installing door handle trim	129
3.8	Removing and installing mounting bracket	130
3.9	Removing and installing operating cable for exterior door handle	131
3.10	Removing and installing lock cylinder	133
3.11	Removing and installing cap for lock cylinder	134
3.12	Removing and installing housing	135
3.13	Removing and installing door lock	136
3.14	Removing and installing cover for door lock	137
3.15	Removing and installing striker	137
3.16	Removing and installing operating cable for interior door handle	138
3.17	Removing and installing inner door cover	139
3.18	Removing and installing window guide	140
3.19	Removing and installing inner window slot trim strip	142
3.20	Removing and installing outer window slot trim strip	143
<b>4</b>	<b>Central locking system</b>	<b>146</b>

4.1	Overview of fitting locations - central locking system .....	146
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387 .....	151
4.3	Removing and installing rear driver side door control unit J926 and rear passenger side door control unit J927 .....	151
4.4	Removing and installing control unit with rear driver side window regulator motor J1016 and control unit with rear passenger side window regulator motor J1017 .....	152
4.5	Removing and installing interface control unit for vehicle location system J843 .....	153
4.6	Removing and installing bonnet contact switch F266 .....	155
4.7	Removing and installing tank filler flap locking motor V155 .....	156
<b>58</b>	<b>- Rear doors, door components .....</b>	<b>158</b>
<b>1</b>	<b>Safety precautions .....</b>	<b>158</b>
<b>2</b>	<b>Door .....</b>	<b>159</b>
2.1	Exploded view - door .....	159
2.2	Exploded view - door seals .....	161
2.3	Removing and installing door .....	162
2.4	Adjusting door .....	163
2.5	Removing and installing door arrester .....	170
2.6	Removing and installing inner door seal .....	172
2.7	Removing and installing outer door seal .....	172
<b>3</b>	<b>Door components .....</b>	<b>177</b>
3.1	Exploded view - window regulator .....	177
3.2	Exploded view - door handle and door lock .....	178
3.3	Exploded view - window guides and window slot trim strips .....	180
3.4	Removing and installing window regulator .....	182
3.5	Removing and installing window regulator motor .....	183
3.6	Removing and installing door handle .....	184
3.7	Removing and installing door handle trim .....	186
3.8	Removing and installing housing .....	187
3.9	Removing and installing mounting bracket .....	188
3.10	Removing and installing operating cable for exterior door handle .....	189
3.11	Removing and installing door lock .....	191
3.12	Removing and installing striker .....	193
3.13	Removing and installing operating cable for interior door handle .....	193
3.14	Removing and installing inner door cover .....	194
3.15	Removing and installing window guide .....	195
3.16	Removing and installing window guide .....	199
3.17	Removing and installing inner window slot trim strip .....	199
3.18	Removing and installing outer window slot trim strip .....	200
<b>60</b>	<b>- Sunroof .....</b>	<b>203</b>
<b>1</b>	<b>Safety precautions .....</b>	<b>203</b>
<b>2</b>	<b>Sliding sunroof .....</b>	<b>204</b>
2.1	Exploded view - sliding sunroof .....	204
2.2	Exploded view - sunroof sun blind .....	206
2.3	Removing and installing sunroof frame .....	206
2.4	Removing and installing glass panel .....	211
2.5	Adjusting glass panel .....	215
2.6	Removing and installing slotted guide .....	217
2.7	Removing and installing sliding sunroof adjustment control unit J245 .....	220
2.8	Adapting sliding sunroof adjustment control unit J245 .....	221
2.9	Removing and installing front trim panel for sliding sunroof .....	222
2.10	Removing and installing sunroof seals .....	227
2.11	Removing and installing sunroof sun blind .....	229
2.12	Removing and installing wind deflector .....	237



<b>3</b>	<b>Water drain hoses</b> .....	<b>242</b>
3.1	Overview - water drain hoses .....	242
3.2	Cleaning water drain hoses .....	244
3.3	Removing and installing water drain hoses .....	245
<b>63</b>	<b>- Bumpers</b> .....	<b>247</b>
<b>1</b>	<b>Safety precautions</b> .....	<b>247</b>
<b>2</b>	<b>Bumper (front)</b> .....	<b>248</b>
2.1	Exploded view - bumper cover .....	248
2.2	Exploded view - impact bar .....	259
2.3	Removing and installing bumper cover .....	263
2.4	Adjusting bumper cover .....	269
2.5	Removing and installing bumper cover mounting .....	271
2.6	Removing and installing impact bar .....	273
2.7	Removing and installing attachments .....	279
<b>3</b>	<b>Bumper (rear)</b> .....	<b>309</b>
3.1	Exploded view - bumper cover .....	309
3.2	Exploded view - impact bar .....	327
3.3	Removing and installing bumper cover .....	328
3.4	Removing and installing impact bar .....	332
3.5	Removing and installing attachments .....	337
<b>64</b>	<b>- Glazing</b> .....	<b>348</b>
<b>1</b>	<b>Safety precautions</b> .....	<b>348</b>
<b>2</b>	<b>Repair instructions</b> .....	<b>349</b>
2.1	Minimum drying times for bonded windows .....	349
2.2	Repairing windows .....	349
2.3	Notes on installing flush-bonded windows .....	350
2.4	Preparing undamaged windows for installation .....	353
2.5	Preparing new windows for installation .....	354
2.6	Preparing body flange for installation .....	356
2.7	Cleaning off adhesive sealant .....	356
<b>3</b>	<b>Windscreen</b> .....	<b>357</b>
3.1	Exploded view - windscreen .....	357
3.2	Removing and installing windscreen .....	358
<b>4</b>	<b>Side windows</b> .....	<b>364</b>
4.1	Exploded view - rear side window .....	364
4.2	Removing and installing rear side window .....	366
<b>5</b>	<b>Rear window</b> .....	<b>371</b>
5.1	Exploded view - rear window .....	371
5.2	Removing and installing rear window .....	372
<b>6</b>	<b>Door windows</b> .....	<b>383</b>
6.1	Exploded view - front door window .....	383
6.2	Exploded view - rear door window .....	383
6.3	Removing and installing front door window .....	384
6.4	Removing and installing rear door window .....	386
<b>66</b>	<b>- Exterior equipment</b> .....	<b>389</b>
<b>1</b>	<b>Safety precautions</b> .....	<b>389</b>
<b>2</b>	<b>Radiator grille/front trim panel</b> .....	<b>390</b>
2.1	Exploded view - radiator grille .....	390
2.2	Removing and installing radiator grille .....	397
<b>3</b>	<b>Spoiler</b> .....	<b>411</b>
3.1	Exploded view - spoiler .....	411

3.2	Removing and installing spoiler	412
<b>4</b>	<b>Strips / trim panels / extensions</b>	<b>419</b>
4.1	Exploded view - trim strip and covers	419
4.2	Exploded view - trim panels for A-pillar and B-pillar	420
4.3	Exploded view - trim panel for B/C-pillar	421
4.4	Exploded view - sill panel trim	423
4.5	Exploded view - side member trim	425
4.6	Exploded view - heat shield	426
4.7	Removing and installing water deflector strip	429
4.8	Removing and installing trim strip	430
4.9	Removing and installing cover	438
4.10	Removing and installing trim panel for A-pillar	440
4.11	Removing and installing trim panel for B-pillar on door	441
4.12	Removing and installing trim panel for C-pillar on door	442
4.13	Removing and installing sill panel trim	444
4.14	Removing and installing side member trim	446
4.15	Removing and installing heat shield for floor	451
<b>5</b>	<b>Noise insulation</b>	<b>458</b>
5.1	Exploded view - noise insulation	458
5.2	Removing and installing noise insulation	459
<b>6</b>	<b>Underbody trim</b>	<b>462</b>
6.1	Exploded view - underbody trim	462
6.2	Removing and installing underbody trim	471
6.3	Removing and installing tunnel cross-piece	479
<b>7</b>	<b>Roof strips / roof rails</b>	<b>482</b>
7.1	Exploded view - roof rail	482
7.2	Exploded view - roof trim strip	483
7.3	Removing and installing roof rail	484
7.4	Removing and installing roof trim strip	486
<b>8</b>	<b>Exterior mirrors</b>	<b>493</b>
8.1	Exploded view - exterior mirror	493
8.2	Removing and installing mirror glass	494
8.3	Removing and installing mirror adjustment unit	496
8.4	Removing and installing mirror trim	497
8.5	Removing and installing cover for mirror	497
8.6	Removing and installing exterior mirror	498
<b>9</b>	<b>Wheel housing liners</b>	<b>500</b>
9.1	Exploded view - wheel housing liner (front)	500
9.2	Exploded view - wheel housing liner (rear)	502
9.3	Removing and installing wheel housing liner (front)	504
9.4	Removing and installing wheel housing liner (rear)	509
<b>10</b>	<b>Model badges and brand emblems</b>	<b>512</b>
10.1	Exploded view - model badges and brand emblems	512
10.2	Dimensions - model badges and brand emblems on rear	512
10.3	Renewing model badges and brand emblems on side	514
10.4	General notes on renewing model badges and brand emblems	514
10.5	Removing and installing model badges and emblems for radiator grille	516
<b>11</b>	<b>Towing bracket</b>	<b>521</b>
11.1	Exploded view - towing bracket	521
11.2	Removing and installing trailer detector control unit J345	523