

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety briefing/employee qualification</b>	<b>1</b>
1.1 Qualification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety information	2
2.2 Work that requires high-voltage system to be de-energised	4
2.3 Safety precautions when working on the high-voltage system	5
2.4 Safety precautions when working in the vicinity of high-voltage components	6
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when using testers and measuring instruments during a road test	6
<b>3 Repair instructions</b>	<b>8</b>
3.1 Important notes	8
3.2 General notes	8
3.3 Information on handling fine dust, aluminium dust and steel dust	9
3.4 Routing and attachment of pipes, hoses and wiring	10
3.5 Contact corrosion	10
3.6 Bonding surfaces for self-adhesive components	10
3.7 Secure threaded connections	10
3.8 Identification plates	10
3.9 Impact wrenches	11
3.10 Moulded foam inserts	11
3.11 Bonded joints	15
3.12 Galvanised body panels, high-strength and extra-high-strength steel	15
3.13 Matching the surface contour	24
<b>4 Vehicle identification data</b>	<b>26</b>
4.1 Vehicle identification number	26
4.2 Type plate	27
4.3 Vehicle data sticker	27
<b>5 Using edge milling unit -VAS 882 005-</b>	<b>28</b>
5.1 General information	28
5.2 Assembling unit/changing milling tool	31
5.3 Separating flanged edges	41
5.4 Separating panels at corners and along surfaces	47
5.5 Separating outer edges	50
5.6 Renewing roof	53
5.7 Separating laser weld seams using round head milling unit	55
5.8 Aluminium panels	57
<b>6 Processing body structure adhesive D 180 004 M2</b>	<b>60</b>
6.1 Preparing bonding surfaces	61
<b>7 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b>	<b>74</b>
<b>8 Overview of rivets and tools</b>	<b>76</b>
8.1 Overview of rivets used for repair measures	81
8.2 Renewing studs	81
<b>9 Body dimensions</b>	<b>83</b>
9.1 Body - front	83
9.2 Body - centre	85
9.3 Floor group	91
9.4 Body - rear	95
<b>10 Tools</b>	<b>99</b>
<b>11 Straightening jig</b>	<b>103</b>



11.1	Procedure for repairing structural body damage on Audi vehicles	103
<b>50</b>	<b>- Body - front</b>	<b>105</b>
1	Safety information	105
2	Renewing engine console (right-side)	106
2.1	Tools	106
2.2	Procedure	107
3	Renewing mounting bracket (for subframe)	111
3.1	Tools	111
3.2	Procedure	112
4	Renewing upper wheel housing longitudinal member	120
4.1	Tools	120
4.2	Procedure	121
5	Renewing front wheel housing	127
5.1	Tools	127
5.2	Procedure	128
6	Renewing front longitudinal member	133
6.1	Tools	133
6.2	Procedure	134
7	Renewing front longitudinal member (left-side) - partial renewal	139
7.1	Tools	139
7.2	Procedure	140
8	Renewing front longitudinal member (right-side) - part section	146
8.1	Tools	146
8.2	Procedure	147
9	Renewing impact damper plate	153
9.1	Tools	153
9.2	Procedure	154
10	Renewing upper footwell cross member	157
10.1	Tools	157
10.2	Procedure	158
11	Renewing outer footwell cross member - partial renewal	164
11.1	Tools	164
11.2	Procedure	165
12	Repairing threads for attachment of subframe	170
12.1	Tools	170
<b>51</b>	<b>- Body - centre</b>	<b>176</b>
1	Safety information	176
2	Permitted separating cuts on complete side panel	177
3	Renewing standard roof - A3	180
3.1	Tools	180
3.2	Procedure	187
4	Renewing roof - vehicles with panoramic tilting sunroof - A3	202
4.1	Tools	202
4.2	Procedure	209
5	Renewing roof - Sportback	223
5.1	Tools	223
5.2	Procedure	230
6	Renewing roof (vehicles with panoramic tilting sunroof - Sportback)	245
6.1	Tools	245
6.2	Procedure	252
7	Roof - Renewal (Saloon)	266

7.1	Tools .....	266
7.2	Procedure .....	273
<b>8</b>	<b>Renewing roof (vehicles with panoramic tilting sunroof - Saloon) .....</b>	<b>288</b>
8.1	Tools .....	288
8.2	Procedure .....	295
<b>9</b>	<b>Renewing roof side member - A3 .....</b>	<b>309</b>
9.1	Tools .....	309
9.2	Procedure .....	310
<b>10</b>	<b>Renewing roof side member - Sportback .....</b>	<b>316</b>
10.1	Tools .....	316
10.2	Procedure .....	317
<b>11</b>	<b>Roof side member - Renewal (Saloon) .....</b>	<b>323</b>
11.1	Tools .....	323
11.2	Procedure .....	324
<b>12</b>	<b>Renewing front roof cross member .....</b>	<b>330</b>
12.1	Tools .....	330
12.2	Procedure .....	331
<b>13</b>	<b>Renewing centre roof cross member .....</b>	<b>334</b>
13.1	Tools .....	334
13.2	Procedure .....	335
<b>14</b>	<b>Renewing rear roof cross member .....</b>	<b>338</b>
14.1	Tools .....	338
14.2	Procedure .....	339
<b>15</b>	<b>Renewing front roof cross member - Saloon .....</b>	<b>344</b>
15.1	Tools .....	344
15.2	Procedure .....	345
<b>16</b>	<b>Rear roof cross member - Renewal (Saloon) .....</b>	<b>348</b>
16.1	Tools .....	348
16.2	Procedure .....	349
<b>17</b>	<b>Renewing centre roof cross member - Saloon .....</b>	<b>352</b>
17.1	Tools .....	352
17.2	Procedure .....	353
<b>18</b>	<b>Renewing outer A-pillar .....</b>	<b>356</b>
18.1	Tools .....	356
18.2	Procedure .....	357
<b>19</b>	<b>Renewing upper inner A-pillar - partial renewal .....</b>	<b>362</b>
19.1	Tools .....	362
19.2	Procedure .....	363
<b>20</b>	<b>Renewing upper inner A-pillar - partial renewal (NAR and e-tron vehicles only) .....</b>	<b>374</b>
20.1	Tools .....	374
20.2	Procedure .....	375
<b>21</b>	<b>Renewing lower inner A-pillar - partial renewal .....</b>	<b>387</b>
21.1	Tools .....	387
21.2	Procedure .....	388
<b>22</b>	<b>Renewing inner A-pillar reinforcement .....</b>	<b>392</b>
22.1	Tools .....	392
22.2	Procedure .....	393
<b>23</b>	<b>Inner B-pillar - Partial renewal (A3) .....</b>	<b>397</b>
23.1	Tools .....	397
23.2	Procedure .....	398
<b>24</b>	<b>Renewing outer B-pillar .....</b>	<b>412</b>
24.1	Tools .....	412
24.2	Procedure .....	413



<b>25</b>	<b>Renewing inner B-pillar - partial renewal (Sportback)</b>	<b>419</b>
25.1	Tools	419
25.2	Procedure	420
<b>26</b>	<b>Renewing inner B-pillar - partial renewal (e-tron vehicles only)</b>	<b>434</b>
26.1	Tools	434
26.2	Procedure	435
<b>27</b>	<b>Renewing inner B-pillar - partial renewal (Saloon)</b>	<b>446</b>
27.1	Tools	446
27.2	Procedure	447
<b>28</b>	<b>Renewing inner B-pillar - Saloon</b>	<b>461</b>
28.1	Tools	461
28.2	Procedure	462
<b>29</b>	<b>Renewing outer side member - A3</b>	<b>473</b>
29.1	Tools	473
29.2	Procedure	474
<b>30</b>	<b>Renewing outer side member</b>	<b>478</b>
30.1	Tools	478
30.2	Procedure	479
<b>31</b>	<b>Renewing inner side member - A3</b>	<b>483</b>
31.1	Tools	483
31.2	Procedure	484
<b>32</b>	<b>Renewing inner side member</b>	<b>487</b>
32.1	Tools	487
32.2	Procedure	488
<b>33</b>	<b>Renewing inner side member reinforcement</b>	<b>491</b>
33.1	Tools	491
33.2	Procedure	492
<b>34</b>	<b>Renewing mounting for outer seat cross member</b>	<b>498</b>
34.1	Tools	498
34.2	Procedure	499
<b>35</b>	<b>Renewing centre seat cross member</b>	<b>503</b>
35.1	Tools	503
35.2	Procedure	504
<b>36</b>	<b>Renewing mounting for inner seat cross member</b>	<b>508</b>
36.1	Tools	508
36.2	Procedure	509
<b>53 - Body - rear</b>		<b>513</b>
<b>1</b>	<b>Safety information</b>	<b>513</b>
<b>2</b>	<b>Permitted separating cuts on complete side panel</b>	<b>514</b>
<b>3</b>	<b>Renewing rear upper cross panel</b>	<b>517</b>
3.1	Tools	517
3.2	Procedure	518
<b>4</b>	<b>Renewing rear upper cross panel - Saloon</b>	<b>522</b>
4.1	Tools	522
4.2	Procedure	523
<b>5</b>	<b>Renewing rear cross panel</b>	<b>527</b>
5.1	Tools	527
5.2	Procedure	528
<b>6</b>	<b>Renewing rear cross panel - Saloon</b>	<b>532</b>
6.1	Tools	532
6.2	Procedure	533

<b>7</b>	<b>Renewing rear longitudinal member - part section</b> .....	<b>536</b>
7.1	Tools .....	536
7.2	Procedure .....	537
<b>8</b>	<b>Renewing connecting piece for rear longitudinal member - Saloon</b> .....	<b>542</b>
8.1	Tools .....	542
8.2	Procedure .....	543
<b>9</b>	<b>Renewing side panel - A3</b> .....	<b>548</b>
9.1	Tools .....	548
9.2	Procedure .....	549
<b>10</b>	<b>Renewing inner side panel - A3</b> .....	<b>556</b>
10.1	Tools .....	556
10.2	Procedure .....	557
<b>11</b>	<b>Renewing side panel - Sportback</b> .....	<b>560</b>
11.1	Tools .....	560
11.2	Procedure .....	561
<b>12</b>	<b>Side panel - Renewal (Saloon)</b> .....	<b>568</b>
12.1	Tools .....	568
12.2	Procedure .....	569
<b>13</b>	<b>Renewing spare wheel well</b> .....	<b>576</b>
13.1	Tools .....	576
13.2	Procedure .....	577
<b>14</b>	<b>Renewing spare wheel well (Saloon)</b> .....	<b>581</b>
14.1	Tools .....	581
14.2	Procedure .....	582
<b>15</b>	<b>Renewing spare wheel well (quattro)</b> .....	<b>586</b>
15.1	Tools .....	586
15.2	Procedure .....	587
<b>16</b>	<b>Renewing rear spare wheel well (Saloon, quattro version)</b> .....	<b>593</b>
16.1	Tools .....	593
16.2	Procedure .....	594
<b>17</b>	<b>Renewing luggage compartment floor (only for vehicles with natural gas technology)</b> ....	<b>597</b>
17.1	Tools .....	597
17.2	Procedure .....	598
<b>18</b>	<b>Renewing rear wheel housing - A3</b> .....	<b>602</b>
18.1	Tools .....	602
18.2	Procedure .....	603
<b>19</b>	<b>Renewing rear wheel housing - Sportback</b> .....	<b>609</b>
19.1	Tools .....	609
19.2	Procedure .....	610
<b>20</b>	<b>Renewing rear wheel housing - part section (A3)</b> .....	<b>616</b>
20.1	Tools .....	616
20.2	Procedure .....	617
<b>21</b>	<b>Renewing rear wheel housing - part section (Saloon)</b> .....	<b>621</b>
21.1	Tools .....	621
21.2	Procedure .....	622
<b>22</b>	<b>Renewing rear wheel housing - Saloon</b> .....	<b>626</b>
22.1	Tools .....	626
22.2	Procedure .....	627