



Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working on the cooling system	3
1.7 Safety precautions when working on vehicles with auxiliary/supplementary heater	3
2 General notes	5
2.1 Type plates	5
2.2 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine	6
2.3 Notes on operation of auxiliary/supplementary heater with biofuel	6
2.4 Starting conditions for auxiliary/supplementary heater	6
2.5 Rules for cleanliness when working on the auxiliary/supplementary heater and fuel system	7
3 Repair instructions	8
3.1 Rules for cleanliness	8
3.2 General notes	8
3.3 Contact corrosion	9
3.4 Checking heating output	9
3.5 Routing and attachment of pipes, hoses and wiring	10
3.6 Use of impact wrenches	10
3.7 Identification plates	10
82 - Auxiliary heating	11
1 Safety precautions	11
2 Overview of fitting locations - auxiliary/supplementary heater	12
3 Auxiliary/supplementary heater	14
3.1 Overview of fitting locations - auxiliary/supplementary heater	14
3.2 Exploded view - components inside auxiliary/supplementary heater	16
3.3 Exploded view - attachments for auxiliary/supplementary heater	17
3.4 Removing and installing auxiliary/supplementary heater	18
3.5 Dismantling and assembling auxiliary/supplementary heater	26
3.6 Removing and installing air intake silencer	27
3.7 Removing and installing circulation pump V55	28
3.8 Removing and installing exhaust system	34
3.9 Removing and installing bracket for auxiliary/supplementary heater	34
3.10 Removing and installing covers for auxiliary heater control unit J364	35
3.11 Dismantling and assembling burner unit	36
3.12 Removing and installing glow plug with flame monitor Q8	37
3.13 Removing and installing temperature sensor G18 and overheating sensor G189	37
3.14 Pin assignment for auxiliary/supplementary heater	38
4 Coolant circuit with auxiliary/supplementary heater	40
4.1 Connection diagram for coolant hoses (vehicles with auxiliary/supplementary heating) ..	40
5 Fuel supply system	43
5.1 Overview of fitting locations - fuel supply system	43
5.2 Exploded view - fuel delivery unit	44
5.3 Installing riser in fuel delivery unit	45
5.4 Bleeding fuel line to metering pump V54 (filling with fuel)	46
5.5 Checking CO ₂ content in exhaust gas of auxiliary/supplementary heater	49
5.6 Checking fuel delivery rate	50



5.7	Removing and installing metering pump V54	51
5.8	Checking metering pump V54 with end sealing valve	60
6	Auxiliary/supplementary heater control	61
6.1	Switching auxiliary/supplementary heater on and off	61
7	Further control components	62
7.1	Removing and installing ambient temperature sensor G17	62
7.2	Removing and installing remote control receiver for auxiliary heater R64	62
7.3	Adapting remote control for auxiliary heater	64
7.4	Functional description of remote control for auxiliary/supplementary heater	65
7.5	Renewing battery in remote control for auxiliary/supplementary heater	65