

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	48
1.3 Securing engine to engine and gearbox support	62
1.4 Installing engine	62
2 Assembly mountings	67
2.1 Exploded view - assembly mountings	67
2.2 Supporting engine in installation position	72
2.3 Removing and installing engine mountings	73
2.4 Removing and installing gearbox mounting	75
2.5 Removing and installing pendulum support	77
2.6 Adjusting assembly mountings	78
2.7 Checking adjustment of assembly mountings (engine/gearbox mountings)	81
3 Engine cover panel	82
13 - Crankshaft group	83
1 Cylinder block (pulley end)	83
1.1 Exploded view - cylinder block (pulley end)	83
1.2 Removing and installing poly V-belt	83
1.3 Removing and installing poly V-belt tensioner	83
1.4 Removing and installing vibration damper	84
1.5 Removing and installing bracket for ancillaries	84
1.6 Removing and installing engine support	85
2 Cylinder block (gearbox end)	87
3 Crankshaft	88
4 Balance shaft	89
5 Pistons and conrods	90
15 - Cylinder head, valve gear	91
1 Timing chain cover	91
1.1 Exploded view - timing chain cover	91
1.2 Removing and installing timing chain cover	91
1.3 Renewing oil seal for vibration damper	93
2 Chain drive	94
2.1 Exploded view - camshaft timing chains	94
2.2 Exploded view - drive chain for balance shaft	94
2.3 Removing and installing bearing saddle	94
2.4 Removing and installing camshaft timing chain	94
2.5 Removing and installing drive chain for balance shaft	95
2.6 Checking timing chain	95
2.7 Checking valve timing	95
3 Cylinder head	96
3.1 Exploded view - cylinder head	96
3.2 Removing and installing cylinder head	96
3.3 Checking compression	112



4	Valve gear	113
4.1	Exploded view - valve gear	113
4.2	Removing and installing camshaft	113
4.3	Installing ball for slider	115
4.4	Removing and installing cam adjustment actuators	116
4.5	Removing and installing camshaft control valve 1 N205	116
4.6	Removing and installing valve stem oil seals	116
5	Inlet and exhaust valves	117
17	- Lubrication	118
1	Sump/oil pump	118
1.1	Exploded view - sump/oil pump	118
1.2	Engine oil	118
1.3	Removing and installing sump (bottom section)	118
1.4	Removing and installing oil pump	118
1.5	Removing and installing sump (top section)	118
1.6	Removing and installing oil level and oil temperature sender G266	119
2	Engine oil cooler	120
3	Crankcase breather	121
4	Oil filter/oil pressure switches	122
4.1	Exploded view - oil filter	122
4.2	Exploded view - oil pressure switches/oil pressure control	122
4.3	Removing and installing oil pressure switch F22	122
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	123
4.5	Removing and installing stage 3 oil pressure switch F447	123
4.6	Removing and installing valve for oil pressure control N428	124
4.7	Removing and installing piston cooling jet control valve N522	125
4.8	Checking oil pressure	125
19	- Cooling	126
1	Cooling system/coolant	126
1.1	Connection diagram - coolant hoses	126
1.2	Checking cooling system for leaks	132
1.3	Draining and filling cooling system	132
2	Coolant expansion tank	138
2.1	Exploded view - coolant expansion tank	138
2.2	Removing and installing coolant expansion tank	138
3	Coolant pump/thermostat assembly	141
3.1	Exploded view - coolant pump/thermostat	141
3.2	Exploded view - electric coolant pump	143
3.3	Exploded view - coolant valves	145
3.4	Exploded view - coolant temperature senders	147
3.5	Removing and installing electric coolant pump	148
3.6	Removing and installing coolant pump	155
3.7	Removing and installing toothed belt for coolant pump	157
3.8	Removing and installing actuator for engine temperature regulation N493	159
3.9	Removing and installing thermostat housing	159
3.10	Removing and installing coolant temperature sender G62	162
3.11	Removing and installing radiator outlet coolant temperature sender G83	163
3.12	Removing and installing coolant valves	164
4	Coolant pipes	170
4.1	Exploded view - coolant pipes	170
4.2	Removing and installing coolant pipes	171
5	Radiator/radiator fans	177

5.1	Exploded view - radiator/radiator fans	177
5.2	Exploded view - auxiliary radiator	180
5.3	Removing and installing radiator	181
5.4	Removing and installing radiator cowl	184
5.5	Removing and installing radiator fan V7	186
5.6	Removing and installing auxiliary radiator	187
21	Turbocharging/supercharging	190
1	Turbocharger	190
1.1	Exploded view - turbocharger	190
1.2	Removing and installing turbocharger	195
1.3	Removing and installing charge pressure positioner V465	209
1.4	Adjusting charge pressure positioner V465	211
2	Charge air system	213
2.1	Exploded view - charge air system	213
2.2	Exploded view - hose connections for charge air system	215
2.3	Removing and installing charge air cooler	215
2.4	Removing and installing charge pressure sender G31	216
2.5	Checking charge air system for leaks	217
24	Mixture preparation - injection	219
1	Injection system	219
1.1	Overview of fitting locations - injection system	219
2	Air cleaner	234
2.1	Exploded view - air cleaner housing	234
2.2	Removing and installing air cleaner housing	236
3	Intake manifold	238
3.1	Exploded view - intake manifold	238
3.2	Removing and installing intake manifold	238
3.3	Removing and installing throttle valve module GX3	240
3.4	Cleaning throttle valve module	242
3.5	Checking intake manifold change-over function	242
4	Injectors	243
4.1	Exploded view - fuel rail with injectors	243
4.2	Removing and installing fuel rail	243
4.3	Removing and installing injectors	243
4.4	Cleaning injectors	244
5	Senders and sensors	245
5.1	Exploded view - actuator for structure-borne sound and control unit for structure-borne sound	245
5.2	Removing and installing control unit for structure-borne sound J869 and actuator for structure-borne sound R214	246
5.3	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	247
5.4	Removing and installing fuel pressure sender G247	247
5.5	Checking fuel pressure sender G247	248
5.6	Removing and installing fuel pressure sender for low pressure G410	248
5.7	Removing and installing exhaust gas pressure sensor 1 G450	248
6	High-pressure pump	249
6.1	Exploded view - high-pressure pump	249
6.2	Removing and installing high-pressure pump	249
7	Lambda probe	250
7.1	Exploded view - Lambda probe	250
7.2	Removing and installing Lambda probe	250
8	Engine control unit	252



8.1	Removing and installing engine/motor control unit J623	252
26	- Exhaust system	257
1	Exhaust pipes/silencers	257
1.1	Exploded view - silencers	257
1.2	Separating exhaust pipes/silencers	262
1.3	Removing and installing silencers	264
1.4	Stress-free alignment of exhaust system	267
1.5	Checking exhaust system for leaks	269
2	Emission control system	270
2.1	Exploded view - emission control system	270
2.2	Removing and installing catalytic converter	273
2.3	Removing and installing exhaust flap control unit J883	285
3	Exhaust gas temperature control	287
4	Secondary air system	288
28	- Ignition system	289
1	Ignition system	289