

001 - Basic equipment , (L0L),(5C0)	1-30
1. Basic equipment , (L0L),(5C0)	1
2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	2
3. Turn signal switch, Horn plate, Steering column electronics control unit	3
4. Ignition/starter switch, Steering column electronics control unit	4
5. Onboard supply control unit, Steering column electronics control unit	5
6. Onboard supply control unit	6
7. Control unit in dash panel insert, Onboard supply control unit	7
8. Onboard supply control unit, Data bus diagnostic interface	8
9. Onboard supply control unit, Data bus diagnostic interface	9
10. Light switch, Rain and light sensor, Onboard supply control unit	10
11. Onboard supply control unit, Front roof module, Rear interior light	11
12. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	12
13. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	13
14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	14
15. Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Left washer jet heater element, Right washer jet heater element	15
16. Brake pedal switch, Clutch position sender, Onboard supply control unit	16
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	17
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Tank filler flap locking motor	18
19. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	19
20. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	20
21. Rear lid handle release button, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	21
22. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb	22
23. Reversing light switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	23
24. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	24
25. Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	25
26. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	26
27. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	27
28. Heated rear window relay, Onboard supply control unit, Fuse holder C, Heated rear window	28
29. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	29
30. Onboard supply control unit, Fuse holder C	30
002 - Convenience system, left-hand drive , (L0L)	31-50
1. Convenience system, left-hand drive , (L0L)	31
2. Fuse holder C	32
3. Glass breakage sensor for rear window, Light for left dashboard ambient lighting, Light for right dashboard ambient lighting, Light for centre dashboard ambient lighting	33
4. Front passenger vanity mirror contact switch, Light for cup holder ambient lighting, Right luggage compartment light	34
5. Front roof module, Rear interior light	35
6. Front roof module, Rear interior light	36
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	37
8. Bonnet contact switch, Bonnet contact switch 2, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn	38
9. Rear driver side central locking lock unit, Rear door contact switch, driver side, Rear central locking actuator, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	39
10. Rear passenger side central locking lock unit. Rear door contact switch. passenger side. Rear	40

central locking actuator, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	
11. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit	41
12. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Fuel tank flap release button, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	42
13. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light conductor for front left sill panel moulding ambient lighting, Light for driver door ambient lighting, Driver side entry light	43
14. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	44
15. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	45
16. Control unit in dash panel insert, Data bus diagnostic interface	46
17. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	47
18. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	48
19. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	49
20. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front right sill panel moulding ambient lighting, Light for passenger door ambient lighting, Passenger side entry light	50
003 - 1.4l petrol engine , CMBA,CXSA,CXSB,CZCA	51-68
1. 1.4l petrol engine , CMBA,CXSA,CXSB,CZCA	51
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	52
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	53
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	54
5. Centre switch module in dash panel, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	55
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	56
7. Fuel gauge sender, Fuel system pressurisation pump, Engine control unit	57
8. Main relay, Engine control unit	58
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	59
10. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Valve for oil pressure control, Continued coolant circulation pump	60
11. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	61
12. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	62
13. Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure positioner	63
14. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine control unit	64
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	65
16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine control unit	66
17. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	67
18. Control unit in dash panel insert, Data bus diagnostic interface	68
004 - 1.8l petrol engine , CJSA,CJSB,CNSB	69-89
1. 1.8l petrol engine , CJSA,CJSB,CNSB	69
2. Main relav. Terminal 15 voltage supply relav. Fuse holder C	70

3. Secondary air pump relay, Engine component current supply relay	71
4. Ignition/starter switch, Centre switch module in dash panel, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B	72
5. Oil level and oil temperature sender, Clutch position sender, Engine control unit	73
6. Brake light switch, Brake pedal switch, Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine control unit	74
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine control unit	75
8. Vacuum sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	76
9. Engine control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	77
10. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	78
11. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	79
12. Engine control unit, Ignition coil 4 with output stage, Injector 2, cylinder 1, Injector 2, cylinder 2, Secondary air pump motor	80
13. Actuator 1 for camshaft adjustment, Actuator 2 for camshaft adjustment, Actuator 3 for camshaft adjustment, Actuator 4 for camshaft adjustment, Actuator 5 for camshaft adjustment, Engine control unit, Injector 2, cylinder 3, Injector 2, cylinder 4	81
14. Oil pressure switch, Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Oil pressure switch for reduced oil pressure, Engine control unit, Coolant shut-off valve, Coolant valve for gearbox	82
15. Coolant temperature sender, Radiator outlet coolant temperature sender, Intake manifold flap potentiometer, Engine control unit, Fuel metering valve	83
16. Hall sender, Fuel pressure sender, Hall sender 3, Engine control unit, Charge pressure positioner	84
17. Engine speed sender, Intake air temperature sender, Intake manifold pressure sender, Sender 1 for secondary air pressure, Engine control unit, Actuator for engine temperature regulation	85
18. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Control unit for fuel tank leak detection	86
19. Knock sensor 1, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine control unit	87
20. Charge pressure sender, Gearbox neutral position sender, Engine control unit, Mechatronic unit for dual clutch gearbox	88
21. Control unit in dash panel insert, Data bus diagnostic interface	89
005 - 2.0l diesel engine , CRLB,CRLC,CUNA	90-113
1. 2.0l diesel engine , CRLB,CRLC,CUNA	90
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	91
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	92
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine/motor control unit	93
5. Start/Stop operation button, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine/motor control unit	94
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine/motor control unit, Fuse holder C	95
7. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	96
8. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	97
9. Terminal 30 voltage supply relay, Engine/motor control unit	98
10. Automatic glow period control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	99
11. Air mass meter, Low heat output relay, High heat output relay, Engine/motor control unit, Heater element for crankcase breather	100
12. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve	101
13. Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	102
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	103
15. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler. Engine/motor control unit	104

16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	105
17. Pressure differential sender, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	106
18. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	107
19. Engine speed sender, Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor 2	108
20. Water level sender, Fuel pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Exhaust gas recirculation control motor	109
21. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Fuse 8 on fuse holder B, Lambda probe heater, Lambda probe 1 heater after catalytic converter	110
22. Charge pressure sender, Accelerator position sender, Accelerator position sender 2, Exhaust gas pressure sensor 1, Engine/motor control unit	111
23. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	112
24. Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface	113
006 - Airbag systems	114-124
1. Airbag systems	114
2. Terminal 15 voltage supply relay, Seat belt tensioner relay, Fuse holder C	115
3. Centre switch module in dash panel, Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp	116
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, front passenger side, Airbag control unit	117
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	118
6. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	119
7. Front airbag crash sensor for driver side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Driver side knee airbag igniter	120
8. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	121
9. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on front passenger side	122
10. Airbag control unit, Steering column electronics control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	123
11. Buzzer and gong, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	124
007 - 7-speed dual clutch gearbox 0CW (S tronic) , (0EG)	125-129
1. 7-speed dual clutch gearbox 0CW (S tronic) , (0EG)	125
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1	126
3. Selector lever, Gearbox input speed sender 2, Gearbox input speed sender 1, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	127
4. Selector lever, Selector lever locked in position P switch, Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 3, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor	128
5. Control unit in dash panel insert, Data bus diagnostic interface	129
008 - Trailer coupling , (1M5),(1D2)	130-133
1. Trailer coupling , (1M5),(1D2)	130
2. Fuse 1 in fuse holder A, Fuse 4 in fuse holder A, Fuse holder C	131
3. Brake light switch, Trailer detector control unit	132
4. Trailer detector control unit, Trailer socket	133
009 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	134-140
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	134
2. Centre switch module in dash panel, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	135
3. Electromechanical parking brake button, ABS control unit	136
4. Auto-hold button, ABS control unit, Front left ABS inlet valve	137
5. Front left speed sensor, Vacuum sender, ABS control unit, Rear right ABS outlet valve, ABS hydraulic pump, Left parking brake motor, Right parking brake motor	138
6. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Clutch position sender, ABS control unit	139

7. Control unit in dash panel insert, Data bus diagnostic interface, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	140
010 - Auxiliary heater , (9M9)	141-146
1. Auxiliary heater , (9M9)	141
2. Auxiliary heater control unit, Remote control receiver for auxiliary heater	142
3. Auxiliary heater control unit, Remote control receiver for auxiliary heater, Roof aerial	143
4. Auxiliary heater control unit, Combustion air blower, Metering pump, Circulation pump	144
5. Auxiliary heater control unit, Data bus diagnostic interface	145
6. Data bus diagnostic interface	146
011 - Rear parking aid (PDC) , (7X1)	147-150
1. Rear parking aid (PDC) , (7X1)	147
2. Rear parking aid warning buzzer, Terminal 15 voltage supply relay, Parking aid control unit, Onboard supply control unit, Fuse holder C	148
3. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit, Data bus diagnostic interface	149
4. Centre switch module in dash panel, Parking aid button, Parking aid control unit, Button illumination bulb	150
012 - Parking aid (PDC) with no park assist steering (Park Assist) , (7X2)	151-155
1. Parking aid (PDC) with no park assist steering (Park Assist) , (7X2)	151
2. Front parking aid warning buzzer, Terminal 15 voltage supply relay, Parking aid control unit, Onboard supply control unit, Fuse holder C	152
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit, Data bus diagnostic interface	153
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	154
5. Centre switch module in dash panel, Parking aid button, Parking aid control unit, Button illumination bulb	155
013 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	156-161
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	156
2. Front parking aid warning buzzer, Terminal 15 voltage supply relay, Onboard supply control unit, Park assist steering control unit, Fuse holder C	157
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Data bus diagnostic interface, Park assist steering control unit	158
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Rear parking aid warning buzzer, Park assist steering control unit	159
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Park assist steering control unit	160
6. Centre switch module in dash panel, Parking aid button, Park assist steering button, Park assist steering control unit, Button illumination bulb	161
014 - Automatic air conditioning system , (9AK)	162-168
1. Automatic air conditioning system , (9AK)	162
2. Magnetic clutch relay, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse holder C	163
3. Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor	164
4. Evaporator output temperature sender, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	165
5. Sunlight penetration photosensor, Potentiometer for defroster flap control motor, Left vent temperature sender, Right vent temperature sender, Footwell vent temperature sender, Climatronic control unit, Defroster flap control motor	166
6. Fresh air blower control unit, Climatronic control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve, Fresh air blower	167
7. Air quality sensor, Pressure sender for refrigerant circuit	168
015 - Air conditioning system with manual regulation , (KH6)	169-173
1. Air conditioning system with manual regulation , (KH6)	169
2. Magnetic clutch relay, Air conditioning system control unit, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse holder C	170
3. Potentiometer for temperature flap control motor, Evaporator output temperature sender, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Data bus diagnostic interface, Temperature flap control motor, Air distribution flap control motor	171
4. Air conditioning system control unit, Air conditioning system magnetic clutch, Air conditioner compressor regulating valve. Air conditioner compressor. Air recirculation flap control motor	172

5. Pressure sender for refrigerant circuit, Fresh air blower control unit, Air conditioning system control unit, Fresh air blower	173
016 - Manually controlled heater , (9AC)	174-178
1. Manually controlled heater , (9AC)	174
2. Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse holder C	175
3. Heater control unit, Fresh air blower control unit, Fresh air blower	176
4. Heater control unit, Data bus diagnostic interface, Air recirculation flap control motor	177
5. Potentiometer for temperature flap control motor, Potentiometer for air distribution flap control motor, Heater control unit, Temperature flap control motor, Air distribution flap control motor	178
017 - Automatic anti-dazzle interior mirror , (4L6)	179-182
1. Automatic anti-dazzle interior mirror , (4L6)	179
2. Light sensor, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse holder C, Automatic anti-dazzle interior mirror	180
3. Driver door control unit, Front passenger door control unit, Data bus diagnostic interface, Main beam assist control unit, Automatic anti-dazzle interior mirror	181
4. Humidity sender, Rain and light sensor, Onboard supply control unit, Automatic anti-dazzle interior mirror	182
018 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IM)	183-189
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IM)	183
2. Terminal 15 voltage supply relay, Control unit for cornering light and headlight range control, Fuse 1 on fuse holder A, Fuse holder C	184
3. Rear left vehicle level sender, Front left vehicle level sender, Control unit for cornering light and headlight range control	185
4. Left gas discharge bulb control unit, Onboard supply control unit, Output module for left headlight, Left LED module for daytime running light and side light, Front left turn signal bulb, Front left side marker bulb, Left static cornering light	186
5. Onboard supply control unit, Output module for left headlight, Left headlight range control motor	187
6. Right gas discharge bulb control unit, Onboard supply control unit, Output module for right headlight, Right LED module for daytime running light and side light, Front right turn signal bulb, Front right side marker bulb, Right static cornering light	188
7. Output module for right headlight, Right headlight range control motor	189
019 - Battery in engine compartment with start/stop system and energy recovery , (7L6)	190-193
1. Battery in engine compartment with start/stop system and energy recovery , (7L6)	190
2. Alternator, Fuse 2 on fuse holder A	191
3. Centre switch module in dash panel, Start/Stop operation button, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse holder C	192
4. Battery, Starter, Battery monitor control unit, Engine/motor control unit, Starter relay 1, Starter relay 2	193
020 - Gas discharge headlights with automatic headlight range control , (8IG)	194-198
1. Gas discharge headlights with automatic headlight range control , (8IG)	194
2. Rear left vehicle level sender, Terminal 15 voltage supply relay, Headlight range control unit, Fuse 1 on fuse holder A, Fuse holder C	195
3. Left gas discharge bulb control unit, Headlight range control unit, Data bus diagnostic interface, Left gas discharge (xenon) bulb, Left headlight range control motor, Left dip beam screen motor	196
4. Headlight range control unit, Left LED module for daytime running light and side light, Front left turn signal bulb, Front left side marker bulb, Right headlight range control motor	197
5. Right gas discharge bulb control unit, Onboard supply control unit, Control unit for right daytime running light and side light, Right gas discharge (xenon) bulb, Right LED module for daytime running light and side light, Front right turn signal bulb, Front right side marker bulb, Right dip beam screen motor	198
021 - Adjustable lumbar support with electric adjustable seat , (3PB),(7P1)	199-203
1. Adjustable lumbar support with electric adjustable seat , (3PB),(7P1)	199
2. Driver seat lumbar support adjustment switch, Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C	200
3. Driver seat adjustment operating unit	201
4. Driver seat lumbar support adjustment switch	202
5. Front passenger seat lumbar support adjustment switch	203
022 - Seat heating , (4A3)	204-206
1. Seat heating , (4A3)	204
2. Front left seat temperature sender, Onboard supply control unit, Fuse holder C, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat	205
3. Button for left seat heating. Button for right seat heating. Onboard supply control unit. Data	206

bus diagnostic interface, Heated driver seat warning lamp, Heated front passenger seat warning lamp, Heated backrest for front passenger seat	
023 - Adjustable driver and front passenger seats , (3L5)	207-210
1. Adjustable driver and front passenger seats , (3L5)	207
2. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment thermal fuse 1, Fuse holder C	208
3. Driver seat adjustment operating unit	209
4. Front passenger seat adjustment operating unit	210
024 - Interface for special functions , (7G9)	211-212
1. Interface for special functions , (7G9)	211
2. Data bus diagnostic interface, Interface control unit for vehicle location system, Fuse holder C	212
025 - Data bus network	213-225
1. Data bus network	213
2. Light switch, Vehicle inclination sender, Rain and light sensor, Anti-theft alarm sensor, Alarm horn, Sliding sunroof adjustment control unit, Battery monitor control unit, Fuse holder C	214
3. ABS control unit, Electronically controlled damping control unit, Parking aid control unit, All-wheel drive control unit, Power steering control unit, Park assist steering control unit	215
4. Adaptive cruise control unit, Headlight range control unit, Control unit for cornering light and headlight range control, Front left headlight, Front right headlight	216
5. Interior mirror, Auxiliary heater control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Reversing camera system control unit, Front camera for driver assist systems	217
6. Multimedia system operating unit, Climatronic control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	218
7. Heater control unit, Air conditioning system control unit, Driver door control unit, Front passenger door control unit, Entry and start authorisation control unit	219
8. Control unit in dash panel insert, Driver door control unit, Front passenger door control unit, Interface control unit for vehicle location system	220
9. Trailer detector control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for electronic steering column lock	221
10. Selector lever	222
11. Power and control electronics for electric drive, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	223
12. Charging unit 1 for high-voltage battery, Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Brake system pressure accumulator	224
13. Battery regulation control unit, Coupling point on high-voltage battery	225
026 - Radiator fan	226-227
1. Radiator fan	226
2. Radiator fan control unit, Radiator fan, Radiator fan 2	227
027 - Entry and start authorisation , (L0L)	228-231
1. Entry and start authorisation , (L0L)	228
2. Onboard supply control unit, Control unit for electronic steering column lock, Fuse 4 on fuse holder A, Fuse holder C	229
3. Contact sensor for driver exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	230
4. Immobiliser reader coil, Entry and start authorisation button, Contact sensor for front passenger exterior door handle, Control unit in dash panel insert, Entry and start authorisation control unit, Passenger side aerial for entry and start system	231
028 - Electromechanical steering , (L0L)	232-234
1. Electromechanical steering , (L0L)	232
2. Steering angle sender, Power steering control unit, Onboard supply control unit, Steering column electronics control unit, Electromechanical power steering motor	233
3. Control unit in dash panel insert, Data bus diagnostic interface, Electromechanical power steering warning lamp	234
029 - Lane change assist , (7Y1),(7Y5)	235-237
1. Lane change assist , (7Y1),(7Y5)	235
2. Terminal 15 voltage supply relay, Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror, Fuse holder C	236
3. Data bus diagnostic interface, Lane change assist control unit	237
030 - Cigarette lighter and 12 V sockets	238-240
1. Cigarette lighter and 12 V sockets	238
2. Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C, 12 V socket	239
3. Electric socket. Cigarette lighter	240

031 - Automatic adaptive suspension, adjustable dampers , (2H7)	241-244
1. Automatic adaptive suspension, adjustable dampers , (2H7)	241
2. Rear left vehicle level sender, Electronically controlled damping control unit, Data bus diagnostic interface, Fuse 1 on fuse holder A, Fuse holder C	242
3. Front left vehicle level sender, Front right vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	243
4. Centre switch module in dash panel, Rear right vehicle level sender, Electronically controlled damping control unit, Onboard supply control unit, Driving mode selection warning lamp	244
032 - Infotainment MOST bus	245-247
1. Infotainment MOST bus	245
2. Digital sound package control unit, Control unit 1 for information electronics, TV tuner	246
3. Digital sound package control unit, Control unit 1 for information electronics, TV tuner	247
033 - Assist systems , (6K2),(6K3),(6K4),(QK1)	248-250
1. Assist systems , (6K2),(6K3),(6K4),(QK1)	248
2. Terminal 15 voltage supply relay, Adaptive cruise control unit, Fuse holder C	249
3. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Windscreen heater for front sensors	250
034 - Reversing camera (Rear Assist) , (KA2)	251-253
1. Reversing camera (Rear Assist) , (KA2)	251
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder C	252
3. Reversing camera system control unit, Reversing camera	253
035 - All-wheel drive , (1X1)	254-255
1. All-wheel drive , (1X1)	254
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	255
036 - Sliding sunroof (open-sky system) , (3FB)	256-257
1. Sliding sunroof (open-sky system) , (3FB)	256
2. Sunroof button, Sliding sunroof adjustment control unit, Onboard supply control unit, Fuse holder C, Sliding sunroof motor	257
037 - Tail light cluster with LED , (8SP),(8SK)	258-261
1. Tail light cluster with LED , (8SP),(8SK)	258
2. Onboard supply control unit, Fuse holder C	259
3. Onboard supply control unit, Left tail light, Left tail light 2	260
4. Onboard supply control unit, Right tail light, Right tail light 2	261
038 - Auxiliary air heater , (7E6)	262-264
1. Auxiliary air heater , (7E6)	262
2. Low heat output relay, High heat output relay, Fuse holder B, Auxiliary air heater element	263
3. Terminal 30 voltage supply relay, Fuse holder B	264
039 - Multifunction steering wheel , (1XW)	265-268
1. Multifunction steering wheel , (1XW)	265
2. Turn signal switch, Airbag control unit, Steering column electronics control unit, Driver side airbag igniter, Fuse holder C	266
3. Cruise control system switch, Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	267
4. Ignition/starter switch, Intermittent wiper switch, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	268
040 - Fuse assignment	269-293
1. Fuse assignment	269
2. Battery, Battery monitor control unit, Power steering control unit, Fuse 1 in fuse holder A, Fuse 2 in fuse holder A, Fuse 3 in fuse holder A, Fuse 4 in fuse holder A, Fuse 5 in fuse holder A	270
3. Starter relay 1, Starter relay 2, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	271
4. Treble horn, Bass horn, Auxiliary heater control unit, Horn relay, Fuse 15 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse 36 on fuse holder B, Fuse 37 on fuse holder B, Fuse 38 on fuse holder B	272
5. Engine component current supply relay, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 16 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B, Fuse 21 on fuse holder B	273
6. Main relay, Terminal 30 voltage supply relay, High heat output relay, Engine control unit, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 17 on fuse holder B	274
7. Engine control unit, Fuse 3 on fuse holder B, Fuse 31 on fuse holder B, Fuse 32 on fuse holder B	275
8. Fuse 4 on fuse holder B. Fuse 5 on fuse holder B	276

9. Fuse 6 on fuse holder B, Fuse 7 on fuse holder B	277
10. Fuse 8 on fuse holder B	278
11. Automatic glow period control unit, Low heat output relay, Fuse 9 on fuse holder B, Fuse 24 on fuse holder B	279
12. Fuse 10 on fuse holder B, Fuse 13 on fuse holder B, Fuse 14 on fuse holder B, Fuse holder C	280
13. Fuse holder C	281
14. Fuse holder C	282
15. Seat belt tensioner relay, Fuse holder C	283
16. Front passenger seat adjustment thermal fuse 1, Fuse holder C	284
17. Heated rear window relay, Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	285
18. Centre switch module in dash panel, Airbag control unit, Fuse holder C	286
19. Front left headlight, Front right headlight, Fuse holder C	287
20. Fuse holder C	288
21. Fuse holder C	289
22. Fuse holder C	290
23. Fuse holder C	291
24. Fuse holder C	292
25. Fuse holder C	293
041 - Bang & Olufsen sound system , (9VS)	294-297
1. Bang & Olufsen sound system , (9VS)	294
2. Digital sound package control unit, Telephone microphone, Internal microphone, Microphone unit in front roof module, Centre loudspeaker, Left effect loudspeaker, Right effect loudspeaker, Subwoofer, Fuse holder A, Fuse holder C	295
3. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	296
4. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker	297
042 - Radio , (I8A),(GP0)	298-304
1. Radio , (I8A),(GP0)	298
2. Data bus diagnostic interface, Control unit 1 for information electronics, Connection for external audio sources, Fuse 1 on fuse holder A, Fuse holder C	299
3. Multimedia system operating unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker	300
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker, Front right bass loudspeaker	301
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Aerial amplifier, Aerial amplifier 2	302
6. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2, Aerial amplifier 3	303
7. Control unit 1 for information electronics, Aerial amplifier	304
043 - MMI with radio , (I8D),(I8E),(GP0)	305-320
1. MMI with radio , (I8D),(I8E),(GP0)	305
2. Control unit 1 for information electronics, Fuse holder A, Fuse 1 on fuse holder A, Fuse holder C	306
3. Control unit 1 for information electronics	307
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	308
5. Centre switch module in dash panel, Multimedia system operating unit, Display unit button, Control unit 1 for information electronics, Open and close display motor, Pivot mechanism for display	309
6. Multimedia system operating unit, Control unit 1 for information electronics	310
7. Data bus diagnostic interface, Control unit 1 for information electronics	311
8. Reversing camera system control unit, Control unit 1 for information electronics, Microphone unit in front roof module	312
9. Control unit 1 for information electronics, Front left treble loudspeaker, Centre loudspeaker, Subwoofer	313
10. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	314
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	315
12. Control unit 1 for information electronics, Rear right treble loudspeaker, Aerial amplifier, Aerial amplifier 2	316
13. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2, Aerial amplifier 3	317

14. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4	318
15. Control unit 1 for information electronics, Telephone aerial, Roof aerial	319
16. Roof aerial	320
044 - MMI high with navigation system , (I8G),(I8H),(I8S),(GP0)	321-334
1. MMI high with navigation system , (I8G),(I8H),(I8S),(GP0)	321
2. Centre switch module in dash panel, Display unit button, Data bus diagnostic interface, Reversing camera system control unit, Control unit 1 for information electronics, Fuse holder A, Fuse 1 on fuse holder A, Fuse holder C	322
3. Control unit 1 for information electronics	323
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	324
5. Multimedia system operating unit, Control unit 1 for information electronics, Microphone unit in front roof module, Open and close display motor, Pivot mechanism for display	325
6. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Centre loudspeaker, Subwoofer	326
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Aerial amplifier, Aerial amplifier 2	327
8. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Aerial amplifier, Aerial amplifier 3, Aerial amplifier 4	328
9. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker, Aerial amplifier, Aerial amplifier 2, Aerial amplifier 3	329
10. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 2, Roof aerial	330
11. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 4, Roof aerial	331
12. Control unit 1 for information electronics, GPS aerial, Telephone aerial, Aerial amplifier 3	332
13. Control unit 1 for information electronics	333
14. Control unit 1 for information electronics, Aerial amplifier 2 for TV	334
045 - 1.2l petrol engine , CJZA,CYVB	335-352
1. 1.2l petrol engine , CJZA,CYVB	335
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	336
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	337
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	338
5. Centre switch module in dash panel, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	339
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	340
7. Fuel gauge sender, Fuel system pressurisation pump, Engine control unit	341
8. Vacuum sender, Main relay, Engine control unit	342
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	343
10. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Continued coolant circulation pump	344
11. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	345
12. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	346
13. Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure positioner	347
14. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine control unit	348
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	349
16. Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine control unit	350
17. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	351
18. Control unit in dash panel insert, Data bus diagnostic interface	352
046 - 1.4l petrol engine , CPTA,CZEA	353-373
1. 1.4l petrol engine , CPTA,CZEA	353
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	354
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	355
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	356
5. Centre switch module in dash panel, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	357
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	358
7. Fuel gauge sender. Fuel system pressurisation pump. Engine control unit	359

8. Vacuum sender, Main relay, Engine control unit	360
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	361
10. Engine control unit, Changeover valve, Fuel pressure regulating valve, Continued coolant circulation pump	362
11. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	363
12. Engine control unit, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	364
13. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	365
14. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	366
15. Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure positioner	367
16. Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure sender, Engine control unit	368
17. Engine speed sender, Charge pressure sender, Lambda probe, Intake air temperature sender 2, Engine control unit, Lambda probe heater	369
18. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe 1 heater after catalytic converter	370
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine control unit	371
20. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	372
21. Control unit in dash panel insert, Data bus diagnostic interface	373
047 - 1.6l diesel engine , CLHA	374-395
1. 1.6l diesel engine , CLHA	374
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	375
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	376
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	377
5. Start/Stop operation button, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	378
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	379
7. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit	380
8. Terminal 30 voltage supply relay, Engine control unit	381
9. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	382
10. Engine control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Fuel pressure regulating valve, Fuel metering valve	383
11. Engine control unit, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	384
12. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Low heat output relay, High heat output relay, Engine control unit	385
13. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine control unit	386
14. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	387
15. Pressure differential sender, Engine control unit, Exhaust flap control unit	388
16. Air mass meter, Gearbox neutral position sender, Engine control unit	389
17. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit	390
18. Engine speed sender, Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine control unit, Exhaust gas recirculation control motor 2	391
19. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Fuse 8 on fuse holder B, Lambda probe heater, Lambda probe 1 heater after catalytic converter	392
20. Charge pressure sender, Accelerator position sender, Accelerator position sender 2, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler, Engine control unit	393
21. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	394
22. Control unit in dash panel insert, Data bus diagnostic interface	395
048 - 2.0l petrol engine , CHHB,CJXB,CJXC,CJXF,CNTC,CYFB	396-418
1. 2.0l petrol engine , CHHB,CJXB,CJXC,CJXF,CNTC,CYFB	396
2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	397
3. Secondary air pump relay, Engine component current supply relay	398
4. Ignition/starter switch, Centre switch module in dash panel, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Fuse 7 on fuse holder B, Fuse	399

8 on fuse holder B	
5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	400
6. Brake light switch, Brake pedal switch, Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	401
7. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	402
8. Vacuum sender, Engine/motor control unit	403
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Turbocharger air recirculation valve, Intake manifold flap valve	404
10. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	405
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Continued coolant circulation pump	406
12. Engine/motor control unit, Ignition coil 4 with output stage	407
13. Cam adjustment actuator 1, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	408
14. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	409
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	410
16. Radiator outlet coolant temperature sender, Engine/motor control unit, Fuel metering valve	411
17. Hall sender, Coolant temperature sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit	412
18. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	413
19. Intake air temperature sender, Intake manifold pressure sender, Accelerator position sender, Sender 1 for secondary air pressure, Engine/motor control unit, Actuator for engine temperature regulation	414
20. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit, Control unit for fuel tank leak detection	415
21. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine/motor control unit, Secondary air pump motor	416
22. Charge pressure sender, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	417
23. Control unit in dash panel insert, Data bus diagnostic interface	418
049 - Convenience system, 5-door vehicle with lighting package and/or childproof locks , (L0L), (4H5)	419-444
1. Convenience system, 5-door vehicle with lighting package and/or childproof locks , (L0L),(4H5)	419
2. Fuse holder C	420
3. Glass breakage sensor for rear window, Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting	421
4. Front passenger vanity mirror contact switch, Light for cup holder background lighting, Right luggage compartment light	422
5. Front roof module, Rear interior light	423
6. Front roof module, Rear interior light	424
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	425
8. Bonnet contact switch, Bonnet contact switch 2, Anti-theft alarm sensor, Alarm horn	426
9. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Rear childproof lock button, driver side, Rear childproof lock button, passenger side, Driver door control unit	427
10. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Fuel tank flap release button, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	428
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light co ductor for front left sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	429
12. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror o driver side	430
13. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central lockina motor. Driver door central lockina SAFELOCK function motor	431

14. Control unit in dash panel insert, Data bus diagnostic interface	432
15. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK unction motor	433
16. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	434
17. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	435
18. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front right sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	436
19. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear driver side entry light, Light for rear door background lighting, driver side, Rear door warning lamp, driver side	437
20. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Rear driver side window regulator motor	438
21. Rear driver side central locking lock unit, Rear driver side door control unit	439
22. Rear driver side central locking lock unit, Rear driver side door control unit	440
23. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side, Rear door warning lamp, passenger side	441
24. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear passenger side window regulator motor	442
25. Rear passenger side central locking lock unit, Rear passenger side door control unit	443
26. Rear passenger side central locking lock unit, Rear passenger side door control unit	444
050 - Dual clutch gearbox 0D9 , (0ES)	445-449
1. Dual clutch gearbox 0D9 , (0ES)	445
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	446
3. Selector lever, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Solenoid valve 5, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Cooling oil valve, Selector lever position display	447
4. Selector lever, Selector lever locked in position P switch, Gearbox oil temperature sender, Automatic gearbox hydraulic pressure sender 1, Automatic gearbox hydraulic pressure sender 2, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Main pressure valve	448
5. Temperature sender in control unit, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	449
051 - Ring break diagnosis	450-451
1. Ring break diagnosis	450
2. Digital sound package control unit, Control unit 1 for information electronics, TV tuner	451
052 - Tail light cluster with LED, 5-door vehicle , (8SP),(8SK)	452-455
1. Tail light cluster with LED, 5-door vehicle , (8SP),(8SK)	452
2. Onboard supply control unit, Fuse holder C	453
3. Onboard supply control unit, Left tail light, Left tail light 2	454
4. Onboard supply control unit, Right tail light, Right tail light 2	455
053 - Driving school , (F5F)	456-459
1. Driving school , (F5F)	456
2. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C, Fuse holder D, Fuse holder F, Electric socket	457
3. Footwell light switch, Warning buzzer switch, Driving school mode relay, Warning lamp	458
4. Pedal switch for warning buzzer on front passenger side, Driving school mode relay	459
054 - Driving aids for disabled persons with special vehicle control unit , (F6M)	460-463
1. Driving aids for disabled persons with special vehicle control unit , (F6M)	460
2. Special vehicle control unit, Fuse holder C	461
3. Button for driving aids for disabled persons, Data bus diagnostic interface, Special vehicle control unit	462
4. Special vehicle control unit	463
055 - TV tuner , (QV1)	464-470
1. TV tuner . (QV1)	464

2. TV tuner, Fuse holder C	465
3. TV tuner	466
4. TV tuner, Aerial amplifier 2, Aerial amplifier 3	467
5. Aerial amplifier, TV tuner, Aerial amplifier 2	468
6. Aerial amplifier, TV tuner, Aerial amplifier 2, Aerial amplifier 3, Aerial amplifier 4	469
7. TV tuner, Aerial amplifier 1 for TV, Aerial amplifier 2 for TV, Aerial amplifier 3	470
056 - Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	471-473
1. Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	471
2. Alternator, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C	472
3. Battery, Starter, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A	473
057 - Basic equipment, right-hand drive , (L0R)	474-503
1. Basic equipment, right-hand drive , (L0R)	474
2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	475
3. Turn signal switch, Horn plate, Steering column electronics control unit	476
4. Ignition/starter switch, Steering column electronics control unit	477
5. Onboard supply control unit, Steering column electronics control unit	478
6. Onboard supply control unit	479
7. Control unit in dash panel insert, Onboard supply control unit	480
8. Onboard supply control unit, Data bus diagnostic interface	481
9. Onboard supply control unit, Data bus diagnostic interface	482
10. Light switch, Rain and light sensor, Onboard supply control unit	483
11. Onboard supply control unit, Front roof module, Rear interior light	484
12. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	485
13. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	486
14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	487
15. Onboard supply control unit, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	488
16. Brake pedal switch, Clutch position sender, Onboard supply control unit	489
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	490
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Wiper motor control unit, Onboard supply control unit, Right fog light bulb, Windscreen wiper motor	491
19. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	492
20. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	493
21. Rear lid handle release button, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	494
22. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, High-level brake light bulb	495
23. Reversing light switch, Onboard supply control unit, Rear window wiper motor, Windscreen and rear window washer pump	496
24. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	497
25. Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	498
26. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	499
27. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	500
28. Heated rear window relay, Onboard supply control unit, Fuse holder C, Heated rear window	501
29. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	502
30. Onboard supply control unit, Fuse holder C	503
058 - Entry and start authorisation for RHD vehicles , (L0R)	504-509
1. Entry and start authorisation for RHD vehicles , (L0R)	504
2. Control unit for electronic steering column lock, Fuse 4 on fuse holder A, Fuse holder C	505
3. Entry and start authorisation button. Entry and start authorisation control unit. Onboard supply	506

control unit, Control unit for electronic steering column lock	
4. Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system	507
5. Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	508
6. Immobiliser reader coil, Control unit in dash panel insert	509
059 - LED headlights , (8IT)	510-522
1. LED headlights , (8IT)	510
2. Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse 31 on fuse holder B, Fuse 32 on fuse holder B, Fuse holder C	511
3. Rear left vehicle level sender, Control unit for cornering light and headlight range control	512
4. Output module 1 for left LED headlight, Temperature sender 1 for left headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight fan	513
5. Output module 1 for left LED headlight, Temperature sender 2 for left headlight, Temperature sender 3 for left headlight, Front left headlight, Left static cornering light	514
6. Output module 1 for left LED headlight, Output module for left headlight, Front left headlight, Left headlight main beam bulb	515
7. Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor	516
8. Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Front left side marker bulb	517
9. Output module 1 for right LED headlight, Temperature sender 1 for right headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight fan	518
10. Output module 1 for right LED headlight, Temperature sender 2 for right headlight, Temperature sender 3 for right headlight, Front right headlight, Right static cornering light	519
11. Output module 1 for right LED headlight, Output module for right headlight, Front right headlight, Right headlight main beam bulb	520
12. Output module for right headlight, Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor	521
13. Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right side marker bulb	522
060 - Electromechanical steering, right-hand drive , (LOR)	523-525
1. Electromechanical steering, right-hand drive , (LOR)	523
2. Steering angle sender, Power steering control unit, Onboard supply control unit, Electromechanical power steering motor	524
3. Control unit in dash panel insert, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Electromechanical power steering warning lamp	525
061 - Convenience system, right-hand drive , (LOR)	526-545
1. Convenience system, right-hand drive , (LOR)	526
2. Fuse holder C	527
3. Glass breakage sensor for rear window, Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting	528
4. Driver vanity mirror contact switch, Light for cup holder background lighting, Right luggage compartment light	529
5. Front roof module, Rear interior light	530
6. Front roof module, Rear interior light	531
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	532
8. Anti-theft alarm sensor, Alarm horn	533
9. Rear driver side central locking lock unit, Rear door contact switch, driver side, Rear central locking actuator, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	534
10. Rear passenger side central locking lock unit, Rear door contact switch, passenger side, Rear central locking actuator, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	535
11. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit	536
12. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Fuel tank flap release button. Button for deactivating interior monitoring and vehicle inclination sensor. Driver	537

door control unit	
13. Driver door control unit, Central locking SAFELock function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light conductor for front right sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	538
14. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	539
15. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELock function motor	540
16. Control unit in dash panel insert, Data bus diagnostic interface	541
17. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELock function motor	542
18. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	543
19. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	544
20. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	545
062 - Convenience system, 5-door vehicle with lighting package and/or childproof locks, right-hand drive , (LOR),(4H5)	546-571
1. Convenience system, 5-door vehicle with lighting package and/or childproof locks, right-hand drive , (LOR),(4H5)	546
2. Fuse holder C	547
3. Glass breakage sensor for rear window, Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting	548
4. Driver vanity mirror contact switch, Light for cup holder background lighting, Right luggage compartment light	549
5. Front roof module, Rear interior light	550
6. Front roof module, Rear interior light	551
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	552
8. Anti-theft alarm sensor, Alarm horn	553
9. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Rear childproof lock button, driver side, Rear childproof lock button, passenger side, Driver door control unit	554
10. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Fuel tank flap release button, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit	555
11. Driver door control unit, Central locking SAFELock function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light conductor for front right sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	556
12. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	557
13. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELock function motor	558
14. Control unit in dash panel insert, Data bus diagnostic interface	559
15. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELock function motor	560
16. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	561

17. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	562
18. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	563
19. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear driver side entry light, Light for rear door background lighting, driver side, Rear door warning lamp, driver side	564
20. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Rear driver side window regulator motor	565
21. Rear driver side central locking lock unit, Rear driver side door control unit	566
22. Rear driver side central locking lock unit, Rear driver side door control unit	567
23. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side, Rear door warning lamp, passenger side	568
24. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear passenger side window regulator motor	569
25. Rear passenger side central locking lock unit, Rear passenger side door control unit	570
26. Rear passenger side central locking lock unit, Rear passenger side door control unit	571
063 - Basic equipment, 4-door vehicle , (L0L),(5C0)	572-588
1. Basic equipment, 4-door vehicle , (L0L),(5C0)	572
2. Main relay, Terminal 30 voltage supply relay, Horn relay	573
3. Heated rear window relay, Fuse holder C	574
4. Terminal 15 voltage supply relay, Fuse holder C	575
5. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit	576
6. Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	577
7. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	578
8. Onboard supply control unit, Data bus diagnostic interface	579
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	580
10. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Treble horn, Onboard supply control unit, Left fog light bulb, Glove compartment light	581
11. Wiper motor control unit, Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Windscreen wiper motor, Left headlight range control motor	582
12. Brake light switch, Bonnet contact switch, Onboard supply control unit, Washer pump, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	583
13. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	584
14. Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb , Right brake and tail light bulb	585
15. Rear lid handle release button, Reversing light switch, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	586
16. Rear lid contact switch for anti-theft alarm, Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, High-level brake light bulb, Rear lid central locking motor	587
17. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side turn signal repeater bulb	588
064 - Convenience system, 4-door vehicle , (L0L),(4H0),(4H3)	589-607
1. Convenience system, 4-door vehicle , (L0L),(4H0),(4H3)	589
2. Fuse holder C	590
3. Bonnet contact switch, Bonnet contact switch 2, Alarm horn, Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting	591
4. Front passenger vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	592

5. Front roof module, Rear interior light	593
6. Front roof module, Rear interior light	594
7. Anti-theft alarm sensor, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	595
8. Rear driver side central locking lock unit, Rear door contact switch, driver side, Rear central locking actuator, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	596
9. Rear passenger side central locking lock unit, Rear door contact switch, passenger side, Rear central locking actuator, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	597
10. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit	598
11. Rear lid release switch, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Driver side window regulator motor	599
12. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	600
13. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	601
14. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	602
15. Adjustment switch for mirror with fold-in feature, Control unit in dash panel insert, Driver door control unit	603
16. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Data bus diagnostic interface, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	604
17. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	605
18. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side window regulator motor, Light for passenger door background lighting	606
19. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side door warning lamp, Light conductor for front right sill panel moulding background lighting, Passenger side entry light	607
065 - Tail light cluster with LED, 4-door vehicle , (8SP),(8SK)	608-611
1. Tail light cluster with LED, 4-door vehicle , (8SP),(8SK)	608
2. Onboard supply control unit, Left tail light 2, Fuse holder C	609
3. Onboard supply control unit, Left tail light, Right tail light, Left tail light 2	610
4. Onboard supply control unit, Right tail light, Right tail light 2	611
066 - Basic equipment, 4-door RHD vehicles , (L0R)	612-638
1. Basic equipment, 4-door RHD vehicles , (L0R)	612
2. Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	613
3. Turn signal switch, Horn plate, Steering column electronics control unit	614
4. Ignition/starter switch, Steering column electronics control unit	615
5. Onboard supply control unit, Steering column electronics control unit	616
6. Onboard supply control unit	617
7. Control unit in dash panel insert, Onboard supply control unit	618
8. Onboard supply control unit, Data bus diagnostic interface	619
9. Onboard supply control unit, Data bus diagnostic interface	620
10. Light switch, Rain and light sensor, Onboard supply control unit	621
11. Onboard supply control unit, Front roof module, Rear interior light	622
12. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	623
13. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	624

14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	625
15. Onboard supply control unit, Washer pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	626
16. Brake pedal switch, Clutch position sender, Onboard supply control unit	627
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	628
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Wiper motor control unit, Onboard supply control unit, Right fog light bulb, Windscreen wiper motor	629
19. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	630
20. Rear lid handle release button, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	631
21. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor	632
22. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	633
23. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	634
24. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	635
25. Heated rear window relay, Onboard supply control unit, Fuse holder C, Heated rear window	636
26. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	637
27. Onboard supply control unit, Fuse holder C	638
067 - Convenience system, 4-door RHD vehicles , (L0R),(4H0),(4H3)	639-658
1. Convenience system, 4-door RHD vehicles , (L0R),(4H0),(4H3)	639
2. Fuse holder C	640
3. Fuse holder C	641
4. Driver vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	642
5. Front roof module, Rear interior light	643
6. Front roof module, Rear interior light	644
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	645
8. Bonnet contact switch, Bonnet contact switch 2, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn	646
9. Rear driver side central locking lock unit, Rear door contact switch, driver side, Rear central locking actuator, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	647
10. Rear passenger side central locking lock unit, Rear door contact switch, passenger side, Rear central locking actuator, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	648
11. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit	649
12. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination senso , Driver door control unit, Driver side window regulator motor	650
13. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side door warning lamp, Light conductor for front right sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	651
14. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror o driver side	652
15. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	653
16. Control unit in dash panel insert, Data bus diagnostic interface	654
17. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK unction motor	655
18. Front passenger door control unit. Front passenger side turn signal repeater bulb. Front	656

passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	
19. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	657
20. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	658
068 - Convenience system, 4-door vehicle with lighting package and/or childproof locks, right-hand drive, (L0R),(4H5)	659-684
1. Convenience system, 4-door vehicle with lighting package and/or childproof locks, right-hand drive, (L0R),(4H5)	659
2. Fuse holder C	660
3. Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting, Fuse holder C	661
4. Driver vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	662
5. Front roof module, Rear interior light	663
6. Front roof module, Rear interior light	664
7. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	665
8. Anti-theft alarm sensor, Alarm horn	666
9. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Rear childproof lock button, driver side, Rear childproof lock button, passenger side, Driver door control unit	667
10. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Driver side window regulator motor	668
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side door warning lamp, Light conductor for front right sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	669
12. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	670
13. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	671
14. Control unit in dash panel insert, Data bus diagnostic interface	672
15. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	673
16. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	674
17. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	675
18. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	676
19. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear driver side entry light, Light for rear door background lighting, driver side, Rear door warning lamp, driver side	677
20. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Rear driver side window regulator motor	678
21. Rear driver side central locking lock unit, Rear driver side door control unit	679
22. Rear driver side central locking lock unit, Rear driver side door control unit	680
23. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination. Rear passenger side entry light. Light for rear door background lighting. passenger	681

side, Rear door warning lamp, passenger side	
24. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear passenger side window regulator motor	682
25. Rear passenger side central locking lock unit, Rear passenger side door control unit	683
26. Rear passenger side central locking lock unit, Rear passenger side door control unit	684
069 - Convenience system, 4-door vehicle with lighting package and/or childproof locks , (L0L), (4H5)	685-708
1. Convenience system, 4-door vehicle with lighting package and/or childproof locks , (L0L),(4H5)	685
2. Fuse holder C	686
3. Bonnet contact switch, Bonnet contact switch 2, Alarm horn, Light for left dashboard background lighting, Light for right dashboard background lighting, Light for centre dashboard background lighting	687
4. Front passenger vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	688
5. Front roof module, Rear interior light	689
6. Front roof module, Rear interior light	690
7. Anti-theft alarm sensor, Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	691
8. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Rear childproof lock button, driver side, Rear childproof lock button, passenger side, Driver door control unit	692
9. Rear lid release switch, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Driver side window regulator motor	693
10. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for driver door background lighting, Driver side entry light	694
11. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	695
12. Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	696
13. Adjustment switch for mirror with fold-in feature, Control unit in dash panel insert, Driver door control unit	697
14. Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Data bus diagnostic interface, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	698
15. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	699
16. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side window regulator motor, Light for passenger door background lighting	700
17. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side door warning lamp, Light conductor for front right sill panel moulding background lighting, Passenger side entry light	701
18. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Rear driver side entry light, Light for rear door background lighting, driver side, Rear door warning lamp, driver side	702
19. Rear driver side window regulator button, Rear driver side central locking lock unit, Rear driver side door control unit, Light for rear driver side interior door handle illumination	703
20. Rear driver side central locking lock unit, Rear driver side door control unit	704
21. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear driver side door control unit, Rear passenger side door control unit, Rear driver side window regulator motor, Rear passenger side entry light, Rear door warning lamp, passenger side	705
22. Rear passenger side central locking lock unit, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Light for rear door background lighting, passenger side	706

23. Rear passenger side central locking lock unit, Rear passenger side door control unit	707
24. Rear passenger side door control unit, Rear passenger side window regulator motor	708
070 - Airbag systems , (L0L)	709-722
1. Airbag systems , (L0L)	709
2. Centre switch module in dash panel, Airbag control unit, Terminal 15 voltage supply relay, Warning lamp for airbag deactivated on front passenger side, Fuse holder C	710
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Battery isolation igniter	711
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	712
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	713
6. Centre crash sensor for pedestrian protection, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	714
7. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Airbag control unit	715
8. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	716
9. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	717
10. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	718
11. Front airbag crash sensor for driver side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter	719
12. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	720
13. Airbag control unit, Data bus diagnostic interface	721
14. Buzzer and gong, Control unit in dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	722
071 - Trailer coupling , (1M5),(1D2)	723-726
1. Trailer coupling , (1M5),(1D2)	723
2. Fuse holder C, Fuse holder D	724
3. Brake light switch, Trailer detector control unit	725
4. Trailer detector control unit, Trailer socket	726
072 - All-wheel drive , (1X1)	727-729
1. All-wheel drive , (1X1)	727
2. All-wheel drive control unit, Fuse holder C	728
3. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface	729
073 - 1.4l petrol engine , CPWA	730-750
1. 1.4l petrol engine , CPWA	730
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	731
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	732
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	733
5. Centre switch module in dash panel, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	734
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	735
7. Fuel gauge sender, Fuel system pressurisation pump, Engine control unit	736
8. Main relay, Engine control unit	737
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	738
10. Engine control unit, Fuel pressure regulating valve, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Continued coolant circulation pump	739
11. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, High-pressure valve for gas mode, Valve for oil pressure control	740
12. Engine control unit, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4	741
13. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	742
14. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	743
15. Hall sender, Coolant temperature sender, Accelerator position sender, Accelerator position sender 2, Engine control unit, Charge pressure positioner	744
16. Fuel pressure sender, Tank pressure sensor, Gas rail sensor, Engine control unit	745
17. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine control unit	746
18. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	747

19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine control unit	748
20. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	749
21. Control unit in dash panel insert, Data bus diagnostic interface	750
074 - Airbag systems for RHD vehicles , (LOR)	751-762
1. Airbag systems for RHD vehicles , (LOR)	751
2. Centre switch module in dash panel, Airbag control unit, Terminal 15 voltage supply relay, Warning lamp for airbag deactivated on front passenger side, Fuse holder C	752
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Battery isolation igniter	753
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	754
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	755
6. Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	756
7. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	757
8. Front airbag crash sensor for driver side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Driver side knee airbag igniter	758
9. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	759
10. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	760
11. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	761
12. Buzzer and gong, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	762
075 - Fuse assignment	763-798
1. Fuse assignment	763
2. Battery, Power steering control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A	764
3. Starter relay 1, Starter relay 2, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	765
4. Treble horn, Bass horn, Auxiliary heater control unit, Horn relay, Fuse 15 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse 37 on fuse holder B	766
5. Engine component current supply relay, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 16 on fuse holder B	767
6. High heat output relay, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 20 on fuse holder B	768
7. Main relay, Terminal 30 voltage supply relay, Battery monitor control unit, Engine/motor control unit, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B	769
8. Air conditioning system relay, Engine/motor control unit, Fuse 3 on fuse holder B	770
9. Current supply relay, Fuse 32 on fuse holder B	771
10. Fuse 4 on fuse holder B	772
11. Fuse 5 on fuse holder B, Fuse 6 on fuse holder B	773
12. Fuse 7 on fuse holder B	774
13. Fuse 8 on fuse holder B, Auxiliary pump for heating, Lambda probe heater, Lambda probe 1 heater after catalytic converter	775
14. Automatic glow period control unit, Fuse 9 on fuse holder B	776
15. Low heat output relay, Fuse 24 on fuse holder B, Fuse 31 on fuse holder B	777
16. Fuse 10 on fuse holder B, Fuse 13 on fuse holder B	778
17. Fuse holder C	779
18. Fuse holder C	780
19. Fuse holder C	781
20. Front passenger seat adjustment thermal fuse 1, Fuse holder C	782
21. Heated rear window relay, Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	783
22. Airbag control unit, Fuse holder C	784
23. Fuse holder C	785
24. Fuse holder C	786
25. Fuse holder C	787
26. Fuse holder C	788
27. Relay for reducing agent metering system. Fuse holder C	789

28. Fuse holder C	790
29. Fuse holder C	791
30. Fuse holder C, Fuse holder F, Fuse holder H	792
31. Fuse holder D	793
32. Relay for neck heating	794
33. Control unit for left neck heating, Control unit for right neck heating	795
34. Air mass meter, Heater element for crankcase breather, Valve for oil pressure control	796
35. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Adaptive cruise control unit, Camshaft control valve 1	797
36. Front camera for driver assist systems	798
076 - 1.6l diesel engine , CRKB	799-822
1. 1.6l diesel engine , CRKB	799
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	800
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	801
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	802
5. Start/Stop operation button, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	803
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	804
7. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit	805
8. Terminal 30 voltage supply relay, Engine control unit	806
9. Automatic glow period control unit, Engine control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	807
10. Low heat output relay, High heat output relay, Engine control unit, Heater element for crankcase breather	808
11. Engine control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve	809
12. Engine control unit, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	810
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine control unit	811
14. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine control unit	812
15. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	813
16. Pressure differential sender, Engine control unit, Exhaust flap control unit	814
17. Air mass meter, Gearbox neutral position sender, Engine control unit	815
18. Hall sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine control unit	816
19. Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine control unit, Exhaust gas recirculation control motor 2	817
20. Engine speed sender, Charge air temperature sender after charge air cooler, Engine control unit, Exhaust gas recirculation control motor	818
21. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Fuse 8 on fuse holder B, Lambda probe heater, Lambda probe 1 heater after catalytic converter	819
22. Charge pressure sender, Accelerator position sender, Water level sender, Accelerator position sender 2, Exhaust gas pressure sensor 1, Engine control unit	820
23. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	821
24. Control unit in dash panel insert, Data bus diagnostic interface	822
077 - Airbag systems for RHD vehicles , (L0R)	823-833
1. Airbag systems for RHD vehicles , (L0R)	823
2. Terminal 15 voltage supply relay, Seat belt tensioner relay, Fuse holder C	824
3. Centre switch module in dash panel, Key operated switch to deactivate front passenger side airbag, Airbag control unit, Front passenger side airbag deactivated warning lamp	825
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	826
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	827
6. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	828
7. Front airbag crash sensor for driver side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Driver side knee airbag igniter	829
8. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner. Driver seat belt tensioner igniter 1. Front passenger seat belt tensioner igniter 1	830

9. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	831
10. Airbag control unit, Steering column electronics control unit, Driver side airbag igniter, Front passenger side airbag igniter 1	832
11. Buzzer and gong, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	833
078 - Basic equipment , (L0L),(5C0)	834-860
1. Basic equipment , (L0L),(5C0)	834
2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	835
3. Turn signal switch, Horn plate, Steering column electronics control unit	836
4. Ignition/starter switch, Steering column electronics control unit	837
5. Onboard supply control unit, Steering column electronics control unit	838
6. Onboard supply control unit	839
7. Control unit in dash panel insert, Onboard supply control unit	840
8. Onboard supply control unit, Data bus diagnostic interface	841
9. Onboard supply control unit, Data bus diagnostic interface	842
10. Light switch, Rain and light sensor, Onboard supply control unit	843
11. Onboard supply control unit, Front interior light	844
12. Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	845
13. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	846
14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	847
15. Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Washer pump, Left washer jet heater element, Right washer jet heater element	848
16. Brake pedal switch, Clutch position sender, Onboard supply control unit	849
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	850
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Tank filler flap locking motor	851
19. Rear lid handle release button, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Number plate light	852
20. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	853
21. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor	854
22. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	855
23. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	856
24. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	857
25. Heated rear window relay, Onboard supply control unit, Fuse holder C	858
26. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	859
27. Onboard supply control unit, Fuse holder C	860
079 - Convenience system , (L0L)	861-878
1. Convenience system , (L0L)	861
2. Fuse holder C	862
3. Fuse holder C	863
4. Front passenger vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	864
5. Front interior light	865
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	866
7. Bonnet contact switch, Bonnet contact switch 2, Anti-theft alarm sensor, Alarm horn	867
8. Control unit with rear driver side window regulator motor, Control unit with rear passenger side window regulator motor, Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	868
9. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button. in driver door. Driver door control unit	869

10. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination senso , Driver door control unit, Light for driver door background lighting	870
11. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light co ductor for front left sill panel moulding background lighting, Driver side entry light	871
12. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror o driver side	872
13. Microswitch for lowering driver window, Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	873
14. Control unit in dash panel insert, Data bus diagnostic interface	874
15. Microswitch for lowering front passenger window, Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking moto , Front passenger door central locking SAFELOCK function motor	875
16. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	876
17. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Light for passenger door background lighting	877
18. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side window regulator motor, Front passenger side door warning lamp, Light conductor for fro t right sill panel moulding background lighting, Passenger side entry light	878
080 - Neck heating	879-882
1. Neck heating	879
2. Terminal 15 voltage supply relay, Relay for neck heating, Fuse holder C, Fuse holder H	880
3. Control unit for left neck heating, Control unit for right neck heating, Blower for left neck heating, Blower for right neck heating	881
4. Climatronic control unit, Data bus diagnostic interface	882
081 - Bang & Olufsen sound system , (9VS)	883-889
1. Bang & Olufsen sound system , (9VS)	883
2. Digital sound package control unit, Fuse holder A, Fuse holder C	884
3. Digital sound package control unit, Telephone microphone, Internal microphone, Microphone unit in front roof module	885
4. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker, Centre loudspeaker	886
5. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	887
6. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	888
7. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker	889
082 - Tail light cluster with LED , (8SP),(8SK)	890-893
1. Tail light cluster with LED , (8SP),(8SK)	890
2. Onboard supply control unit, Fuse holder C	891
3. Onboard supply control unit, Left tail light, Left tail light 2	892
4. Onboard supply control unit, Right tail light, Right tail light 2	893
083 - Battery in engine compartment with start/stop system and energy recovery , (7L6)	894-897
1. Battery in engine compartment with start/stop system and energy recovery , (7L6)	894
2. Alternator, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C	895
3. Battery, Starter, Centre switch module in dash panel, Battery monitor control unit, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A	896
4. Data bus diagnostic interface	897
084 - Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	898-900
1. Battery in engine compartment with no start/stop system and no energy recovery , (7L3)	898
2. Alternator, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C	899
3. Batterv. Starter. Engine/motor control unit. Starter relav 1. Starter relav 2. Fuse 3 on fuse	900

holder A, Fuse 5 on fuse holder A	
085 - All-wheel drive , (1X1)	901-902
1. All-wheel drive , (1X1)	901
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	902
086 - Airbag systems (US equipment) , (5C1)	903-911
1. Airbag systems (US equipment) , (5C1)	903
2. Centre switch module in dash panel, Airbag control unit, Terminal 15 voltage supply relay, Warning lamp for airbag deactivated on front passenger side, Fuse holder A, Fuse holder C	904
3. Driver side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit	905
4. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	906
5. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter, Front passenger side knee airbag igniter	907
6. Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	908
7. Airbag control unit, Control unit for front right belt tensioner, Airbag igniter 1 on front passenger side, Front passenger seat belt tensioner igniter 1, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	909
8. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	910
9. Buzzer and gong, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	911
087 - Basic equipment (Canada, Mexico, USA) , (L0L),(5C1),(A8U)	912-928
1. Basic equipment (Canada, Mexico, USA) , (L0L),(5C1),(A8U)	912
2. Main relay, Terminal 30 voltage supply relay, Horn relay	913
3. Heated rear window relay, Fuse holder C	914
4. Terminal 15 voltage supply relay, Fuse holder C	915
5. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Horn plate, Steering column electronics control unit	916
6. Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	917
7. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	918
8. Onboard supply control unit, Data bus diagnostic interface	919
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	920
10. Glove compartment light switch, Hazard warning lights button, Treble horn, Onboard supply control unit, Left fog light bulb, Glove compartment light	921
11. Wiper motor control unit, Onboard supply control unit, Left daytime running light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb , Windscreen wiper motor	922
12. Brake light switch, Bonnet contact switch, Onboard supply control unit, Washer pump, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	923
13. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb	924
14. Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Rear left side marker bulb, Rear right side marker bulb	925
15. Reversing light switch, Ambient temperature sensor, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	926
16. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor	927
17. Driver side central locking lock unit, Front passenger side central locking lock unit, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	928
088 - Power operated convertible roof	929-938

1. Power operated convertible roof	929
2. Heated rear window relay, Fuse 1 on fuse holder A, Fuse holder C	930
3. Terminal 15 voltage supply relay, Fuse 4 on fuse holder A, Fuse holder C	931
4. Convertible roof actuation control unit	932
5. Convertible roof stowed switch, Convertible roof front switch, Convertible roof actuation control unit	933
6. Convertible roof latch open switch, Convertible roof latch closed switch, Convertible roof box lid open switch, Tensioning strut top switch, Tensioning strut bottom switch, Convertible roof actuation control unit	934
7. Convertible roof box lid released switch, Convertible roof box lid locked switch, Convertible roof actuation control unit, Convertible roof box lid lock motor, Convertible roof lock motor, Heated rear window	935
8. Left switch for convertible roof closed, Right switch for convertible roof closed, Convertible roof box lid closed switch, Convertible roof box switch, bottom, Convertible roof actuation control unit	936
9. Convertible roof actuation button, Auto-hold button, Convertible roof actuation control unit, Onboard supply control unit	937
10. Convertible roof actuation control unit, Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	938
089 - Airbag systems , (L0L)	939-948
1. Airbag systems , (L0L)	939
2. Terminal 15 voltage supply relay, Fuse holder C	940
3. Centre switch module in dash panel, Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	941
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	942
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	943
6. Front airbag crash sensor for driver side, Airbag control unit, Driver side knee airbag igniter, Trigger for driver side roll-over bar, Trigger for passenger side roll-over bar	944
7. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	945
8. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	946
9. Airbag control unit, Data bus diagnostic interface	947
10. Buzzer and gong, Control unit in dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	948
090 - 2.0l diesel engine , CRUA,DEJA,DEJB	949-970
1. 2.0l diesel engine , CRUA,DEJA,DEJB	949
2. Relay for reducing agent metering system, Fuse holder C	950
3. Terminal 30 voltage supply relay, Low heat output relay, High heat output relay	951
4. Automatic glow period control unit	952
5. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse 8 on fuse holder B	953
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	954
7. Engine/motor control unit	955
8. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	956
9. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Air mass meter, Fuel pump control unit, Engine/motor control unit	957
10. Engine/motor control unit, Charge pressure control solenoid valve, Heater element for crankcase breather, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve	958
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	959
12. Radiator outlet coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Charge air temperature sender before charge air cooler, Engine/motor control unit	960
13. Coolant temperature sender, Fuel temperature sender, Pressure differential sender, Engine/motor control unit	961
14. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Position sender for charge pressure positioner, Engine/motor control unit	962
15. Hall sender. Fuel pressure sender for low pressure. Engine/motor control unit	963

16. Engine speed sender, Throttle valve potentiometer, Exhaust gas recirculation potentiometer 2, Throttle valve module, Engine/motor control unit, Exhaust gas recirculation control motor 2	964
17. Lambda probe, Fuel pressure sender, Engine/motor control unit, Exhaust gas recirculation control motor, Lambda probe heater	965
18. Charge pressure sender, Water level sender, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler, Control unit for NOx sender, Engine/motor control unit	966
19. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Heater for reducing agent line (heater circuit 2)	967
20. Delivery unit for reducing agent metering system, Reducing agent level sender, Engine/motor control unit, Pump for reducing agent, Reducing agent return flow pump	968
21. Engine/motor control unit, Exhaust flap control unit, Injector for reducing agent	969
22. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	970
091 - Basic equipment, right-hand drive , (LOR)	971-997
1. Basic equipment, right-hand drive , (LOR)	971
2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	972
3. Turn signal switch, Horn plate, Steering column electronics control unit	973
4. Ignition/starter switch, Steering column electronics control unit	974
5. Onboard supply control unit, Steering column electronics control unit	975
6. Onboard supply control unit	976
7. Control unit in dash panel insert, Onboard supply control unit	977
8. Onboard supply control unit, Data bus diagnostic interface	978
9. Onboard supply control unit, Data bus diagnostic interface	979
10. Light switch, Rain and light sensor, Onboard supply control unit	980
11. Onboard supply control unit, Front interior light	981
12. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	982
13. Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	983
14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	984
15. Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Washer pump, Left washer jet heater element, Right washer jet heater element	985
16. Brake pedal switch, Clutch position sender, Onboard supply control unit	986
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	987
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Tank filler flap locking motor	988
19. Rear lid handle release button, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Number plate light	989
20. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	990
21. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor	991
22. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	992
23. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	993
24. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	994
25. Heated rear window relay, Onboard supply control unit, Fuse holder C	995
26. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	996
27. Onboard supply control unit, Fuse holder C	997
092 - Convenience system, right-hand drive , (LOR)	998-1015
1. Convenience system, right-hand drive , (LOR)	998
2. Fuse holder C	999
3. Fuse holder C	1000
4. Driver vanity mirror contact switch, Light for cup holder background lighting, Luggage compartment light	1001
5. Front interior light	1002
6. Left footwell light, Right footwell light, Rear left footwell light, Rear right footwell light	1003
7. Anti-theft alarm sensor, Alarm horn	1004
8. Control unit with rear driver side window regulator motor. Control unit with rear passenger side	1005

window regulator motor, Light for rear door background lighting, driver side, Light for rear door background lighting, passenger side	
9. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side mirror adjustment motor 2, Front passenger side fold-in mirror motor, Front passenger side mirror adjustment motor, Automatic anti-dazzle exterior mirror, passenger side, Heated exterior mirror on passenger side	1006
10. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	1007
11. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Front passenger side door warning lamp, Light conductor for front left sill panel moulding background lighting, Light for passenger door background lighting, Passenger side entry light	1008
12. Microswitch for lowering front passenger window, Front passenger door contact switch, Front passenger side central locking lock unit, Passenger side central locking actuator, Front passenger door control unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	1009
13. Control unit in dash panel insert, Data bus diagnostic interface	1010
14. Microswitch for lowering driver window, Driver door contact switch, Driver side central locking lock unit, Driver side contact switch in lock cylinder, Driver side central locking actuator, Driver door control unit, Driver door central locking motor, Driver door central locking SAFELOCK function motor	1011
15. Mirror adjustment switch, Mirror adjustment changeover switch, Adjustment switch for mirror with fold-in feature, Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Light for driver door background lighting	1012
16. Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver side door warning lamp, Light conductor for front right sill panel moulding background lighting, Driver side entry light	1013
17. Driver door control unit, Driver side turn signal repeater bulb, Driver side mirror adjustment motor 2, Driver side fold-in mirror motor, Driver side mirror adjustment motor, Automatic anti-dazzle exterior mirror, driver side, Heated exterior mirror on driver side	1014
18. Central switch for window regulators in driver door, Operating unit for window regulator in driver door, Front driver side window regulator button, Rear driver side window regulator button, in driver door, Rear passenger side window regulator button, in driver door, Front passenger side window regulator button, in driver door, Driver door control unit	1015
093 - Airbag systems for RHD vehicles, (LOR)	1016-1025
1. Airbag systems for RHD vehicles, (LOR)	1016
2. Centre switch module in dash panel, Airbag control unit, Terminal 15 voltage supply relay, Warning lamp for airbag deactivated on front passenger side, Fuse holder C	1017
3. Key operated switch to deactivate airbag on front passenger side, Airbag control unit	1018
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	1019
5. Acceleration sender, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1020
6. Front airbag crash sensor for driver side, Airbag control unit, Driver side knee airbag igniter, Trigger for driver side roll-over bar, Trigger for passenger side roll-over bar	1021
7. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	1022
8. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	1023
9. Airbag control unit, Data bus diagnostic interface	1024
10. Buzzer and gong, Control unit in dash panel insert, Seat belt warning system warning lamp, Airbag warning lamp	1025
094 - 1.4l petrol engine, CSSA,DBWA	1026-1044
1. 1.4l petrol engine, CSSA,DBWA	1026
2. Ignition/starter switch, Cruise control system switch, Steering column electronics control unit	1027
3. Onboard supply control unit, Steering column electronics control unit, Engine control unit	1028
4. Oil level and oil temperature sender, Clutch position sender, Onboard supply control unit, Engine control unit	1029
5. Centre switch module in dash panel, Brake light switch, Brake pedal switch, Onboard supply control unit, Engine control unit	1030
6. Terminal 15 voltage supply relay, Onboard supply control unit, Engine control unit, Fuse holder C	1031
7. Fuel gauge sender. Fuel system pressurisation pump. Engine control unit	1032

8. Main relay, Engine control unit	1033
9. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1034
10. Engine control unit, Charge pressure control solenoid valve, Fuel pressure regulating valve, Continued coolant circulation pump	1035
11. Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	1036
12. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage	1037
13. Engine control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1038
14. Hall sender, Coolant temperature sender, Accelerator position sender, Hall sender 2, Accelerator position sender 2, Engine control unit	1039
15. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine control unit	1040
16. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1041
17. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Throttle valve module, Engine control unit	1042
18. Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	1043
19. Control unit in dash panel insert, Data bus diagnostic interface	1044
095 - 1.4l petrol engine , CUKB,CXUA	1045-1062
1. 1.4l petrol engine , CUKB,CXUA	1045
2. Main relay	1046
3. Ignition/starter switch, Centre switch module in dash panel, Cruise control system switch, Driving program button, Onboard supply control unit, Steering column electronics control unit	1047
4. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuel system diagnostic pump	1048
5. Oil level and oil temperature sender, Engine/motor control unit	1049
6. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1050
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1051
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant valve for gearbox	1052
9. Engine/motor control unit, Fuel metering valve, Coolant changeover valve 1, Coolant changeover valve 2, Coolant pump for high-temperature circuit, Coolant pump for high-voltage battery	1053
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Coolant pump for low-temperature circuit	1054
11. Engine/motor control unit, Ignition coil 4 with output stage, Secondary air pump motor	1055
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1056
13. Hall sender, Hall sender 2, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	1057
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Tank pressure sensor, Engine temperature sender 2, Engine/motor control unit	1058
15. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1059
16. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Fuel tank shut-off valve, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1060
17. Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1061
18. Control unit in dash panel insert, Data bus diagnostic interface	1062
096 - High-voltage system , (0K3)	1063-1084
1. High-voltage system , (0K3)	1063
2. Battery, Battery monitor control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B, Fuse holder C	1064
3. Terminal 15 voltage supply relay, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse holder B, Fuse 16 on fuse holder B, Fuse 24 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse holder C	1065
4. Air conditioning system relay, Coolant shortage indicator control unit, Fuse holder B, Fuse 4 on fuse holder B	1066
5. Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery	1067
6. Airbaa control unit. Couplina point on high-voltaae batterv	1068

7. Hybrid battery unit, High-voltage wiring harness for high-voltage battery, Coupling point on high-voltage battery	1069
8. DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit, High-voltage wiring harness for high-voltage battery	1070
9. Power and control electronics for electric drive, Three-phase current drive	1071
10. Power and control electronics for electric drive, High-voltage wiring harness for drive motor, Three-phase current drive, Electric drive motor	1072
11. Charging unit 1 for high-voltage battery	1073
12. Charging unit 1 for high-voltage battery, Control unit for air conditioner compressor	1074
13. Charging unit 1 for high-voltage battery, High-voltage heater (PTC) control unit	1075
14. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	1076
15. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, High-voltage battery charging socket 1	1077
16. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, High-voltage battery charging socket 1	1078
17. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Engine sound generator control unit	1079
18. Onboard supply control unit, Engine sound generator control unit, Brake servo, Actuator 1 for engine sound generator, Tank filler flap locking motor	1080
19. Onboard supply control unit, Brake servo, Tank filler flap locking motor	1081
20. Brake servo, Brake system pressure accumulator	1082
21. Engine/motor control unit, Emergency call module control unit and communication unit, Refrigerant shut-off valve for heater and air conditioning unit, Refrigerant shut-off valve for high-voltage battery heat exchanger, Roof aerial	1083
22. Data bus diagnostic interface, Emergency call module control unit and communication unit	1084
097 - Basic equipment (Canada, Mexico, USA) , (L0L),(5C1)	1085-1111
1. Basic equipment (Canada, Mexico, USA) , (L0L),(5C1)	1085
2. Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit	1086
3. Turn signal switch, Horn plate, Steering column electronics control unit	1087
4. Ignition/starter switch, Steering column electronics control unit	1088
5. Onboard supply control unit, Steering column electronics control unit	1089
6. Onboard supply control unit	1090
7. Control unit in dash panel insert, Onboard supply control unit	1091
8. Onboard supply control unit, Data bus diagnostic interface	1092
9. Onboard supply control unit, Data bus diagnostic interface	1093
10. Light switch, Rain and light sensor, Onboard supply control unit	1094
11. Onboard supply control unit, Front interior light	1095
12. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	1096
13. Onboard supply control unit, Left daytime running light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb	1097
14. Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb, Headlight washer system pump	1098
15. Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Washer pump, Left washer jet heater element, Right washer jet heater element	1099
16. Brake light switch, Onboard supply control unit, Tank filler flap locking motor	1100
17. Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb	1101
18. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb	1102
19. Rear lid handle release button, Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, Rear left side marker bulb, Rear right side marker bulb, Number plate light	1103
20. Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb	1104
21. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, High-level brake light bulb, Rear lid central locking motor	1105
22. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	1106
23. Driver side central locking lock unit, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1107
24. Front passenger side central locking lock unit. Front passenger door control unit. Onboard	1108

supply control unit, Front passenger side turn signal repeater bulb	
25. Heated rear window relay, Onboard supply control unit, Fuse holder C	1109
26. Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	1110
27. Onboard supply control unit, Fuse holder C	1111
098 - Air conditioning system for models with high-voltage system , (9AK),(0K3)	1112-1119
1. Air conditioning system for models with high-voltage system , (9AK),(0K3)	1112
2. Climatronic control unit, Terminal 15 voltage supply relay, Fuse 1 on fuse holder A, Fuse holder C, Fuse 35 on fuse holder B	1113
3. Footwell vent temperature sender, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Evaporator output temperature sender, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor	1114
4. Potentiometer for defroster flap control motor, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Defroster flap control motor, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	1115
5. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit, Refrigerant shut-off valve for heater and air conditioner unit, Refrigerant shut-off valve for high-voltage battery heat exchanger	1116
6. Pressure sender for refrigerant circuit, Fresh air blower control unit, Climatronic control unit, Data bus diagnostic interface, Fresh air blower	1117
7. Charging unit 1 for high-voltage battery, Air quality sensor, Refrigerant pressure and temperature sender, Control unit for air conditioning compressor	1118
8. Charging unit 1 for high-voltage battery, High-voltage heater (PTC) control unit	1119
099 - Dual clutch gearbox 0DD , (0IC)	1120-1125
1. Dual clutch gearbox 0DD , (0IC)	1120
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	1121
3. Selector lever, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Hydraulic pump motor, Selector lever position display	1122
4. Selector lever, Gearbox input speed sender 2, Mechatronic unit for dual clutch gearbox, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6	1123
5. Selector lever, Selector lever locked in position P switch, Temperature sender in control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1124
6. Control unit in dash panel insert, Data bus diagnostic interface	1125
100 - Airbag systems (US equipment) , (5C1)	1126-1135
1. Airbag systems (US equipment) , (5C1)	1126
2. Terminal 15 voltage supply relay, Fuse holder C	1127
3. Centre switch module in dash panel, Driver side belt switch, Airbag control unit, Warning lamp for airbag deactivated on front passenger side	1128
4. Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit	1129
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1130
6. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Trigger for driver side roll-over bar, Trigger for passenger side roll-over bar	1131
7. Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side knee airbag igniter, Front passenger side knee airbag igniter	1132
8. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1	1133
9. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side	1134
10. Buzzer and gong, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	1135
101 - Trailer coupling , (1M5),(1D2)	1136-1140
1. Trailer coupling , (1M5),(1D2)	1136
2. Fuse holder C, Fuse holder D	1137
3. Trailer detector control unit	1138
4. Trailer detector control unit, Trailer socket	1139
5. Trailer detector control unit, Trailer socket	1140
102 - 1.8l petrol engine , CUFA	1141-1160
1. 1.8l petrol engine , CUFA	1141
2. Main relay, Starter relay 1, Starter relay 2	1142
3. Centre switch module in dash panel. Cruise control system switch. Onboard supply control unit.	1143

Steering column electronics control unit	
4. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine control unit	1144
5. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Vacuum sender, Engine control unit	1145
6. Fuel gauge sender, Fuel system pressurisation pump, Engine control unit	1146
7. Fuel gauge sender, Fuel system pressurisation pump, Engine control unit	1147
8. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1148
9. Engine control unit, Injector, cylinder 4, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1149
10. Radiator outlet coolant temperature sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	1150
11. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	1151
12. Actuator 1 for camshaft adjustment, Engine control unit, Ignition coil 4 with output stage	1152
13. Actuator 2 for camshaft adjustment, Actuator 3 for camshaft adjustment, Actuator 4 for camshaft adjustment, Actuator 5 for camshaft adjustment, Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Engine control unit	1153
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine control unit, Coolant shut-off valve, Coolant valve for gearbox	1154
15. Engine temperature sender, Engine speed sender, Knock sensor 1, Hall sender 3, Intake manifold flap potentiometer, Engine control unit	1155
16. Hall sender, Fuel pressure sender, Engine control unit, Continued coolant circulation pump, Charge pressure positioner	1156
17. Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Gearbox neutral position sender, Engine control unit	1157
18. Lambda probe, Accelerator position sender 2, Throttle valve module, Engine control unit	1158
19. Lambda probe after catalytic converter, Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	1159
20. Control unit in dash panel insert, Data bus diagnostic interface	1160
103 - 7-speed dual clutch gearbox 0DE (S tronic) , (0IE)	1161-1166
1. 7-speed dual clutch gearbox 0DE (S tronic) , (0IE)	1161
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	1162
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	1163
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	1164
5. Selector lever, Selector lever locked in position P switch, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1165
6. Control unit in dash panel insert, Data bus diagnostic interface	1166
104 - Basic equipment (Canada, Mexico, USA) , (L0L),(5C1)	1167-1184
1. Basic equipment (Canada, Mexico, USA) , (L0L),(5C1)	1167
2. Horn relay, Fuse holder C	1168
3. Heated rear window relay, Fuse holder C, Heated rear window	1169
4. Terminal 15 voltage supply relay, Fuse holder C	1170
5. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit	1171
6. Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1172
7. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	1173
8. Onboard supply control unit, Data bus diagnostic interface	1174
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	1175
10. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	1176
11. Treble horn, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb	1177
12. Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	1178
13. Bonnet contact switch, Bass horn, Onboard supply control unit, Right fog light bulb, Windscreen and rear window washer pump	1179
14. Bonnet contact switch 2. Front right brake pad wear sender. Onboard supply control unit. Right	1180

daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb, Tank filler flap locking motor	
15. Onboard supply control unit, High-level brake light bulb, Rear window wiper motor	1181
16. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1182
17. Brake fluid level warning contact, Coolant shortage indicator switch, Driver side central locking lock unit, Ambient temperature sensor, Windscreen washer fluid level sender, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1183
18. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side turn signal repeater bulb	1184
105 - Basic equipment , (L0L),(5C0)	1185-1203
1. Basic equipment , (L0L),(5C0)	1185
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1186
3. Heated rear window relay, Fuse holder C, Heated rear window	1187
4. Terminal 15 voltage supply relay, Fuse holder C	1188
5. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	1189
6. Ignition/starter switch, Turn signal switch, Onboard supply control unit, Steering column electronics control unit	1190
7. Control unit in dash panel insert, Onboard supply control unit, Steering column electronics control unit	1191
8. Onboard supply control unit, Data bus diagnostic interface	1192
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	1193
10. Glove compartment light switch, Onboard supply control unit, Front roof module, Glove compartment light	1194
11. Centre switch module in dash panel, Hazard warning lights button, Onboard supply control unit, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	1195
12. Bonnet contact switch, Treble horn, Wiper motor control unit, Onboard supply control unit, Left fog light bulb, Windscreen wiper motor, Headlight washer system pump	1196
13. Brake pedal switch, Clutch position sender, Onboard supply control unit, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	1197
14. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	1198
15. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1199
16. Rear lid handle release button, Reversing light switch, Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right reversing light bulb, Rear window wiper motor, Windscreen and rear window washer pump	1200
17. Brake fluid level warning contact, Coolant shortage indicator switch, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1201
18. Driver side central locking lock unit, Ambient temperature sensor, Windscreen washer fluid level sender, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1202
19. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side turn signal repeater bulb	1203
106 - Basic equipment , (L0L),(5C0)	1204-1222
1. Basic equipment , (L0L),(5C0)	1204
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1205
3. Heated rear window relay, Fuse holder C, Heated rear window	1206
4. Terminal 15 voltage supply relay, Fuse holder C	1207
5. Ignition/starter switch, Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	1208
6. Turn signal switch, Onboard supply control unit, Steering column electronics control unit	1209
7. Control unit in dash panel insert, Onboard supply control unit, Steering column electronics control unit	1210
8. Onboard supply control unit, Data bus diagnostic interface	1211
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	1212
10. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Front roof module, Glove compartment light	1213
11. Treble horn. Onboard supply control unit. Left fog light bulb. Left daytime running light bulb.	1214

Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	
12. Bonnet contact switch, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	1215
13. Brake pedal switch, Clutch position sender, Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	1216
14. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right headlight range control motor, Tank filler flap locking motor	1217
15. Onboard supply control unit, Right fog light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1218
16. Rear lid handle release button, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb, Rear window wiper motor, Windscreen and rear window washer pump	1219
17. Reversing light switch, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1220
18. Brake fluid level warning contact, Coolant shortage indicator switch, Driver side central locking lock unit, Ambient temperature sensor, Windscreen washer fluid level sender, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1221
19. Front passenger side central locking lock unit, Front passenger door control unit, Front passenger side turn signal repeater bulb	1222
107 - Basic equipment, right-hand drive , (LOR)	1223-1241
1. Basic equipment, right-hand drive , (LOR)	1223
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1224
3. Heated rear window relay, Fuse holder C, Heated rear window	1225
4. Terminal 15 voltage supply relay, Fuse holder C	1226
5. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	1227
6. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1228
7. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	1229
8. Light switch, Onboard supply control unit, Data bus diagnostic interface	1230
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	1231
10. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Glove compartment light	1232
11. Treble horn, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb	1233
12. Bonnet contact switch, Onboard supply control unit, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	1234
13. Brake light switch, Clutch position sender, Onboard supply control unit, Right daytime running light bulb, Front right headlight, Right side light bulb, Front right turn signal bulb, Right headlight main beam bulb	1235
14. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Wiper motor control unit, Onboard supply control unit, Right fog light bulb, Front right headlight, Right headlight dipped beam bulb, Windscreen wiper motor	1236
15. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1237
16. Rear lid handle release button, Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Rear window wiper motor, Windscreen and rear window washer pump	1238
17. Reversing light switch, Brake fluid level warning contact, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1239
18. Coolant shortage indicator switch, Driver side central locking lock unit, Ambient temperature sensor, Windscreen washer fluid level sender, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1240
19. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	1241
108 - Basic equipment, right-hand drive , (LOR)	1242-1260
1. Basic equipment, right-hand drive , (LOR)	1242
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1243
3. Heated rear window relay, Fuse holder C, Heated rear window	1244
4. Terminal 15 voltage supply relay, Fuse holder C	1245

5. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Horn plate, Steering column electronics control unit, Fuse holder C	1246
6. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1247
7. Control unit in dash panel insert, Onboard supply control unit, Data bus diagnostic interface	1248
8. Light switch, Onboard supply control unit, Data bus diagnostic interface	1249
9. Light switch, Rain and light sensor, Onboard supply control unit, Front roof module, Rear interior light	1250
10. Centre switch module in dash panel, Glove compartment light switch, Hazard warning lights button, Onboard supply control unit, Front roof module, Glove compartment light	1251
11. Treble horn, Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Left side light bulb, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	1252
12. Bonnet contact switch, Onboard supply control unit, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	1253
13. Brake pedal switch, Clutch position sender, Onboard supply control unit, Right daytime running light bulb, Right side light bulb, Front right turn signal bulb, Right headlight main beam bulb	1254
14. Bonnet contact switch 2, Front right brake pad wear sender, Bass horn, Wiper motor control unit, Onboard supply control unit, Right headlight dipped beam bulb, Windscreen wiper motor	1255
15. Onboard supply control unit, Right fog light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1256
16. Rear lid handle release button, Onboard supply control unit, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb, Left tail light and rear fog light bulb, Right tail light and rear fog light bulb, Rear window wiper motor, Windscreen and rear window washer pump	1257
17. Reversing light switch, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1258
18. Brake fluid level warning contact, Coolant shortage indicator switch, Driver side central locking lock unit, Ambient temperature sensor, Windscreen washer fluid level sender, Driver door control unit, Onboard supply control unit, Driver side turn signal repeater bulb	1259
19. Front passenger side central locking lock unit, Front passenger door control unit, Onboard supply control unit, Front passenger side turn signal repeater bulb	1260
109 - Tail light cluster with LED , (8SP),(8SK)	1261-1264
1. Tail light cluster with LED , (8SP),(8SK)	1261
2. Onboard supply control unit, Left tail light 2, Fuse holder C	1262
3. Onboard supply control unit, Left tail light, Right tail light, Left tail light 2	1263
4. Onboard supply control unit, Right tail light, Right tail light 2	1264
110 - Tail light cluster with LED , (8SP),(8SK)	1265-1268
1. Tail light cluster with LED , (8SP),(8SK)	1265
2. Onboard supply control unit, Fuse holder C	1266
3. Onboard supply control unit, Left tail light, Right tail light, Left tail light 2	1267
4. Onboard supply control unit, Right tail light, Right tail light 2	1268
111 - Tail light cluster with LED, only models with US equipment , (8SP),(8SK),(5C1)	1269-1272
1. Tail light cluster with LED, only models with US equipment , (8SP),(8SK),(5C1)	1269
2. Onboard supply control unit, Left tail light 2, Fuse holder C	1270
3. Onboard supply control unit, Left tail light, Right tail light, Left tail light 2	1271
4. Onboard supply control unit, Right tail light, Right tail light 2	1272
112 - 2.5l petrol engine , CZGB	1273-1290
1. 2.5l petrol engine , CZGB	1273
2. Main relay, Starter relay 1	1274
3. Additional coolant pump relay, Engine component current supply relay, Starter relay 2	1275
4. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Fuse 8 on fuse holder B	1276
5. Start/Stop operation button, Brake light switch, Brake pedal switch, Onboard supply control unit, Steering column electronics control unit, Engine control unit	1277
6. Fuel gauge sender, Fuel system pressurisation pump, Fuel pump control unit, Engine control unit	1278
7. Engine control unit	1279
8. Coolant temperature sender, Engine control unit, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1	1280
9. Charge pressure sender, Fuel pressure sender, Intake air temperature sender 2, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine control unit	1281
10. Engine speed sender, Hall sender, Intake manifold pressure sender, Hall sender 3, Engine control unit	1282
11. Knock sensor 1, Knock sensor 2, Engine control unit, Exhaust flap control unit, Exhaust flap control unit 2	1283

12. Oil pressure switch, Oil level and oil temperature sender, Engine control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	1284
13. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Solenoid for coolant circuit, Continued coolant circulation pump	1285
14. Oil pressure switch for reduced oil pressure, Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1286
15. Lambda probe, Lambda probe after catalytic converter, Engine control unit, Ignition coil 5 with output stage, Lambda probe heater	1287
16. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine control unit, Mechatronic unit for dual clutch gearbox	1288
17. Control unit in dash panel insert, Data bus diagnostic interface, Engine control unit, Mechatronic unit for dual clutch gearbox	1289
18. Control unit in dash panel insert	1290
113 - Battery in luggage compartment , CZGB	1291-1295
1. Battery in luggage compartment , CZGB	1291
2. Battery, Battery monitor control unit	1292
3. Battery monitor control unit, Data bus diagnostic interface, Battery isolation igniter, Terminal 30 wiring junction 2	1293
4. Starter, Alternator, Radiator fan control unit, Engine/motor control unit, Starter relay 2, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A	1294
5. Engine/motor control unit, Starter relay 1	1295
114 - 7-speed dual clutch gearbox 0BH (S tronic) , (0EX)	1296-1301
1. 7-speed dual clutch gearbox 0BH (S tronic) , (0EX)	1296
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	1297
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	1298
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	1299
5. Selector lever, Selector lever locked in position P switch, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1300
6. Control unit in dash panel insert, Data bus diagnostic interface	1301
115 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CZGB,DAZA	1302-1308
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , CZGB,DAZA	1302
2. Terminal 15 voltage supply relay, Fuse holder C	1303
3. Centre switch module in dash panel, Button for TCS and electronic stabilisation program, Electromechanical parking brake button, Onboard supply control unit	1304
4. Auto-hold button, ABS control unit, Front left ABS inlet valve	1305
5. Rear left speed sensor, Vacuum sender, ABS control unit, ABS hydraulic pump, Left parking brake motor, Right parking brake motor	1306
6. Rear right speed sensor, Front right speed sensor, Front left speed sensor, ABS control unit, Rear right ABS outlet valve	1307
7. Control unit in dash panel insert, Data bus diagnostic interface, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	1308
116 - Interface for special functions , CZGB	1309-1310
1. Interface for special functions , CZGB	1309
2. Data bus diagnostic interface, Interface control unit for vehicle location system, Fuse holder C	1310
117 - Multifunction steering wheel , CZGB	1311-1314
1. Multifunction steering wheel , CZGB	1311
2. Turn signal switch, Airbag control unit, Steering column electronics control unit, Driver side airbag igniter, Fuse holder C	1312
3. Cruise control system switch, Multifunction buttons on left in steering wheel, Tiptronic switch (shift down), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	1313
4. Ignition/starter switch, Intermittent wiper switch, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	1314
118 - LED headlights , CZGB	1315-1327
1. LED headlights , CZGB	1315
2. Terminal 15 voltage supply relay, Fuse holder C	1316
3. Rear left vehicle level sender. Control unit for cornering light and headlight range control	1317

4. Output module 1 for left LED headlight, Temperature sender 1 for left headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight fan	1318
5. Output module 1 for left LED headlight, Temperature sender 2 for left headlight, Temperature sender 3 for left headlight, Front left headlight, Left static cornering light	1319
6. Output module 1 for left LED headlight, Output module for left headlight, Front left headlight, Left headlight main beam bulb	1320
7. Onboard supply control unit, Output module for left headlight, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight range control motor	1321
8. Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb	1322
9. Output module 1 for right LED headlight, Temperature sender 1 for right headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight fan	1323
10. Output module 1 for right LED headlight, Temperature sender 2 for right headlight, Temperature sender 3 for right headlight, Front right headlight, Right static cornering light	1324
11. Output module 1 for right LED headlight, Output module for right headlight, Front right headlight, Right headlight main beam bulb	1325
12. Output module for right headlight, Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor	1326
13. Control unit for right daytime running light and side light, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb	1327
119 - Automatic air conditioning system , CZGB,DAZA,DNWA	1328-1333
1. Automatic air conditioning system , CZGB,DAZA,DNWA	1328
2. Climatronic control unit, Terminal 15 voltage supply relay, Fuse holder C	1329
3. Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Potentiometer for front air distribution flap control motor, Climatronic control unit, Left temperature flap control motor, Right temperature flap control motor, Front air distribution flap control motor	1330
4. Potentiometer for defroster flap control motor, Footwell vent temperature sender, Evaporator output temperature sender, Potentiometer for fresh air/air recirculation, air flow flap control motor, Climatronic control unit, Defroster flap control motor, Fresh air/air recirculation, air flow flap control motor	1331
5. Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Climatronic control unit, Data bus diagnostic interface, Air conditioner compressor regulating valve	1332
6. Air quality sensor, Pressure sender for refrigerant circuit, Fresh air blower control unit, Climatronic control unit, Fresh air blower	1333
120 - Air conditioning system with manual regulation , CZGB,DAZA	1334-1338
1. Air conditioning system with manual regulation , CZGB,DAZA	1334
2. Air conditioning system control unit, Terminal 15 voltage supply relay, Fuse holder C, Air recirculation flap control motor	1335
3. Potentiometer for temperature flap control motor, Evaporator output temperature sender, Potentiometer for air distribution flap control motor, Air conditioning system control unit, Data bus diagnostic interface, Temperature flap control motor, Air distribution flap control motor	1336
4. Fresh air blower control unit, Air conditioning system control unit, Air conditioner compressor regulating valve, Fresh air blower	1337
5. Pressure sender for refrigerant circuit	1338
121 - Fuse assignment , CZGB	1339-1357
1. Fuse assignment , CZGB	1339
2. Starter, Power steering control unit, Fuse 1 on fuse holder A, Fuse 1 on fuse holder B, Fuse 2 on fuse holder A, Fuse 2 on fuse holder B, Fuse 4 on fuse holder A, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B	1340
3. Starter relay 1, Starter relay 2, Fuse 13 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	1341
4. Treble horn, Bass horn, Auxiliary heater control unit, Horn relay, Engine component current supply relay, Fuse 15 on fuse holder B, Fuse 16 on fuse holder B, Fuse 37 on fuse holder B	1342
5. Main relay, Engine control unit, Fuse 3 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	1343
6. Fuse 4 on fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B	1344
7. Additional coolant pump relay, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	1345
8. Fuse 14 on fuse holder B, Fuse 31 on fuse holder B, Fuse holder C	1346
9. Fuse holder C	1347
10. Fuse holder C	1348
11. Fuse holder C	1349
12. Heated rear window relav. Front passenger seat adjustment thermal fuse 1. Fuse holder C	1350

13. Airbag control unit, Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	1351
14. Fuse holder C	1352
15. Air quality sensor, Headlight range control unit, Control unit for cornering light and headlight range control, Fuse holder C, Automatic anti-dazzle interior mirror	1353
16. Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems, Fuse holder C	1354
17. Fuse holder C	1355
18. Fuse holder C	1356
19. Driver seat lumbar support adjustment switch, Fuse holder C, Fuse holder D	1357
122 - 1.4l petrol engine , CWLA	1358-1372
1. 1.4l petrol engine , CWLA	1358
2. Main relay	1359
3. Ignition/starter switch, Centre switch module in dash panel, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1360
4. Oil level and oil temperature sender, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	1361
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1362
6. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1363
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1364
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	1365
9. Hall sender, Hall sender 2, Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	1366
10. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1367
11. Knock sensor 1, Coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit, Charge pressure positioner	1368
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1369
13. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1370
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1371
15. Radiator outlet coolant temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1372
123 - 1.6l diesel engine , DBKA	1373-1395
1. 1.6l diesel engine , DBKA	1373
2. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1374
3. Centre switch module in dash panel, Start/Stop operation button, Terminal 30 voltage supply relay, Onboard supply control unit	1375
4. Automatic glow period control unit, Terminal 15 voltage supply relay, Fuse holder C	1376
5. Low heat output relay, High heat output relay, Engine/motor control unit	1377
6. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Engine/motor control unit	1378
7. Clutch position sender, Engine/motor control unit	1379
8. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1380
9. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1381
10. Engine/motor control unit	1382
11. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	1383
12. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1384
13. Air mass meter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Charge pressure control solenoid valve	1385
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Fuel temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	1386
15. Water level sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit, Heater element for crankcase breather	1387
16. Coolant temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Exhaust flap control unit	1388
17. Pressure differential sender. Position sender for charge pressure positioner. Engine/motor	1389

control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	
18. Charge pressure sender, Hall sender, Throttle valve potentiometer, Fuel pressure sender, Throttle valve module, Engine/motor control unit	1390
19. Engine speed sender, Accelerator position sender, Accelerator position sender 2, Exhaust gas recirculation potentiometer 2, Engine/motor control unit, Exhaust gas recirculation control motor 2	1391
20. Lambda probe, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor, Lambda probe heater	1392
21. Lambda probe after catalytic converter, Data bus diagnostic interface, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head, Lambda probe 1 heater after catalytic converter	1393
22. Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1394
23. Control unit in dash panel insert	1395
124 - 1.6l diesel engine , CXXB,CRKB,DDYA	1396-1416
1. 1.6l diesel engine , CXXB,CRKB,DDYA	1396
2. Terminal 15 voltage supply relay, Fuse holder C	1397
3. Terminal 30 voltage supply relay	1398
4. Automatic glow period control unit, Low heat output relay, High heat output relay	1399
5. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse 8 on fuse holder B	1400
6. Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Charge pressure control solenoid valve	1401
7. Oil level and oil temperature sender, Engine/motor control unit	1402
8. Brake light switch, Brake pedal switch, Clutch position sender, Engine/motor control unit	1403
9. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1404
10. Engine/motor control unit, Heater element for crankcase breather	1405
11. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1406
12. Engine/motor control unit, Camshaft control valve 1, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	1407
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit, Fuel pressure regulating valve	1408
14. Coolant temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Pressure differential sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	1409
15. Charge pressure sender, Throttle valve potentiometer, Fuel pressure sender, Position sender for charge pressure positioner, Throttle valve module, Engine/motor control unit	1410
16. Hall sender, Exhaust gas recirculation potentiometer, Engine/motor control unit, Exhaust gas recirculation control motor, Exhaust gas recirculation control motor 2	1411
17. Engine speed sender, Exhaust gas temperature sender 2, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	1412
18. Air mass meter, Water level sender, Exhaust gas temperature sender 3, Engine/motor control unit, Injector, cylinder 1	1413
19. Lambda probe, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Lambda probe heater	1414
20. Lambda probe after catalytic converter, Data bus diagnostic interface, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1415
21. Control unit in dash panel insert, Data bus diagnostic interface	1416
125 - 2.0l diesel engine , DBGA	1417-1437
1. 2.0l diesel engine , DBGA	1417
2. Ignition/starter switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit	1418
3. Terminal 30 voltage supply relay, Onboard supply control unit	1419
4. Automatic glow period control unit	1420
5. Oil level and oil temperature sender, Low heat output relay, High heat output relay, Engine/motor control unit	1421
6. Brake pedal switch, Engine/motor control unit	1422
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1423
8. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1424
9. Engine/motor control unit	1425
10. Engine/motor control unit, Glow plug 1	1426
11. Air mass meter, Engine/motor control unit, Glow plug 2, Glow plug 3, Glow plug 4	1427
12. Pressure sender 2 for exhaust gas recirculation. Engine/motor control unit. Charge pressure	1428

control solenoid valve, Heater element for crankcase breather, Fuel pressure regulating valve, Fuel metering valve	
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Charge air cooling pump, Auxiliary pump for heating	1429
14. Water level sender, Exhaust gas temperature sender 3, Engine/motor control unit, Exhaust flap control unit	1430
15. Coolant temperature sender, Exhaust gas temperature sender 1, Pressure differential sender, Position sender for charge pressure positioner, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	1431
16. Hall sender, Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1432
17. Charge pressure sender, Lambda probe, Throttle valve potentiometer, Throttle valve module, Engine/motor control unit, Lambda probe heater	1433
18. Engine speed sender, Fuel pressure sender for low pressure, Exhaust gas recirculation potentiometer 2, Engine/motor control unit, Exhaust gas recirculation control motor 2	1434
19. Accelerator position sender, Accelerator position sender 2, Data bus diagnostic interface, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	1435
20. Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1436
21. Control unit in dash panel insert	1437
126 - 6-speed automatic gearbox , (0ER)	1438-1443
1. 6-speed automatic gearbox , (0ER)	1438
2. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Onboard supply control unit	1439
3. Selector lever, Automatic gearbox control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	1440
4. Multifunction switch, Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 5	1441
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 7	1442
6. Automatic gearbox control unit, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Gearbox, Automatic gearbox pressure regulating valve 2	1443
127 - 2.0l diesel engine , CRBC,CRBD,CRFA,CRFB,CRFC,CUPA	1444-1466
1. 2.0l diesel engine , CRBC,CRBD,CRFA,CRFB,CRFC,CUPA	1444
2. Terminal 30 voltage supply relay, Onboard supply control unit, Fuse holder B	1445
3. Terminal 15 voltage supply relay, Low heat output relay, High heat output relay, Fuse holder B, Fuse 8 on fuse holder B, Fuse holder C	1446
4. Automatic glow period control unit, Steering column electronics control unit, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Fuse holder B	1447
5. Pressure differential sender, Gearbox neutral position sender, Charge air temperature sender before charge air cooler, Engine/motor control unit, Exhaust flap control unit	1448
6. Oil level and oil temperature sender, Engine/motor control unit	1449
7. Brake light switch, Brake pedal switch, Clutch position sender, Engine/motor control unit	1450
8. Engine/motor control unit	1451
9. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1452
10. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1453
11. Engine/motor control unit	1454
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	1455
13. Air mass meter, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Heater element for crankcase breather, Fuel pressure regulating valve	1456
14. Engine/motor control unit, Charge pressure control solenoid valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	1457
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	1458
16. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Engine/motor control unit	1459
17. Engine speed sender, Throttle valve potentiometer, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1460
18. Fuel pressure sender, Exhaust gas recirculation potentiometer 2, Engine/motor control unit, Exhaust gas recirculation control motor, Exhaust gas recirculation control motor 2	1461
19. Charge pressure sender, Water level sender, Exhaust gas pressure sensor 1, Charge air temperature sender after charge air cooler. Engine/motor control unit	1462

20. Lambda probe, Position sender for charge pressure positioner, Engine/motor control unit, Lambda probe heater	1463
21. Hall sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	1464
22. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1465
23. Fuel gauge sender 2, Control unit in dash panel insert	1466
128 - 2.0l diesel engine , CRLB,CRLC,CUNA,DCYA,DGCA	1467-1488
1. 2.0l diesel engine , CRLB,CRLC,CUNA,DCYA,DGCA	1467
2. Terminal 30 voltage supply relay, Terminal 15 voltage supply relay, Fuse 8 on fuse holder B, Fuse holder C	1468
3. Automatic glow period control unit	1469
4. Low heat output relay, High heat output relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Coolant valve for cylinder head	1470
5. Engine speed sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Valve for oil pressure control	1471
6. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Engine/motor control unit	1472
7. Clutch position sender, Engine/motor control unit	1473
8. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1474
9. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel pump control unit, Engine/motor control unit	1475
10. Engine/motor control unit	1476
11. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	1477
12. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1478
13. Air mass meter, Engine/motor control unit, Heater element for crankcase breather	1479
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Charge pressure control solenoid valve, Charge air cooling pump, Auxiliary pump for heating	1480
15. Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	1481
16. Water level sender, Pressure differential sender, Position sender for charge pressure positioner, Engine/motor control unit	1482
17. Hall sender, Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1483
18. Charge pressure sender, Throttle valve potentiometer, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1484
19. Exhaust gas recirculation potentiometer, Exhaust gas recirculation potentiometer 2, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Exhaust gas recirculation control motor, Exhaust gas recirculation control motor 2	1485
20. Lambda probe, Coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1486
21. Fuel temperature sender, Exhaust gas temperature sender 1, Data bus diagnostic interface, Engine/motor control unit	1487
22. Fuel gauge sender 2, Control unit in dash panel insert, Data bus diagnostic interface	1488
129 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	1489-1494
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	1489
2. Button for TCS and electronic stabilisation program, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder C	1490
3. Electromechanical parking brake button, ABS control unit	1491
4. Auto-hold button, ABS control unit, Front left ABS inlet valve	1492
5. Front right speed sensor, Rear left speed sensor, Front left speed sensor, Clutch position sender, Vacuum sender, ABS control unit, Rear right ABS outlet valve, ABS hydraulic pump, Left parking brake motor, Right parking brake motor	1493
6. Rear right speed sensor, ABS control unit, Control unit in dash panel insert, Data bus diagnostic interface, Brake system warning lamp, Warning lamp for electronic stabilisation program and TCS	1494
130 - 1.8l petrol engine , CJSA,CJSB,CNSB	1495-1515
1. 1.8l petrol engine , CJSA,CJSB,CNSB	1495
2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	1496
3. Secondary air pump relay, Engine component current supply relay	1497
4. Ignition/starter switch, Centre switch module in dash panel, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B	1498
5. Oil level and oil temperature sender, Clutch position sender, Engine control unit	1499
6. Brake light switch. Brake pedal switch. Fuel gauge sender. Fuel delivery unit. Fuel system	1500

	pressurisation pump, Engine control unit	
	7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine control unit	1501
	8. Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1502
	9. Engine control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1503
	10. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	1504
	11. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1505
	12. Vacuum sender, Engine control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Secondary air pump motor	1506
	13. Actuator 1 for camshaft adjustment, Actuator 2 for camshaft adjustment, Actuator 3 for camshaft adjustment, Actuator 4 for camshaft adjustment, Actuator 5 for camshaft adjustment, Engine control unit, Injector 2, cylinder 3, Injector 2, cylinder 4	1507
	14. Oil pressure switch, Actuator 6 for camshaft adjustment, Actuator 7 for camshaft adjustment, Actuator 8 for camshaft adjustment, Oil pressure switch for reduced oil pressure, Engine control unit, Coolant shut-off valve, Coolant valve for gearbox	1508
	15. Intake manifold sender, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine control unit, Fuel metering valve	1509
	16. Hall sender, Fuel pressure sender, Hall sender 3, Engine control unit, Charge pressure positioner	1510
	17. Engine speed sender, Intake manifold flap potentiometer, Sender 1 for secondary air pressure, Engine control unit, Actuator for engine temperature regulation	1511
	18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine control unit, Control unit for fuel tank leak detection	1512
	19. Accelerator pedal module, Knock sensor 1, Throttle valve module, Engine control unit	1513
	20. Charge pressure sender, Gearbox neutral position sender, Engine control unit, Mechatronic unit for dual clutch gearbox	1514
	21. Control unit in dash panel insert, Data bus diagnostic interface	1515
131 -	2.0l petrol engine , CHHB,CJXB,CJXC,CJXF,CNTC,CYFB,CJXG,CJXD	1516-1539
	1. 2.0l petrol engine , CHHB,CJXB,CJXC,CJXF,CNTC,CYFB,CJXG,CJXD	1516
	2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	1517
	3. Secondary air pump relay, Engine component current supply relay, Fuse 8 on fuse holder B	1518
	4. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse 7 on fuse holder B	1519
	5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	1520
	6. Brake light switch, Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1521
	7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1522
	8. Vacuum sender, Engine/motor control unit	1523
	9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1524
	10. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Secondary air pump motor	1525
	11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	1526
	12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1527
	13. Engine/motor control unit, Fuel metering valve, Continued coolant circulation pump	1528
	14. Cam adjustment actuator 1, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	1529
	15. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	1530
	16. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	1531
	17. Radiator outlet coolant temperature sender, Engine/motor control unit	1532
	18. Hall sender, Coolant temperature sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit	1533
	19. Engine speed sender, Fuel pressure sender, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	1534
	20. Intake manifold sender, Intake air temperature sender, Intake manifold pressure sender, Engine/motor control unit, Control unit for fuel tank leak detection, Actuator for engine temperature regulation	1535

21. Accelerator pedal module, Knock sensor 1, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1536
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit	1537
23. Charge pressure sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1538
24. Control unit in dash panel insert	1539
132 - 1.8l petrol engine , CUFA	1540-1558
1. 1.8l petrol engine , CUFA	1540
2. Main relay, Starter relay 1, Starter relay 2	1541
3. Mechatronic unit for dual clutch gearbox	1542
4. Accelerator position sender 2, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	1543
5. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Vacuum sender, Engine/motor control unit	1544
6. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	1545
7. Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	1546
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1547
9. Engine/motor control unit, Injector, cylinder 4, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1548
10. Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	1549
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1550
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit	1551
13. Oil pressure switch, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	1552
14. Oil pressure switch for reduced oil pressure, Engine temperature sender, Knock sensor 1, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit	1553
15. Engine speed sender, Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	1554
16. Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Gearbox neutral position sender, Engine/motor control unit, Continued coolant circulation pump	1555
17. Lambda probe, Throttle valve module, Engine/motor control unit	1556
18. Lambda probe after catalytic converter, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1557
19. Control unit in dash panel insert, Data bus diagnostic interface	1558
133 - 1.4l petrol engine , CZCC	1559-1573
1. 1.4l petrol engine , CZCC	1559
2. Terminal 15 voltage supply relay, Fuse holder C	1560
3. Main relay, Onboard supply control unit	1561
4. Oil pressure switch, Oil pressure switch for reduced oil pressure, Accelerator position sender, Accelerator position sender 2, Steering column electronics control unit, Engine/motor control unit	1562
5. Oil level and oil temperature sender, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	1563
6. Brake light switch, Brake pedal switch, Engine/motor control unit	1564
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1565
8. Engine/motor control unit, Injector, cylinder 1	1566
9. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Valve for oil pressure control	1567
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1568
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Continued coolant circulation pump, Charge pressure positioner	1569
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1570
13. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1571
14. Radiator outlet coolant temperature sender, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1572
15. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1573
134 - 1.2l petrol engine , CJZA,CYVB	1574-1588
1. 1.2l petrol engine . CJZA.CYVB	1574

2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	1575
3. Radiator outlet coolant temperature sender, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	1576
4. Oil pressure switch for reduced oil pressure, Accelerator position sender, Accelerator position sender 2, Gearbox neutral position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1577
5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	1578
6. Brake light switch, Brake pedal switch, Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1579
7. Engine/motor control unit	1580
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1581
9. Vacuum sender, Engine/motor control unit, Ignition coil 1 with output stage, Fuel pressure regulating valve, Continued coolant circulation pump	1582
10. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1583
11. Hall sender, Coolant temperature sender, Engine/motor control unit, Camshaft control valve 1, Charge pressure positioner	1584
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1585
13. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1586
14. Throttle valve module, Data bus diagnostic interface, Engine/motor control unit	1587
15. Control unit in dash panel insert, Data bus diagnostic interface	1588
135 - 1.4l petrol engine , CWLA	1589-1603
1. 1.4l petrol engine , CWLA	1589
2. Main relay, Fuse holder B	1590
3. Radiator outlet coolant temperature sender, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder B	1591
4. Oil pressure switch, Oil pressure switch for reduced oil pressure, Oil level and oil temperature sender, Gearbox neutral position sender, Engine/motor control unit	1592
5. Brake light switch, Brake pedal switch, Engine/motor control unit	1593
6. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1594
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1595
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control	1596
9. Hall sender, Hall sender 2, Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	1597
10. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1598
11. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	1599
12. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1600
13. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1601
14. Lambda probe, Lambda probe after catalytic converter, Data bus diagnostic interface, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1602
15. Control unit in dash panel insert, Data bus diagnostic interface	1603
136 - 1.4l petrol engine , CSSA,DBWA	1604-1618
1. 1.4l petrol engine , CSSA,DBWA	1604
2. Main relay, Terminal 15 voltage supply relay, Fuse holder C	1605
3. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1606
4. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1607
5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	1608
6. Brake light switch, Brake pedal switch, Fuel gauge sender, Fuel system pressurisation pump, Engine/motor control unit	1609
7. Engine/motor control unit	1610
8. Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1611
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Continued coolant circulation pump	1612

10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1613
11. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1614
12. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine/motor control unit, Charge pressure control solenoid valve, Charge pressure positioner	1615
13. Lambda probe, Knock sensor 1, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1616
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit	1617
15. Control unit in dash panel insert, Data bus diagnostic interface	1618
137 - 1.4l petrol engine , CMBA,CXSA,CXSB,CZCA	1619-1634
1. 1.4l petrol engine , CMBA,CXSA,CXSB,CZCA	1619
2. Terminal 15 voltage supply relay, Fuse holder C	1620
3. Gearbox neutral position sender, Main relay, Onboard supply control unit, Engine/motor control unit	1621
4. Oil pressure switch, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1622
5. Oil level and oil temperature sender, Clutch position sender, Steering column electronics control unit, Engine/motor control unit	1623
6. Brake light switch, Brake pedal switch, Engine/motor control unit	1624
7. Fuel gauge sender, Fuel delivery unit, Engine/motor control unit	1625
8. Engine/motor control unit	1626
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Ignition coil 1 with output stage	1627
10. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1628
11. Coolant temperature sender, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Valve for oil pressure control, Continued coolant circulation pump	1629
12. Hall sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	1630
13. Engine speed sender, Charge pressure sender, Lambda probe, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit, Lambda probe heater	1631
14. Oil pressure switch for reduced oil pressure, Knock sensor 1, Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1632
15. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1633
16. Control unit in dash panel insert	1634
138 - 1.4l petrol engine , CPTA,CZEA	1635-1652
1. 1.4l petrol engine , CPTA,CZEA	1635
2. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	1636
3. Main relay, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder B	1637
4. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1638
5. Oil level and oil temperature sender, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit	1639
6. Brake light switch, Engine/motor control unit	1640
7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1641
8. Vacuum sender, Engine/motor control unit	1642
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1643
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1644
11. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Camshaft control valve 2, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	1645
12. Coolant temperature sender, Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge pressure positioner	1646
13. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1647
14. Engine speed sender, Charge pressure sender, Intake air temperature sender 2, Engine/motor control unit, Changeover valve, Continued coolant circulation pump	1648
15. Oil pressure switch. Oil pressure switch for reduced oil pressure. Knock sensor 1. Radiator	1649

	outlet coolant temperature sender, Engine/motor control unit, Fuel pressure regulating valve	
	16. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1650
	17. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1651
	18. Control unit in dash panel insert, Data bus diagnostic interface	1652
139 -	1.4l petrol engine , CPWA	1653-1669
	1. 1.4l petrol engine , CPWA	1653
	2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	1654
	3. Onboard supply control unit, Relay for gas shut-off valves, Fuse holder B	1655
	4. Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1656
	5. Clutch position sender, Steering column electronics control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1657
	6. Brake light switch, Brake pedal switch, Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	1658
	7. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1659
	8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	1660
	9. Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Continued coolant circulation pump	1661
	10. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, High-pressure valve for gas mode, Valve for oil pressure control	1662
	11. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Gas injection valve 1	1663
	12. Coolant temperature sender, Engine/motor control unit, Gas injection valve 2, Gas injection valve 3, Gas injection valve 4, Charge pressure positioner	1664
	13. Hall sender, Fuel pressure sender, Tank pressure sensor, Gas rail sensor, Engine/motor control unit	1665
	14. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Gearbox neutral position sender, Engine/motor control unit	1666
	15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe, Knock sensor 1, Engine/motor control unit, Lambda probe heater	1667
	16. Lambda probe after catalytic converter, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	1668
	17. Control unit in dash panel insert	1669
140 -	High-voltage system , (0K3)	1670-1691
	1. High-voltage system , (0K3)	1670
	2. Battery, Battery monitor control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder B, Fuse holder C	1671
	3. Terminal 15 voltage supply relay, Fuse 3 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A, Fuse holder B, Fuse 16 on fuse holder B, Fuse 24 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse holder C	1672
	4. Air conditioning system relay, Coolant shortage indicator control unit, Fuse holder B, Fuse 4 on fuse holder B	1673
	5. Coupling point on high-voltage battery, Coolant circulation pump 2	1674
	6. Airbag control unit, Coupling point on high-voltage battery	1675
	7. Hybrid battery unit, High-voltage wiring harness for high-voltage battery, Coupling point on high-voltage battery	1676
	8. DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit, High-voltage wiring harness for high-voltage battery	1677
	9. Power and control electronics for electric drive, Three-phase current drive	1678
	10. Power and control electronics for electric drive, High-voltage wiring harness for drive motor, Three-phase current drive, Electric drive motor	1679
	11. Charging unit 1 for high-voltage battery	1680
	12. Charging unit 1 for high-voltage battery, Control unit for air conditioner compressor	1681
	13. Charging unit 1 for high-voltage battery, High-voltage heater (PTC) control unit	1682
	14. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	1683
	15. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, High-voltage battery charging socket 1	1684
	16. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, High-voltage battery charging socket 1	1685
	17. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Engine sound generator control unit	1686
	18. Onboard supply control unit, Engine sound generator control unit, Brake servo, Actuator 1 for engine sound generator. Tank filler flap locking motor	1687

19. Onboard supply control unit, Brake servo, Tank filler flap locking motor	1688
20. Brake servo, Brake system pressure accumulator	1689
21. Emergency call module control unit and communication unit, Refrigerant shut-off valve for heater and air conditioning unit, Refrigerant shut-off valve for high-voltage battery heat exchanger, Roof aerial	1690
22. Data bus diagnostic interface, Engine/motor control unit, Emergency call module control unit and communication unit	1691
141 - 1.4l petrol engine , CUKB,CXUA	1692-1708
1. 1.4l petrol engine , CUKB,CXUA	1692
2. Main relay, Fuse holder B	1693
3. Oil pressure switch for reduced oil pressure, Knock sensor 1, Engine/motor control unit, Fuse holder B	1694
4. Centre switch module in dash panel, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuel system diagnostic pump	1695
5. Oil level and oil temperature sender, Engine/motor control unit	1696
6. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Engine/motor control unit	1697
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1698
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Coolant valve for gearbox	1699
9. Engine/motor control unit, Fuel metering valve, Coolant changeover valve 1, Coolant changeover valve 2, Coolant pump for high-temperature circuit, Coolant pump for high-voltage battery	1700
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Coolant pump for low-temperature circuit	1701
11. Engine/motor control unit, Ignition coil 4 with output stage, Secondary air pump motor	1702
12. Engine speed sender, Charge pressure sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	1703
13. Hall sender, Hall sender 2, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	1704
14. Radiator outlet coolant temperature sender, Tank pressure sensor, Engine temperature sender 2, Throttle valve module, Engine/motor control unit	1705
15. Oil pressure switch, Lambda probe, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Lambda probe heater	1706
16. Lambda probe after catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuel tank shut-off valve, Lambda probe 1 heater after catalytic converter	1707
17. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1708
142 - Trailer coupling , (1M5),(1M6)	1709-1713
1. Trailer coupling , (1M5),(1M6)	1709
2. Fuse holder C, Fuse holder D	1710
3. Trailer detector control unit	1711
4. Trailer detector control unit	1712
5. Trailer detector control unit, Trailer socket	1713
143 - Battery in luggage compartment , DAZA,DNWA	1714-1718
1. Battery in luggage compartment , DAZA,DNWA	1714
2. Battery, Battery monitor control unit, Fuses in fuse holder, Fuse holder C	1715
3. Battery monitor control unit, Data bus diagnostic interface, Fuses in fuse holder, Terminal 30 wiring junction 2	1716
4. Starter, Alternator, Radiator fan control unit, Engine/motor control unit, Starter relay 2, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 4 on fuse holder A	1717
5. Engine/motor control unit, Starter relay 1	1718
144 - Dual clutch gearbox (DSG) , (0IJ)	1719-1723
1. Dual clutch gearbox (DSG) , (0IJ)	1719
2. Gearbox oil temperature sender, Temperature sender in control unit, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Automatic gearbox pressure regulating valve 4, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2	1720
3. Gear selector movement sensor 1, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Hydraulic pressure sender 1, Hydraulic pressure sender 2, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve, Auxiliary hydraulic pump 1 for gearbox oil	1721
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	1722
5. Centre switch module in dash panel. Driving mode selection button. Data bus diagnostic interface	1723

145 - Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IH)	1724-1728
1. Gas discharge headlights (bi-xenon) with automatic headlight range control and cornering light , (8IH)	1724
2. Onboard supply control unit	1725
3. Rear left vehicle level sender, Onboard supply control unit, Left gas discharge (xenon) bulb, Front left headlight, Front left turn signal bulb, Left all-weather light bulb, Left dip beam screen motor	1726
4. Onboard supply control unit, Control unit for left daytime running light and side light, Left LED module for daytime running light and side light, Light for left signature lighting, Front left headlight, Front right headlight, Front left side marker bulb, Left headlight range control motor, Right headlight range control motor	1727
5. Onboard supply control unit, Control unit for right daytime running light and side light, Right gas discharge (xenon) bulb, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right all-weather light bulb, Right dip beam screen motor	1728
146 - Entry and start authorisation , (L0L)	1729-1733
1. Entry and start authorisation , (L0L)	1729
2. Onboard supply control unit, Control unit for electronic steering column lock, Fuse 4 on fuse holder A, Fuse holder C	1730
3. Entry and start authorisation button, Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system	1731
4. Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	1732
5. Immobiliser reader coil, Control unit in dash panel insert, Entry and start authorisation control unit	1733
147 - LED headlights , (8IT)	1734-1741
1. LED headlights , (8IT)	1734
2. Rear left vehicle level sender, Terminal 15 voltage supply relay, Control unit for cornering light and headlight range control, Fuse 1 on fuse holder A, Fuse holder C	1735
3. Onboard supply control unit, Control unit for cornering light and headlight range control	1736
4. Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Light for left signature lighting, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left headlight range control motor	1737
5. Output module 1 for left LED headlight, Left light control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb, Left static cornering light	1738
6. Output module 1 for left LED headlight, Right light control unit, Right LED module for daytime running light and side light, Front left headlight, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right headlight range control motor	1739
7. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	1740
8. Output module 1 for right LED headlight, Front right headlight, Right static cornering light	1741
148 - MMI with radio , (GP1)	1742-1757
1. MMI with radio , (GP1)	1742
2. Control unit 1 for information electronics, Fuse holder A, Fuse 1 on fuse holder A, Fuse holder C	1743
3. Multimedia system operating unit, Control unit 1 for information electronics	1744
4. Display unit for front information display and operating unit control unit, Reversing camera system control unit, Control unit 1 for information electronics, Microphone unit in front roof module	1745
5. Centre switch module in dash panel, Multimedia system operating unit, Display unit button, Control unit 1 for information electronics, Open and close display motor, Pivot mechanism for display	1746
6. Multimedia system operating unit, Control unit 1 for information electronics, Connection for external audio sources	1747
7. Data bus diagnostic interface, Control unit 1 for information electronics, USB hub	1748
8. Chip card reader control unit, Control unit 1 for information electronics, Dedicated short-range communication aerial, USB hub	1749
9. Chip card reader control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Traffic data aerial, Centre loudspeaker, Subwoofer	1750
10. Control unit 1 for information electronics, Rear left bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	1751
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1752
12. Control unit 1 for information electronics. Rear window aerial 1. Rear window aerial 2	1753

13. Control unit 1 for information electronics, Aerial amplifier, Rear window aerial 3, Rear window aerial 4	1754
14. Control unit 1 for information electronics, GPS aerial, Aerial amplifier 3, Aerial amplifier 4, Rear window aerial 3, Satellite tuner aerial	1755
15. Control unit 1 for information electronics, Roof aerial	1756
16. Control unit 1 for information electronics, LTE aerial 1	1757
149 - Infotainment MOST bus	1758-1760
1. Infotainment MOST bus	1758
2. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner	1759
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner	1760
150 - LED matrix beam headlights , (8G4)	1761-1771
1. LED matrix beam headlights , (8G4)	1761
2. Rear left vehicle level sender, Terminal 15 voltage supply relay, Control unit for cornering light and headlight range control, Fuse 1 on fuse holder A, Fuse holder C	1762
3. Front left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	1763
4. Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Light for left signature lighting, Front left headlight, Front left turn signal bulb, Left headlight range control motor	1764
5. Output module 1 for left LED headlight, Left light control unit, Front left headlight, Left static cornering light, Left headlight fan	1765
6. Output module 1 for left LED headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	1766
7. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb	1767
8. Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor	1768
9. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right static cornering light, Right headlight fan	1769
10. Output module 1 for right LED headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	1770
11. Output module 1 for right LED headlight, Front right headlight, Right headlight main beam bulb	1771
151 - Reversing camera (Rear Assist) , (KA2)	1772-1773
1. Reversing camera (Rear Assist) , (KA2)	1772
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder C	1773
152 - Reversing camera (Rear Assist) , (KA2)	1774-1775
1. Reversing camera (Rear Assist) , (KA2)	1774
2. Data bus diagnostic interface, Reversing camera system control unit, Fuse holder C	1775
153 - Bang & Olufsen sound system , (9VS)	1776-1780
1. Bang & Olufsen sound system , (9VS)	1776
2. Digital sound package control unit, Telephone microphone, Internal microphone, Microphone unit in front roof module, Centre loudspeaker, Subwoofer, Fuse holder C	1777
3. Digital sound package control unit, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeake , Left effect loudspeaker	1778
4. Digital sound package control unit, Rear left treble loudspeaker, Rear right bass loudspeaker, Right effect loudspeaker	1779
5. Digital sound package control unit, Rear right treble loudspeaker	1780
154 - Lane change assist , (79B),(79D),(7Y1),(7Y5)	1781-1784
1. Lane change assist , (79B),(79D),(7Y1),(7Y5)	1781
2. Terminal 15 voltage supply relay, Lane change assist control unit 2, Lane change assist warning lamp in driver side exterior mirror, Fuse holder C	1782
3. Lane change assist control unit, Lane change assist control unit 2	1783
4. Data bus diagnostic interface, Lane change assist control unit	1784
155 - TV tuner , (QV1)	1785-1791
1. TV tuner , (QV1)	1785
2. TV tuner, Fuse holder C	1786
3. TV tuner	1787
4. TV tuner, Rear window aerial 1, Rear window aerial 2, Rear window aerial 3, Rear window aerial 4	1788
5. TV tuner, Rear window aerial 1, Rear window aerial 2, Rear window aerial 4	1789
6. TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3, Rear window aerial 1, Rear window aerial 2	1790
7. TV tuner, Aerial amplifier 1 for TV	1791
156 - Telephone system , (9ZX),(9ZE),(9ZV)	1792-1795
1. Telephone svstem . (9ZX).(9ZE).(9ZV)	1792

2. Aerial amplifier for mobile telephone, LTE aerial 3, Fuse holder C	1793
3. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket, Roof aerial	1794
4. Control unit 1 for information electronics, Microphone unit in front roof module, LTE aerial 1	1795
157 - 6-speed automatic gearbox , (0ER)	1796-1801
1. 6-speed automatic gearbox , (0ER)	1796
2. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Onboard supply control unit	1797
3. Selector lever, Automatic gearbox control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	1798
4. Multifunction switch, Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 5	1799
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 7	1800
6. Automatic gearbox control unit, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Gearbox, Automatic gearbox pressure regulating valve 2	1801
158 - Ring break diagnosis	1802-1803
1. Ring break diagnosis	1802
2. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner	1803
159 - Dash panel insert , (9S8)	1804-1807
1. Dash panel insert , (9S8)	1804
2. Dash panel insert operating button, Control unit in dash panel insert, Fuse holder C	1805
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	1806
4. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics	1807
160 - Fuel system , (1A5),(1A7),(9S8)	1808-1810
1. Fuel system , (1A5),(1A7),(9S8)	1808
2. Fuel delivery unit, Fuel system pressurisation pump, Main relay, Fuel pump control unit	1809
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	1810
161 - Fuel system , (0F5),(1A8),(9S8)	1811-1814
1. Fuel system , (0F5),(1A8),(9S8)	1811
2. Terminal 30 voltage supply relay, Fuel pump control unit	1812
3. Fuel delivery unit, Fuel pump control unit	1813
4. Fuel gauge sender, Fuel delivery unit, Control unit in dash panel insert	1814
162 - Steering column electronics , (L0L)	1815-1819
1. Steering column electronics , (L0L)	1815
2. Steering column electronics control unit, Fuse holder C	1816
3. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	1817
4. Multifunction buttons on right in steering wheel, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	1818
5. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit	1819
163 - Entry and start authorisation for RHD vehicles , (L0R)	1820-1824
1. Entry and start authorisation for RHD vehicles , (L0R)	1820
2. Onboard supply control unit, Control unit for electronic steering column lock, Fuse 4 on fuse holder A, Fuse holder C	1821
3. Entry and start authorisation button, Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system	1822
4. Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	1823
5. Immobiliser reader coil, Control unit in dash panel insert, Entry and start authorisation control unit	1824
164 - Basic equipment , (L0L)	1825-1842
1. Basic equipment , (L0L)	1825
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1826
3. Heated rear window relay, Fuse holder C, Heated rear window	1827
4. Terminal 15 voltage supply relay, Fuse holder C	1828
5. Onboard supply control unit	1829
6. Onboard supply control unit	1830
7. Onboard supply control unit. Data bus diagnostic interface	1831

8. Glove compartment light switch, Onboard supply control unit, Front roof module, Glove compartment light, Rear interior light	1832
9. Centre switch module in dash panel, Hazard warning lights button, Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb	1833
10. Clutch position sender, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	1834
11. Brake light switch, Onboard supply control unit, Tank filler flap locking motor	1835
12. Bonnet contact switch 2, Front left brake pad wear sender, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb	1836
13. Onboard supply control unit, Front interior light	1837
14. Rear lid handle release button, Onboard supply control unit	1838
15. Light switch, Rain and light sensor, Onboard supply control unit, Rear window wiper motor	1839
16. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1840
17. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit, Windscreen and rear window washer pump	1841
18. Driver side central locking lock unit, Front passenger side central locking lock unit, Ambient temperature sensor, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	1842
165 - Dash panel insert , (9S4),(9S5),(9S6)	1843-1845
1. Dash panel insert , (9S4),(9S5),(9S6)	1843
2. Control unit in dash panel insert, Data bus diagnostic interface, Fuse holder C	1844
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	1845
166 - Fuel system , (1A5),(1A7),(9S4),(9S5),(9S6)	1846-1848
1. Fuel system , (1A5),(1A7),(9S4),(9S5),(9S6)	1846
2. Fuel delivery unit, Fuel system pressurisation pump, Main relay, Fuel pump control unit	1847
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	1848
167 - Fuel system , (0F5),(1A8),(9S4),(9S5),(9S6)	1849-1852
1. Fuel system , (0F5),(1A8),(9S4),(9S5),(9S6)	1849
2. Terminal 30 voltage supply relay, Fuel pump control unit	1850
3. Fuel delivery unit, Fuel pump control unit	1851
4. Fuel gauge sender, Fuel delivery unit, Control unit in dash panel insert	1852
168 - Tail light cluster with LED , (8SP)	1853-1857
1. Tail light cluster with LED , (8SP)	1853
2. Onboard supply control unit, High-level brake light bulb	1854
3. Onboard supply control unit, Left tail light, Left tail light 2	1855
4. Onboard supply control unit, Right tail light, Left tail light 2, Right tail light 2, Left number plate light, Right number plate light	1856
5. Right tail light	1857
169 - Tail light cluster with LED, 4-door vehicle , (8SK),(8SP)	1858-1862
1. Tail light cluster with LED, 4-door vehicle , (8SK),(8SP)	1858
2. Onboard supply control unit, High-level brake light bulb	1859
3. Onboard supply control unit, Left tail light, Left tail light 2	1860
4. Onboard supply control unit, Right tail light, Right tail light 2, Left number plate light, Right number plate light	1861
5. Onboard supply control unit, Right tail light	1862
170 - Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1863-1867
1. Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1863
2. Onboard supply control unit, High-level brake light bulb	1864
3. Onboard supply control unit, Left tail light, Left tail light 2	1865
4. Onboard supply control unit, Right tail light, Right tail light 2, Left number plate light, Right number plate light	1866
5. Onboard supply control unit	1867
171 - Tail light cluster with LED, 5-door vehicle , (8SK),(8SP)	1868-1872
1. Tail light cluster with LED, 5-door vehicle , (8SK),(8SP)	1868
2. Onboard supply control unit, High-level brake light bulb	1869
3. Onboard supply control unit, Left tail light, Left tail light 2	1870
4. Onboard supply control unit, Right tail light, Left tail light 2, Right tail light 2, Left number plate light, Right number plate light	1871
5. Right tail light	1872
172 - Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1873-1877
1. Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1873
2. Onboard supply control unit, High-level brake light bulb	1874
3. Onboard supply control unit, Left tail light, Left tail light 2	1875
4. Onboard supply control unit. Right tail light. Right tail light 2. Left number plate light. Right	1876

number plate light	
5. Onboard supply control unit	1877
173 - Tail light cluster with LED , (8SK),(8SP)	1878-1882
1. Tail light cluster with LED , (8SK),(8SP)	1878
2. Onboard supply control unit	1879
3. Onboard supply control unit, Left tail light, Left tail light 2	1880
4. Onboard supply control unit, Right tail light, Right tail light 2, High-level brake light bulb, Number plate light	1881
5. Right tail light	1882
174 - Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1883-1886
1. Tail light cluster with LED, only models with US equipment , (5C1),(8SK),(8SP)	1883
2. Onboard supply control unit, High-level brake light bulb	1884
3. Onboard supply control unit, Left tail light, Left tail light 2	1885
4. Onboard supply control unit, Right tail light, Right tail light 2, Number plate light	1886
175 - Tail lights , (8SA)	1887-1890
1. Tail lights , (8SA)	1887
2. Onboard supply control unit, High-level brake light bulb	1888
3. Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	1889
4. Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Right reversing light bulb	1890
176 - Tail lights , (8SA)	1891-1894
1. Tail lights , (8SA)	1891
2. Onboard supply control unit, High-level brake light bulb	1892
3. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	1893
4. Onboard supply control unit	1894
177 - Tail lights , (8SA)	1895-1898
1. Tail lights , (8SA)	1895
2. Onboard supply control unit	1896
3. Onboard supply control unit, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb, High-level brake light bulb	1897
4. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Left reversing light bulb, Right reversing light bulb	1898
178 - Tail lights , (8SA)	1899-1902
1. Tail lights , (8SA)	1899
2. Rear lid handle release button, Onboard supply control unit, Number plate light	1900
3. Onboard supply control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light bulb, Left tail light bulb, Rear left turn signal bulb, Rear right turn signal bulb, Left reversing light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb	1901
4. Onboard supply control unit, High-level brake light bulb	1902
179 - Basic equipment , (LOR)	1903-1920
1. Basic equipment , (LOR)	1903
2. Main relay, Terminal 30 voltage supply relay, Horn relay	1904
3. Heated rear window relay, Fuse holder C, Heated rear window	1905
4. Terminal 15 voltage supply relay, Fuse holder C	1906
5. Onboard supply control unit	1907
6. Onboard supply control unit	1908
7. Onboard supply control unit, Data bus diagnostic interface	1909
8. Glove compartment light switch, Onboard supply control unit, Front roof module, Glove compartment light, Rear interior light	1910
9. Centre switch module in dash panel, Hazard warning lights button, Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb	1911
10. Clutch position sender, Onboard supply control unit, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	1912
11. Brake pedal switch, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor	1913
12. Bonnet contact switch 2, Front left brake pad wear sender, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb	1914
13. Onboard supply control unit, Front interior light	1915
14. Rear lid handle release button, Onboard supply control unit	1916
15. Light switch. Rain and light sensor. Onboard supply control unit. Rear window wiper motor	1917

16. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	1918
17. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit, Windscreen and rear window washer pump	1919
18. Driver side central locking lock unit, Front passenger side central locking lock unit, Ambient temperature sensor, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side turn signal repeater bulb, Front passenger side turn signal repeater bulb	1920
180 - Steering column electronics , (L0R)	1921-1925
1. Steering column electronics , (L0R)	1921
2. Steering column electronics control unit, Fuse holder C	1922
3. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	1923
4. Multifunction buttons on right in steering wheel, Horn plate, Airbag control unit, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	1924
5. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Heated steering wheel sender, Multifunction steering wheel control unit	1925
181 - 1.0l petrol engine , CHZD	1926-1940
1. 1.0l petrol engine , CHZD	1926
2. Terminal 15 voltage supply relay, Fuse holder C	1927
3. Main relay, Onboard supply control unit	1928
4. Oil pressure sender, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	1929
5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	1930
6. Brake light switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1931
7. Vacuum sender, Engine/motor control unit	1932
8. Fuel pump control unit, Engine/motor control unit, Fuel pressure regulating valve, Continued coolant circulation pump	1933
9. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	1934
10. Coolant temperature sender, Engine/motor control unit, Ignition coil 3 with output stage, Charge pressure positioner	1935
11. Hall sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	1936
12. Engine speed sender, Charge pressure sender, Lambda probe, Lambda probe after catalytic converter, Intake air temperature sender 2, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1937
13. Knock sensor 1, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Gearbox neutral position sender, Engine/motor control unit	1938
14. Throttle valve module, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1939
15. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1940
182 - 2.0l petrol engine , CZPB,DBFB	1941-1959
1. 2.0l petrol engine , CZPB,DBFB	1941
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	1942
3. Onboard supply control unit, Engine component current supply relay, Fuse holder B	1943
4. Brake light switch, Brake pedal switch, Steering column electronics control unit, Engine/motor control unit	1944
5. Oil level and oil temperature sender, Clutch position sender, Vacuum sender, Engine/motor control unit	1945
6. Engine/motor control unit	1946
7. Gearbox neutral position sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	1947
8. Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Turbocharger air recirculation valve, Intake manifold flap valve	1948
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	1949
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1950
11. Engine/motor control unit, Coolant shut-off valve, Fuel metering valve, Coolant valve for gearbox, Injector 2, cylinder 1, Continued coolant circulation pump	1951
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4. Engine/motor control unit. Iniector 2. cvlinder 2. Iniector 2. cvlinder 3. Iniector 2.	1952

cylinder 4	
13. Oil pressure switch, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Engine/motor control unit	1953
14. Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender, Engine/motor control unit	1954
15. Hall sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	1955
16. Engine speed sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Actuator for engine temperature regulation	1956
17. Charge pressure sender, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1957
18. Lambda probe, Knock sensor 1, Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit	1958
19. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1959
183 - 2.0l petrol engine , CZRA	1960-1978
1. 2.0l petrol engine , CZRA	1960
2. Main relay, Fuse holder B, Fuse holder C	1961
3. Secondary air pump relay, Engine component current supply relay, Fuse holder B	1962
4. Engine/motor control unit, Control unit for fuel tank leak detection, Fuse holder B, Fuel system diagnostic pump	1963
5. Oil level and oil temperature sender, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Control unit for electronic steering column lock	1964
6. Brake light switch, Brake pedal switch, Vacuum sender, Engine/motor control unit	1965
7. Engine/motor control unit	1966
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1967
9. Engine/motor control unit, Turbocharger air recirculation valve, Fuel metering valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1968
10. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Coolant shut-off valve, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1, Coolant valve for gearbox	1969
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	1970
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Continued coolant circulation pump	1971
13. Oil pressure switch, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Engine/motor control unit	1972
14. Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	1973
15. Hall sender, Intake manifold flap potentiometer, Sender 1 for secondary air pressure, Engine/motor control unit, Charge pressure positioner	1974
16. Engine speed sender, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Actuator for engine temperature regulation	1975
17. Charge pressure sender, Throttle valve module, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1976
18. Lambda probe, Knock sensor 1, Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit	1977
19. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1978
184 - 2.0l petrol engine , DJHA,DJHB,DJJA	1979-1998
1. 2.0l petrol engine , DJHA,DJHB,DJJA	1979
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	1980
3. Onboard supply control unit, Engine component current supply relay, Fuse holder B	1981
4. Brake light switch, Brake pedal switch, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Control unit for electronic steering column lock	1982
5. Oil level and oil temperature sender, Vacuum sender, Engine/motor control unit	1983
6. Engine/motor control unit, Injector, cylinder 1	1984
7. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Camshaft control valve 1, Exhaust camshaft control valve 1	1985
8. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1986
9. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage.	1987

	Ignition coil 4 with output stage, Continued coolant circulation pump	
	10. Engine/motor control unit, Fuel metering valve	1988
	11. Cam adjustment actuator 1, Cam adjustment actuator 2, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	1989
	12. Oil pressure switch, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	1990
	13. Oil pressure switch for reduced oil pressure, Intake air temperature sender, Intake manifold pressure sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox	1991
	14. Coolant temperature sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	1992
	15. Hall sender, Hall sender 3, Engine/motor control unit, Actuator for engine temperature regulation	1993
	16. Engine speed sender, Fuel pressure sender, Engine/motor control unit	1994
	17. Knock sensor 1, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	1995
	18. Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Control unit for fuel tank leak detection	1996
	19. Charge pressure sender, Gearbox neutral position sender, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1997
	20. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	1998
185 -	Adjustable driver and front passenger seats , (2R1),(3E9),(8I0)	1999-2006
	1. Adjustable driver and front passenger seats , (2R1),(3E9),(8I0)	1999
	2. Driver seat adjustment control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C	2000
	3. Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	2001
	4. Driver seat backrest adjustment switch, Easy entry button on driver side, Driver seat adjustment control unit, Driver seat rake adjustment motor	2002
	5. Driver seat lumbar support adjustment switch, Driver seat massage function button, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	2003
	6. Front passenger seat position control unit	2004
	7. Front passenger seat position control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	2005
	8. Front passenger seat backrest adjustment switch, Easy entry button on front passenger side, Front passenger seat adjustment operating unit, Front passenger seat position control unit, Front passenger seat rake adjustment motor	2006
186 -	Electrically adjustable lumbar support , (7P1),(7P7)	2007-2010
	1. Electrically adjustable lumbar support , (7P1),(7P7)	2007
	2. Driver seat lumbar support adjustment switch, Fuse 1 on fuse holder A, Fuse holder C, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	2008
	3. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	2009
	4. Front passenger seat lumbar support adjustment switch	2010
187 -	Electrically adjustable lumbar support , (8I0),(8I1)	2011-2014
	1. Electrically adjustable lumbar support , (8I0),(8I1)	2011
	2. Driver seat lumbar support adjustment switch, Driver seat massage function button, Massage control unit, Fuse 1 on fuse holder A, Fuse holder C	2012
	3. Massage control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	2013
	4. Massage control unit	2014
188 -	Emergency call module , (NZ3)	2015-2017
	1. Emergency call module , (NZ3)	2015
	2. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Additional loudspeaker for telematics, Microphone unit in front roof module, Microphone for emergency call module, Fuse holder C	2016
	3. Telematics button module, Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Roof aerial	2017
189 -	Tyre Pressure Monitoring System , (7K3),(7K4)	2018-2019
	1. Tyre Pressure Monitoring System , (7K3),(7K4)	2018
	2. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit	2019
190 -	Cigarette lighter and 12 V sockets	2020-2022

1. Cigarette lighter and 12 V sockets	2020
2. Terminal 15 voltage supply relay, Relay for power sockets, Electric socket 1 fuse, Fuse holder C	2021
3. Electric socket, Cigarette lighter, 12 V socket, USB charging socket 1	2022
191 - Fuel system , (1E7),(FN1)	2023-2025
1. Fuel system , (1E7),(FN1)	2023
2. Fuel gauge sender, Fuel delivery unit, Main relay, Control unit in dash panel insert, Fuel pump control unit	2024
3. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	2025
192 - Fuel system , (1E1),(FN1)	2026-2028
1. Fuel system , (1E1),(FN1)	2026
2. Fuel delivery unit, Main relay, Fuel pump control unit	2027
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	2028
193 - 2.5l petrol engine , DNWA	2029-2052
1. 2.5l petrol engine , DNWA	2029
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder C	2030
3. Starter, Alternator, Main relay, Fuse holder B	2031
4. Fuse holder B	2032
5. Starter relay 1, Starter relay 2, Engine component power supply relay 2, Fuse holder B	2033
6. Secondary air pump relay, Engine/motor control unit, Fuse holder B	2034
7. Engine/motor control unit	2035
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	2036
9. Engine/motor control unit, Ignition coil 5 with output stage, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5, Spark plug 5, Coupling point on engine, top	2037
10. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	2038
11. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Intake manifold flap valve, Switch valve for mechanical coolant pump	2039
12. Engine/motor control unit, Exhaust cam actuator for cylinder 1, Exhaust cam actuator for cylinder 2, Exhaust cam actuator for cylinder 3, Exhaust cam actuator for cylinder 4	2040
13. Engine speed sender, Coolant temperature sender, Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator for cylinder 5	2041
14. Intake manifold sender, Charge pressure sender, Hall sender, Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit	2042
15. Oil pressure sender, Knock sensor 1, Knock sensor 2, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Valve for oil pressure control	2043
16. Intermediate shaft speed sender, Engine/motor control unit	2044
17. Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Coolant shut-off valve, Turbocharger air recirculation valve, Crankcase breather valve, Continued coolant circulation pump	2045
18. Accelerator pedal module, Throttle valve module, Engine/motor control unit	2046
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	2047
20. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit	2048
21. Brake light switch, Dual exhaust gas temperature sensor 1, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	2049
22. Dual exhaust gas temperature sensor 2, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2050
23. Pressure differential sender for particulate filter, Pressure differential sender 2 for particulate filter, Control unit for structure-borne sound, Actuator for structure-borne sound	2051
24. Fuel pump control unit	2052
194 - 2.5l petrol engine , DAZA	2053-2075
1. 2.5l petrol engine , DAZA	2053
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder C	2054
3. Starter, Alternator, Main relay, Fuse holder B	2055
4. Fuse holder B	2056
5. Starter relay 1, Starter relay 2, Engine component power supply relay 2, Fuse holder B	2057
6. Secondary air pump relay, Engine/motor control unit, Fuse holder B	2058
7. Engine/motor control unit	2059
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	2060

9. Engine/motor control unit, Ignition coil 5 with output stage, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Injector 2, cylinder 5, Spark plug 5, Coupling point on engine, top	2061
10. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5	2062
11. Fuel pressure sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Fuel metering valve, Intake manifold flap valve, Switch valve for mechanical coolant pump	2063
12. Engine/motor control unit, Exhaust cam actuator for cylinder 1, Exhaust cam actuator for cylinder 2, Exhaust cam actuator for cylinder 3, Exhaust cam actuator for cylinder 4	2064
13. Brake light switch, Engine speed sender, Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Exhaust cam actuator for cylinder 5	2065
14. Intake manifold sender, Charge pressure sender, Hall sender, Coolant temperature sender, Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit	2066
15. Oil pressure sender, Knock sensor 1, Knock sensor 2, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2, Valve for oil pressure control	2067
16. Intermediate shaft speed sender, Engine/motor control unit	2068
17. Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Coolant shut-off valve, Turbocharger air recirculation valve, Crankcase breather valve, Continued coolant circulation pump	2069
18. Accelerator pedal module, Throttle valve module, Engine/motor control unit	2070
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	2071
20. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Control unit for electronic steering column lock	2072
21. Data bus diagnostic interface, Engine/motor control unit	2073
22. Fuel tank leak detection module, Fuel pump control unit, Control unit for fuel tank leak detection	2074
23. Mechatronic unit for dual clutch gearbox	2075
195 - LED headlights , (8IT)	2076-2083
1. LED headlights , (8IT)	2076
2. Terminal 15 voltage supply relay, Control unit for cornering light and headlight range control, Fuse 1 on fuse holder A, Fuse holder C	2077
3. Rear left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	2078
4. Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Light for left signature lighting, Front left headlight, Front left turn signal bulb, Front left side marker bulb, Left headlight range control motor	2079
5. Output module 1 for left LED headlight, Left light control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb, Left static cornering light	2080
6. Output module 1 for left LED headlight, Right light control unit, Right LED module for daytime running light and side light, Front left headlight, Front right headlight, Front right turn signal bulb, Front right side marker bulb, Right headlight range control motor	2081
7. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	2082
8. Output module 1 for right LED headlight, Front right headlight, Right static cornering light	2083
196 - LED matrix beam headlights , (8G4)	2084-2094
1. LED matrix beam headlights , (8G4)	2084
2. Terminal 15 voltage supply relay, Control unit for cornering light and headlight range control, Fuse 1 on fuse holder A, Fuse holder C	2085
3. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit, Control unit for cornering light and headlight range control	2086
4. Onboard supply control unit, Left light control unit, Left LED module for daytime running light and side light, Light for left signature lighting, Front left headlight, Front left turn signal bulb, Left headlight range control motor	2087
5. Output module 1 for left LED headlight, Left light control unit, Front left headlight, Left static cornering light, Left headlight fan	2088
6. Output module 1 for left LED headlight, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb	2089
7. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb	2090
8. Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight range control motor	2091
9. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right static cornering light, Right headlight fan	2092
10. Output module 1 for right LED headlight, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb	2093

11. Output module 1 for right LED headlight, Front right headlight, Right headlight main beam bulb	2094
197 - 1.5l petrol engine , DADA,DPCA	2095-2111
1. 1.5l petrol engine , DADA,DPCA	2095
2. Vacuum pump relay, Fuse holder B, Vacuum pump for brakes	2096
3. Main relay, Terminal 15 voltage supply relay, Onboard supply control unit, Fuse holder B, Fuse holder C	2097
4. Oil level and oil temperature sender, Gearbox neutral position sender, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Control unit for electronic steering column lock	2098
5. Brake light switch, Clutch position sender, Engine/motor control unit	2099
6. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	2100
7. Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	2101
8. Vacuum sender, ABS control unit, Engine/motor control unit	2102
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	2103
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2104
11. Oil pressure sender, Charge pressure sender, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Charge pressure positioner	2105
12. Intake manifold sender, Engine speed sender, Hall sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	2106
13. Pressure sensor for activated charcoal filter air flushing, Knock sensor 1, Hall sender 3, Pressure sensor for activated charcoal filter system, Temperature sensor for activated charcoal filter air flushing, Engine/motor control unit, Charge air cooling pump	2107
14. Engine/motor control unit, Exhaust flap control unit, Fuel metering valve, Actuator for engine temperature regulation	2108
15. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Radiator outlet coolant temperature sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	2109
16. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	2110
17. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2111
198 - Basic equipment , (L0L)	2112-2129
1. Basic equipment , (L0L)	2112
2. Main relay, Terminal 30 voltage supply relay, Horn relay	2113
3. Heated rear window relay, Fuse holder C, Heated rear window	2114
4. Terminal 15 voltage supply relay, Fuse holder C	2115
5. Onboard supply control unit	2116
6. Onboard supply control unit	2117
7. Onboard supply control unit, Data bus diagnostic interface	2118
8. Glove compartment light switch, Onboard supply control unit, Front roof module, Glove compartment light, Rear interior light	2119
9. Centre switch module in dash panel, Hazard warning lights button, Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb	2120
10. Clutch position sender, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	2121
11. Brake light switch, Onboard supply control unit, Tank filler flap locking motor	2122
12. Bonnet contact switch 2, Front left brake pad wear sender, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb	2123
13. Onboard supply control unit, Front interior light	2124
14. Rear lid handle release button, Onboard supply control unit	2125
15. Light switch, Rain and light sensor, Onboard supply control unit, Rear window wiper motor	2126
16. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	2127
17. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit, Windscreen and rear window washer pump	2128
18. Driver side central locking lock unit, Front passenger side central locking lock unit, Ambient temperature sensor, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side exterior mirror turn signal bulb, Front passenger side exterior mirror turn signal bulb	2129
199 - Basic equipment, right-hand drive , (L0R)	2130-2147
1. Basic equipment. right-hand drive . (L0R)	2130

2. Main relay, Terminal 30 voltage supply relay, Horn relay	2131
3. Heated rear window relay, Fuse holder C, Heated rear window	2132
4. Terminal 15 voltage supply relay, Fuse holder C	2133
5. Onboard supply control unit	2134
6. Onboard supply control unit	2135
7. Onboard supply control unit, Data bus diagnostic interface	2136
8. Glove compartment light switch, Onboard supply control unit, Front roof module, Glove compartment light, Rear interior light	2137
9. Centre switch module in dash panel, Hazard warning lights button, Bonnet contact switch, Treble horn, Onboard supply control unit, Left fog light bulb	2138
10. Clutch position sender, Onboard supply control unit, Headlight washer system pump, Tank filler flap locking motor, Left washer jet heater element, Right washer jet heater element	2139
11. Brake pedal switch, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor	2140
12. Bonnet contact switch 2, Front left brake pad wear sender, Front right brake pad wear sender, Bass horn, Onboard supply control unit, Right fog light bulb	2141
13. Onboard supply control unit, Front interior light	2142
14. Rear lid handle release button, Onboard supply control unit	2143
15. Light switch, Rain and light sensor, Onboard supply control unit, Rear window wiper motor	2144
16. Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid central locking motor	2145
17. Reversing light switch, Brake fluid level warning contact, Coolant shortage indicator switch, Windscreen washer fluid level sender, Onboard supply control unit, Windscreen and rear window washer pump	2146
18. Driver side central locking lock unit, Front passenger side central locking lock unit, Ambient temperature sensor, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Driver side exterior mirror turn signal bulb, Front passenger side exterior mirror turn signal bulb	2147
200 - Adjustable driver and front passenger seats , (3L5),(3PP),(3PB),(3PE)	2148-2152
1. Adjustable driver and front passenger seats , (3L5),(3PP),(3PB),(3PE)	2148
2. Fuse 1 on fuse holder A, Fuse 4 on fuse holder A, Fuse holder C, Front passenger seat adjustment thermal fuse 1	2149
3. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	2150
4. Front passenger seat lumbar support adjustment switch, Driver seat adjustment operating unit, Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Driver seat backrest adjustment motor	2151
5. Front passenger seat adjustment operating unit, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	2152
201 - 1.0l petrol engine , DKRA,DKRF	2153-2167
1. 1.0l petrol engine , DKRA,DKRF	2153
2. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2154
3. Main relay, Onboard supply control unit, Fuse holder B	2155
4. Gearbox neutral position sender, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Control unit for electronic steering column lock	2156
5. Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit	2157
6. Brake light switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	2158
7. Vacuum sender, Engine/motor control unit	2159
8. Engine/motor control unit, Fuel metering valve, Continued coolant circulation pump	2160
9. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	2161
10. Pressure sensor for activated charcoal filter air flushing, Coolant temperature sender, Pressure sensor for activated charcoal filter system, Temperature sensor for activated charcoal filter air flushing, Engine/motor control unit, Ignition coil 3 with output stage	2162
11. Oil pressure sender, Charge pressure sender, Hall sender, Engine/motor control unit, Charge pressure positioner	2163
12. Intake manifold sender, Engine speed sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	2164
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2165
14. Accelerator pedal module, Throttle valve module, Knock sensor 1, Accelerator position sender, Accelerator position sender 2. Engine/motor control unit	2166

15. Radiator outlet coolant temperature sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	2167
202 - 1.4l petrol engine , DJSA	2168-2182
1. 1.4l petrol engine , DJSA	2168
2. Vacuum pump relay, Fuse holder B, Vacuum pump for brakes	2169
3. Main relay, Onboard supply control unit, Fuse holder B	2170
4. Knock sensor 1, Oil level and oil temperature sender, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Control unit for electronic steering column lock	2171
5. Brake light switch, Coolant temperature sender, Pressure differential sender for particulate filter, Engine/motor control unit, Fuel system diagnostic pump	2172
6. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	2173
7. Engine/motor control unit, Charge air cooling pump	2174
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	2175
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2176
10. Charge pressure sender, Fuel pressure sender, Engine/motor control unit, Fuel metering valve, Charge pressure positioner	2177
11. Engine speed sender, Hall sender, Radiator outlet coolant temperature sender, Engine/motor control unit	2178
12. Oil pressure switch, Lambda probe 1 before catalytic converter, Lambda probe, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	2179
13. Accelerator pedal module, Lambda probe 1 after catalytic converter, Accelerator position sender, Lambda probe after catalytic converter, Accelerator position sender 2, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Lambda probe 1 heater after catalytic converter	2180
14. Oil pressure switch for reduced oil pressure, Throttle valve module, Throttle valve module, Data bus diagnostic interface, Engine/motor control unit	2181
15. Control unit in dash panel insert, Data bus diagnostic interface	2182
203 - 2.0l diesel engine , DFGA,DJGA	2183-2204
1. 2.0l diesel engine , DFGA,DJGA	2183
2. Terminal 30 voltage supply relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2184
3. Relay for reducing agent metering system, Fuse holder B, Fuse holder C	2185
4. Automatic glow period control unit, Fuse holder B	2186
5. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Injector for reducing agent	2187
6. Brake light switch, Oil level and oil temperature sender, Engine/motor control unit	2188
7. Clutch position sender, Fuel pump control unit, Engine/motor control unit	2189
8. Engine/motor control unit, Heater for reducing agent line (heater circuit 2)	2190
9. Delivery unit for reducing agent metering system, Reducing agent level sender, Engine/motor control unit, Pump for reducing agent	2191
10. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2192
11. Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	2193
12. Engine/motor control unit, Camshaft control valve 1, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	2194
13. Air mass meter, Engine/motor control unit, Heater element for crankcase breather	2195
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Charge pressure control solenoid valve, Charge air cooling pump, Auxiliary pump for heating	2196
15. Water level sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit	2197
16. Fuel temperature sender, Pressure differential sender, Position sender for charge pressure positioner, Exhaust gas temperature sender 4, Engine/motor control unit, Valve for oil pressure control, Coolant valve for cylinder head	2198
17. Hall sender, Fuel pressure sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	2199
18. Accelerator pedal module, Throttle valve module, Charge pressure sender, Throttle valve potentiometer, Engine/motor control unit	2200
19. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Exhaust gas recirculation potentiometer, Exhaust gas recirculation potentiometer 2, Engine/motor control unit	2201
20. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	2202
21. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	2203
22. Control unit in dash panel insert. Data bus diagnostic interface. Engine/motor control unit	2204

204 - 1.6l diesel engine , DGTA,DGTE	2205-2226
1. 1.6l diesel engine , DGTA,DGTE	2205
2. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2206
3. Relay for reducing agent metering system, Fuse holder B, Fuse holder C	2207
4. Terminal 30 voltage supply relay, Fuse holder B	2208
5. Automatic glow period control unit, Fuse holder B	2209
6. Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Fuse holder B	2210
7. Oil level and oil temperature sender, Engine/motor control unit	2211
8. Brake light switch, Brake pedal switch, Clutch position sender, Engine/motor control unit	2212
9. Engine/motor control unit, Heater element for crankcase breather, Heater for reducing agent line (heater circuit 2)	2213
10. Delivery unit for reducing agent metering system, Reducing agent level sender, Engine/motor control unit, Pump for reducing agent	2214
11. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	2215
12. Engine/motor control unit, Camshaft control valve 1, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head, Charge air cooling pump, Auxiliary pump for heating	2216
13. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuel pressure regulating valve	2217
14. Coolant temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Pressure differential sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	2218
15. Throttle valve module, Charge pressure sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	2219
16. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Hall sender, Engine/motor control unit	2220
17. Engine speed sender, Exhaust gas temperature sender 2, Gearbox neutral position sender, Engine/motor control unit	2221
18. Air mass meter, Water level sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	2222
19. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	2223
20. Accelerator pedal module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	2224
21. Engine/motor control unit, Exhaust flap control unit	2225
22. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Charge pressure control solenoid valve, Injector for reducing agent	2226
205 - Entry and start authorisation , (L0L)	2227-2231
1. Entry and start authorisation , (L0L)	2227
2. Entry and start authorisation button, Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Fuse 4 on fuse holder A, Fuse holder C	2228
3. Contact sensor for driver exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	2229
4. Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Onboard supply control unit, Control unit for electronic steering column lock	2230
5. Immobiliser reader coil, Control unit in dash panel insert, Entry and start authorisation control unit, Control unit for electronic steering column lock	2231
206 - Entry and start authorisation , (L0R)	2232-2236
1. Entry and start authorisation , (L0R)	2232
2. Entry and start authorisation button, Entry and start authorisation control unit, Rear bumper aerial for entry and start system, Fuse 4 on fuse holder A, Fuse holder C	2233
3. Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system, Passenger side aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	2234
4. Contact sensor for driver exterior door handle, Entry and start authorisation control unit, Onboard supply control unit, Control unit for electronic steering column lock	2235
5. Immobiliser reader coil, Control unit in dash panel insert, Entry and start authorisation control unit, Control unit for electronic steering column lock	2236
207 - Steering column electronics , (L0L)	2237-2243
1. Steering column electronics , (L0L)	2237
2. Selector lever, Ignition key withdrawal lock solenoid, Fuse holder C	2238
3. Steering column electronics control unit. Fuse holder C	2239

4. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	2240
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on drive side	2241
6. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Heated steering wheel sender, Multifunction steering wheel control unit, Onboard supply control unit	2242
7. Ignition/starter switch, Onboard supply control unit	2243
208 - Steering column electronics , (L0R)	2244-2250
1. Steering column electronics , (L0R)	2244
2. Selector lever, Ignition key withdrawal lock solenoid, Fuse holder C	2245
3. Steering column electronics control unit, Fuse holder C	2246
4. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	2247
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on drive side	2248
6. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Heated steering wheel sender, Multifunction steering wheel control unit, Onboard supply control unit	2249
7. Ignition/starter switch, Onboard supply control unit	2250
209 - 2.0l petrol engine , DHHA	2251-2269
1. 2.0l petrol engine , DHHA	2251
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2252
3. Secondary air pump relay, Engine component current supply relay, Fuse holder B	2253
4. Brake light switch, Brake pedal switch, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	2254
5. Oil level and oil temperature sender, Vacuum sender, Engine/motor control unit	2255
6. Engine/motor control unit, Injector, cylinder 1	2256
7. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Secondary air inlet valve, Camshaft control valve 1, Exhaust camshaft control valve 1	2257
8. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	2258
9. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Continued coolant circulation pump	2259
10. Charge pressure sender, Onboard supply control unit, Engine/motor control unit, Fuel metering valve, Coolant valve for gearbox, Coolant pump	2260
11. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Engine/motor control unit, Fuel system diagnostic pump	2261
12. Oil pressure switch, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Engine/motor control unit	2262
13. Intake manifold sender, Intake air temperature sender, Coolant temperature sender, Intake manifold pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	2263
14. Hall sender, Radiator outlet coolant temperature sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	2264
15. Engine/motor control unit, Control unit for structure-borne sound, Actuator for engine temperature regulation, Actuator for structure-borne sound	2265
16. Accelerator pedal module, Engine speed sender, Knock sensor 1, Fuel pressure sender, Engine/motor control unit	2266
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Lambda probe heater	2267
18. Throttle valve module, Data bus diagnostic interface, Engine/motor control unit	2268
19. Control unit in dash panel insert, Data bus diagnostic interface	2269
210 - 2.0l petrol engine , DLRA	2270-2288
1. 2.0l petrol engine , DLRA	2270
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2271
3. Onboard supply control unit, Engine component current supply relay, Fuse holder B	2272
4. Brake light switch, Brake pedal switch, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	2273
5. Oil level and oil temperature sender, Vacuum sender, Engine/motor control unit	2274
6. Engine/motor control unit, Injector, cylinder 1	2275
7. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Camshaft control valve 1. Exhaust camshaft control valve 1	2276

8. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	2277
9. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Continued coolant circulation pump	2278
10. Engine/motor control unit, Fuel metering valve	2279
11. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Fuel system diagnostic pump	2280
12. Oil pressure switch, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Engine/motor control unit	2281
13. Radiator outlet coolant temperature sender, Intake manifold flap potentiometer, Engine/motor control unit, Coolant shut-off valve, Coolant valve for gearbox, Charge pressure positioner	2282
14. Intake manifold sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Actuator for engine temperature regulation	2283
15. Accelerator pedal module, Throttle valve module, Knock sensor 1, Engine/motor control unit	2284
16. Engine speed sender, Fuel pressure sender, Engine/motor control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	2285
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Charge pressure sender, Engine/motor control unit	2286
18. Hall sender, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2287
19. Control unit in dash panel insert, Data bus diagnostic interface	2288
211 - 2.0l petrol engine , DNUE	2289-2308
1. 2.0l petrol engine , DNUE	2289
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2290
3. Onboard supply control unit, Engine component current supply relay, Fuse holder B	2291
4. Brake light switch, Brake pedal switch, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	2292
5. Oil level and oil temperature sender, Vacuum sender, Engine/motor control unit	2293
6. Engine/motor control unit, Injector, cylinder 1	2294
7. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Camshaft control valve 1, Exhaust camshaft control valve 1	2295
8. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	2296
9. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Continued coolant circulation pump	2297
10. Engine/motor control unit, Fuel metering valve	2298
11. Cam adjustment actuator 1, Cam adjustment actuator 2, Clutch position sender, Pressure differential sender for particulate filter, Engine/motor control unit	2299
12. Oil pressure switch, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	2300
13. Oil pressure switch for reduced oil pressure, Intake manifold sender, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant valve for gearbox	2301
14. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	2302
15. Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Gearbox neutral position sender, Engine/motor control unit, Actuator for engine temperature regulation	2303
16. Engine speed sender, Hall sender 3, Engine/motor control unit	2304
17. Accelerator pedal module, Throttle valve module, Knock sensor 1, Engine/motor control unit	2305
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2306
19. Charge pressure sender, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	2307
20.	2308
212 - 2.0l petrol engine , DKZA	2309-2327
1. 2.0l petrol engine , DKZA	2309
2. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C	2310
3. Onboard supply control unit, Engine component current supply relay, Fuse holder B	2311
4. Brake light switch, Brake pedal switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	2312
5. Oil level and oil temperature sender, Clutch position sender, Vacuum sender, Engine/motor control unit	2313
6. Engine/motor control unit	2314

7. Air mass meter, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Gearbox neutral position sender, Engine/motor control unit, Injector, cylinder 1	2315
8. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Turbocharger air recirculation valve, Intake manifold flap valve	2316
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	2317
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2318
11. Coolant temperature sender, Engine/motor control unit, Fuel metering valve, Coolant valve for gearbox, Injector 2, cylinder 1, Continued coolant circulation pump	2319
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	2320
13. Oil pressure switch, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit	2321
14. Intake manifold sender, Fuel pressure sender, Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit	2322
15. Hall sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	2323
16. Accelerator pedal module, Engine speed sender, Engine/motor control unit, Actuator for engine temperature regulation	2324
17. Throttle valve module, Charge pressure sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2325
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	2326
19. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	2327
213 - 7-speed dual clutch gearbox 0CW (S tronic) , (0EG)	2328-2332
1. 7-speed dual clutch gearbox 0CW (S tronic) , (0EG)	2328
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1	2329
3. Selector lever, Gearbox input speed sender 2, Gearbox input speed sender 1, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	2330
4. Selector lever, Gearbox hydraulic pressure sender, Temperature sender in control unit, Gearbox input speed sender 3, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Hydraulic pump motor	2331
5. Centre switch module in dash panel	2332
214 - Dual clutch gearbox 0D9 , (0ES)	2333-2337
1. Dual clutch gearbox 0D9 , (0ES)	2333
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2334
3. Selector lever, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Solenoid valve 5, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Cooling oil valve, Selector lever position display	2335
4. Gearbox oil temperature sender, Automatic gearbox hydraulic pressure sender 1, Automatic gearbox hydraulic pressure sender 2, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Main pressure valve	2336
5. Temperature sender in control unit, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2337
215 - 6-speed dual clutch gearbox , (0IC)	2338-2343
1. 6-speed dual clutch gearbox , (0IC)	2338
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2339
3. Selector lever, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 6, Hydraulic pump motor, Selector lever position display	2340
4. Selector lever, Gearbox input speed sender 2, Mechatronic unit for dual clutch gearbox, Solenoid valve 1, Solenoid valve 2, Solenoid valve 3, Solenoid valve 4, Solenoid valve 5, Solenoid valve 6	2341
5. Selector lever, Temperature sender in control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2342

6. Control unit in dash panel insert, Data bus diagnostic interface	2343
216 - 7-speed dual clutch gearbox 0DE (S tronic) , (0IE)	2344-2348
1. 7-speed dual clutch gearbox 0DE (S tronic) , (0IE)	2344
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2345
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	2346
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	2347
5. Selector lever, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2348
217 - Dual clutch gearbox 0DL , DNWA	2349-2354
1. Dual clutch gearbox 0DL , DNWA	2349
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2350
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	2351
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	2352
5. Selector lever, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2353
6. Control unit in dash panel insert, Data bus diagnostic interface	2354
218 - Dual clutch gearbox (DSG) , (0IJ)	2355-2359
1. Dual clutch gearbox (DSG) , (0IJ)	2355
2. Gearbox oil temperature sender, Temperature sender in control unit, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Automatic gearbox pressure regulating valve 4, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2	2356
3. Gear selector movement sensor 1, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Hydraulic pressure sender 1, Hydraulic pressure sender 2, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve, Auxiliary hydraulic pump 1 for gearbox oil	2357
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	2358
5. Centre switch module in dash panel, Driving mode selection button, Data bus diagnostic interface	2359
219 - Steering column electronics , (L0L)	2360-2362
1. Steering column electronics , (L0L)	2360
2. Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit, Fuse holder C	2361
3. Ignition/starter switch, Turn signal switch, Horn plate, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	2362
220 - Steering column electronics , (L0R)	2363-2365
1. Steering column electronics , (L0R)	2363
2. Windscreen wiper switch, Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit, Fuse holder C	2364
3. Ignition/starter switch, Turn signal switch, Horn plate, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	2365
221 - Dual clutch gearbox 0DL , (0EX)	2366-2371
1. Dual clutch gearbox 0DL , (0EX)	2366
2. Selector lever, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2367
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	2368
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	2369
5. Selector lever, Selector lever locked in position P switch, Data bus diagnostic interface, Engine/motor control unit. Mechatronic unit for dual clutch gearbox	2370

6. Control unit in dash panel insert, Data bus diagnostic interface	2371
222 - Dual clutch gearbox 0DL , (0EX)	2372-2377
1. Dual clutch gearbox 0DL , (0EX)	2372
2. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	2373
3. Selector lever, Gearbox oil temperature sender, Clutch temperature sender, Selector lever sensors control unit, Mechatronic unit for dual clutch gearbox, Selector lever lock solenoid, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 1 in gear train half 2, Valve 2 in gear train half 2, Selector lever position display	2374
4. Selector lever, Mechatronic unit for dual clutch gearbox, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Cooling oil valve, Main pressure valve	2375
5. Selector lever, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2376
6. Control unit in dash panel insert, Data bus diagnostic interface	2377
223 - 6-speed automatic gearbox , (0ER)	2378-2383
1. 6-speed automatic gearbox , (0ER)	2378
2. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit, Onboard supply control unit	2379
3. Selector lever, Automatic gearbox control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	2380
4. Multifunction switch, Gearbox oil temperature sender, Automatic gearbox control unit, Gearbox, Automatic gearbox pressure regulating valve 5	2381
5. Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 4, Automatic gearbox pressure regulating valve 7	2382
6. Automatic gearbox control unit, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Gearbox, Automatic gearbox pressure regulating valve 2	2383
224 - Fuse assignment	2384-2419
1. Fuse assignment	2384
2. Battery, Power steering control unit, Fuse 1 on fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse 6 on fuse holder A	2385
3. Starter relay 1, Starter relay 2, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	2386
4. Treble horn, Bass horn, Auxiliary heater control unit, Horn relay, Fuse 15 on fuse holder B, Fuse 33 on fuse holder B, Fuse 34 on fuse holder B, Fuse 35 on fuse holder B, Fuse 37 on fuse holder B	2387
5. Engine component current supply relay, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 16 on fuse holder B	2388
6. High heat output relay, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 20 on fuse holder B	2389
7. Main relay, Terminal 30 voltage supply relay, Battery monitor control unit, Engine/motor control unit, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B	2390
8. Air conditioning system relay, Engine/motor control unit, Fuse 3 on fuse holder B, Fuse 13 on fuse holder B	2391
9.	2392
10. Fuse 4 on fuse holder B, Fuse 5 on fuse holder B	2393
11. Fuse 6 on fuse holder B	2394
12. Fuse 7 on fuse holder B, Auxiliary pump for heating	2395
13. Fuse 8 on fuse holder B, Lambda probe heater, Lambda probe 1 heater after catalytic converter	2396
14. Automatic glow period control unit, Fuse 9 on fuse holder B	2397
15. Low heat output relay, Fuse 24 on fuse holder B, Fuse 31 on fuse holder B	2398
16. Fuse 10 on fuse holder B, Fuse 21 on fuse holder B	2399
17. Fuse holder C	2400
18. Fuse holder C	2401
19. Fuse holder C	2402
20. Front passenger seat adjustment thermal fuse 1, Fuse holder C	2403
21. Heated rear window relay, Terminal 15 voltage supply relay, Relay for power sockets, Fuse holder C	2404
22. Airbag control unit, Fuse holder C	2405
23. Fuse holder C	2406
24. Fuse holder C	2407
25. Fuse holder C	2408
26. Fuse holder C	2409
27. Relay for reducing agent metering system, Fuse holder C	2410
28. Fuse holder C	2411
29. Fuse holder C	2412
30. Fuse holder D. Fuse holder H. Fuse holder F	2413

31. Driver seat lumbar support adjustment switch, Cam adjustment actuator 1, Injector 2, cylinder 1	2414
32. Control unit for cornering light and headlight range control, Control unit for left neck heating, Control unit for right neck heating, Relay for neck heating, Exhaust camshaft control valve 1	2415
33. Heater element for crankcase breather, Vacuum pump for brakes, Coolant pump for low-temperature circuit	2416
34. Charging unit 1 for high-voltage battery, Heater control unit, Air conditioning system control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1	2417
35. Air mass meter, Special vehicle control unit, Valve for oil pressure control	2418
36. Secondary air inlet valve, Fuel system diagnostic pump	2419
225 - Airbag systems for RHD vehicles , (LOR)	2420-2430
1. Airbag systems for RHD vehicles , (LOR)	2420
2. Centre switch module in dash panel, Airbag control unit, Terminal 15 voltage supply relay, Warning lamp for airbag deactivated on front passenger side, Fuse holder C	2421
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Battery isolation igniter	2422
4. Driver side belt switch, Front passenger side belt switch, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	2423
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter	2424
6. Trigger 2 for pedestrian protection, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Front passenger side curtain airbag igniter	2425
7. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Trigger 1 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit	2426
8. Airbag control unit, Control unit for front left belt tensioner, Control unit for front right belt tensioner	2427
9. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	2428
10. Front airbag crash sensor for driver side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Driver side knee airbag igniter	2429
11. Buzzer and gong, Airbag control unit, Control unit in dash panel insert, Data bus diagnostic interface, Seat belt warning system warning lamp, Airbag warning lamp	2430
226 - 2.0l petrol engine , DKVA	2431-2448
1. 2.0l petrol engine , DKVA	2431
2. Main relay, Fuse 8 on fuse holder B	2432
3. Steering column electronics control unit, Engine/motor control unit, Engine component current supply relay, Fuse 7 on fuse holder B	2433
4. Brake light switch, Brake pedal switch, Oil level and oil temperature sender, Onboard supply control unit, Engine/motor control unit	2434
5. Engine/motor control unit, Fuel system diagnostic pump	2435
6. Engine/motor control unit	2436
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Coolant shut-off valve, Fuel metering valve, Coolant valve for gearbox	2437
8. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	2438
9. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	2439
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2440
11. Coolant temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Injector 2, cylinder 1, Continued coolant circulation pump	2441
12. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	2442
13. Oil pressure switch, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Engine/motor control unit	2443
14. Intake manifold sender, Engine speed sender, Fuel pressure sender, Engine/motor control unit	2444
15. Hall sender, Hall sender 3, Intake manifold flap potentiometer, Engine/motor control unit, Charge pressure positioner	2445
16. Accelerator pedal module, Throttle valve module, Engine/motor control unit	2446
17. Lambda probe 1 before catalytic converter, Charge pressure sender, Engine/motor control unit, Actuator for engine temperature regulation	2447

18. Lambda probe 1 after catalytic converter, Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit	2448
227 - 1.5l natural gas engine , DHFA	2449-2466
1. 1.5l natural gas engine , DHFA	2449
2. Vacuum pump relay, Fuse holder B	2450
3. Main relay, Fuse holder B	2451
4. Relay for gas shut-off valves, Fuel tank shut-off valve 1, Fuel tank shut-off valve 2, Fuel tank shut-off valve 3, Fuse holder B	2452
5. Oil level and oil temperature sender, Entry and start authorisation control unit, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	2453
6. Brake light switch, Accelerator pedal module, Accelerator position sender, Radiator outlet coolant temperature sender, Accelerator position sender 2, Engine/motor control unit	2454
7. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Gas injection valve 1, Gas injection valve 2, Gas injection valve 3, Valve for oil pressure control	2455
8. Vacuum sender, ABS control unit, Engine/motor control unit, Gas injection valve 4	2456
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Vacuum pump for brakes	2457
10. Gas tank pressure sensor, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Gas tank valve	2458
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2459
12. Oil pressure sender, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Charge pressure positioner	2460
13. Charge pressure sender, Engine speed sender, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	2461
14. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit, Charge air cooling pump	2462
15. Gas rail temperature and pressure sensor, Knock sensor 1, Engine/motor control unit, Fuel metering valve, Actuator for engine temperature regulation	2463
16. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Lambda probe 1 heater after catalytic converter	2464
17. Throttle valve module, Throttle valve module, Data bus diagnostic interface, Engine/motor control unit	2465
18. Control unit in dash panel insert, Data bus diagnostic interface	2466
228 - Fuel system , (0F0)	2467-2468
1. Fuel system , (0F0)	2467
2. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Main relay, Control unit in dash panel insert, Fuel pump control unit	2468
229 - 1.4l petrol engine , DGEA	2469-2483
1. 1.4l petrol engine , DGEA	2469
2. Main relay	2470
3. Centre switch module in dash panel, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	2471
4. Oil level and oil temperature sender, Engine/motor control unit, Coupling point on high-voltage battery, Coolant circulation pump 2	2472
5. Fuel pump control unit, Engine/motor control unit	2473
6. Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel metering valve	2474
7. Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	2475
8. Pressure differential sender for particulate filter, Engine/motor control unit, Coolant valve for gearbox, Coolant changeover valve 1, Coolant changeover valve 2, Coolant pump for high-temperature circuit	2476
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2477
10. Intake manifold sender, Hall sender, Knock sensor 1, Intake manifold pressure sender, Intake manifold temperature sender, Hall sender 3, Engine/motor control unit, Coolant pump for low-temperature circuit	2478
11. Engine speed sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine temperature sender 2, Fuel tank pressure sender, Engine/motor control unit	2479
12. Charge pressure sender, Charge pressure sender, Charge pressure control module, Intake air temperature sender 2, Engine/motor control unit, Fuel tank shut-off valve, Charge pressure positioner	2480

13. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Throttle valve module, Engine/motor control unit	2481
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	2482
15. Control unit in dash panel insert, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	2483
230 - High-voltage battery system , (OK3)	2484-2489
1. High-voltage battery system , (OK3)	2484
2. Battery regulation control unit	2485
3. Hybrid battery unit, Battery regulation control unit, Coupling point 1 for low-voltage network of high-voltage battery	2486
4. Coolant temperature sender 1 for high-voltage battery, Battery regulation control unit, Coupling point 1 for low-voltage network of high-voltage battery	2487
5. Battery module 5, Battery module 6, Battery module 7, Battery module 8	2488
6. Battery module 1, Battery module 2, Battery module 3, Battery module 4	2489
801 - - Fitting locations: Earth points - 3	2490-2521
1. Earth points	2490-2521
1.1 Earth points in front part of vehicle	2490-2501
1.1.1 Earth point, on left in engine compartment	2491
1.1.2 Earth point in centre of engine compartment	2492
1.1.3 Earth point, on right headlight	2493
1.1.4 Earth point 1 and 3 on front of left longitudinal member	2494
1.1.5 Earth point 2, on front of left longitudinal member	2495
1.1.6 Earth point 4, on front of left longitudinal member	2496
1.1.7 Earth point 1, on front of right longitudinal member	2497
1.1.8 1.0l petrol engine	2498
1.1.9 1.2l petrol engine	2499
1.1.10 1.4l petrol engine	2500
1.1.11 1.5l petrol engine	2501
1.1.12 2.0l petrol engine	2502
1.2 Earth points in middle part of vehicle	2502-2505
1.2.1 Earth points on right A-pillar	2503
1.2.2 Earth points on front of left longitudinal member	2504
1.2.3 Earth point 1, on centre tunnel	2505
1.2.4 Earth point, on rear right of underbody	2506
1.3 Earth points in rear part of vehicle	2506-2521
1.3.1 Earth point on rear left pillar (3-door and 5-door)	2507-2508
1.3.2 Earth point on right C-pillar (3-door and 5-door)	2509
1.3.3 Earth point on rear right pillar (3-door and 5-door)	2510
1.3.4 Earth point, central on rear lid (3-door and 5-door)	2511
1.3.5 Earth point in luggage compartment (3-door and 5-door)	2512
1.3.6 Earth point under rear shelf (4-door)	2513
1.3.7 Earth point on left in luggage compartment (4-door)	2514
1.3.8 Earth point on right in luggage compartment (4-door)	2515
1.3.9 Earth point, right D-pillar (4-door)	2516
1.3.10 Earth point on left in luggage compartment (cabriolet)	2517
1.3.11 Earth point on right in luggage compartment (cabriolet)	2518
1.3.12 Earth point 2 on right in luggage compartment (cabriolet)	2519
1.3.13 Earth point 2 on left in luggage compartment (cabriolet)	2520
1.3.14 Earth point on rear left wheel housing (cabriolet)	2521
802 - -Fitting locations: Fuses - 1	2522-2568
1. -Fitting locations: Fuses	2522-2568
1.1 Overview of fuses (3-door)	2522-2524
1.2 Overview of fuses (4-door)	2525-2526
1.3 Overview of fuses (5-door)	2527-2528
1.4 Overview of fuses (Cabriolet)	2529-2530
1.5 Fitting location fuse holder A -SA-, without hybrid drive	2531
1.6 Fitting location fuse holder A -SA-, with hybrid drive	2532
1.7 Fuse assignment fuse holder A -SA-, with and without hybrid drive, without RS3	2533-2534
1.8 Fuse assignment, fuse holder A -SA-, with RS3	2535
1.9 Fitting location fuse holder B -SB-, without hybrid drive	2535
1.10 Fitting location fuse holder B -SB-, with hybrid drive	2536
1.11 Fuse assignment on fuse holder B -SB-	2537-2545
1.12 Fuse holder C -SC-	2546-2547

1.12.1 Fitting location, fuse holder C -SC-, left-hand drive	2546
1.12.2 Fitting location, fuse holder C -SC-, right-hand drive	2547
1.13 Fuse assignment, fuse holder C -SC-	2548-2554
1.14 Fitting location, fuse holder D -SD-	2555-2556
1.14.1 Fitting location fuse holder D -SD-, left-hand drive	2555
1.14.2 Fitting location fuse holder D -SD-, right-hand drive	2556
1.15 Fuse assignment fuse holder D -SD-, from March 2012, up to April 2013	2557
1.16 Fuse assignment fuse holder D -SD-, from May 2013	2557
1.17 Fuse assignment fuse holder D -SD-, from May 2014	2558
1.18 Fitting location fuse holder F -SF-, from May 2013	2558
1.19 Fuse assignment fuse holder F -SF-, from May 2013	2559
1.20 Fitting location fuse holder H -SH-	2559-2560
1.20.1 Fitting location fuse holder H -SH-, left-hand drive	2559
1.20.2 Fitting location fuse holder H -SH-, right-hand drive	2560
1.21 Fuse assignment fuse holder H -SH-	2561
1.22 Fuse holder on onboard supply control unit -J519-, left-hand drive	2561
1.23 Fuse holder on onboard supply control unit -J519-, right-hand drive	2562
1.24 Fuse holder on additional relay carrier, left-hand drive models	2563
1.25 Fuse holder for battery in luggage compartment, with hybrid drive	2564
1.26 Fitting location of fuse holder in main fuse box in luggage compartment, with RS3, up to October 2016	2565
1.27 Fitting location of fuse holder in main fuse box in luggage compartment, with RS3, from November 2016	2566
1.28 Fuse assignment, fuse holder in main fuse box in luggage compartment	2567-2568
803 - - Fitting locations: Relays - 3	2569-2582
1. Relays	2569-2582
1.1 Overview of relays (3-door)	2569-2570
1.2 Overview of relays (4-door)	2571-2572
1.3 Overview of relays (5-door)	2573-2574
1.4 Overview of relays (Cabriolet)	2575-2576
1.5 Relay locations on E-box, without hybrid drive	2577
1.6 Relay locations on E-box, with hybrid drive	2578
1.7 Relay locations on E-box, with RS3	2579
1.8 Relay slot assignment under left dash panel	2580
1.9 Relay slot assignment on additional relay carrier, left-hand drive models	2581
1.10 Relay slot assignment on additional relay carrier, right-hand drive models	2582
804 - -Fitting locations: Control units in front part of vehicle - 3	2583-2607
1. Control units in front part of vehicle	2583-2607
1.1 Overview of control units	2583-2584
1.2 Overview of additional control units and components (with hybrid drive)	2585
1.3 Battery monitor control unit -J367-	2586
1.4 ABS control unit -J104-	2587
1.5 Engine control unit -J623- (154-pin)	2588
1.6 Engine control unit -J623- (196-pin)	2589
1.7 Power steering control unit -J500-	2590
1.8 Adaptive cruise control unit -J428-	2591
1.9 Auxiliary heater control unit -J364-	2592
1.10 Three-phase current drive -VX54-	2593
1.11 Maintenance connector for high-voltage system -TW-	2594
1.12 High-voltage heater (PTC) control unit -J848-	2595
1.13 Brake servo -NX6-	2596
1.14 Brake system pressure accumulator -VX70-	2597
1.15 Power and control electronics for electric drive -JX1-	2598
1.16 High-voltage battery charger control unit -J1050-	2599
1.17 High-voltage battery charging socket 1 -UX4-	2600
1.18 High-voltage battery charging socket 1 -UX4-	2601
1.19 Air conditioner compressor control unit -J842-	2602
1.20 Automatic gearbox control unit -J217-, up to April 2016	2603
1.21 Automatic gearbox control unit -J217-, from May 2016	2604
1.22 Control unit for structure-borne sound -J869-	2605
1.23 Wiper motor control unit -J400-	2606
1.24 NOx sender control unit -J583-	2607
805 - -Fitting locations: Control units in interior and rear part of vehicle - 1	2608-2724
1. Control units in interior and rear part of vehicle	2608-2724
1.1 Overview of control units in interior of vehicle (3-door models)	2608-2613
1.2 Overview of control units in interior of vehicle (4-door models)	2614-2617

1.3 Overview of control units in interior of vehicle (5-door models)	2618-2621
1.4 Overview of control units in interior of vehicle (Cabriolet)	2622-2625
1.5 Overview of control units in rear part of vehicle (3-door)	2626-2627
1.6 Overview of control units in rear part of vehicle (4-door)	2628-2629
1.7 Overview of control units in rear part of vehicle (5-door)	2630-2631
1.8 Overview of additional control units in rear part of vehicle (5-door, with hybrid drive)	2632-2633
1.9 Overview of control units in rear part of vehicle (Cabriolet)	2634
1.10 Electronically controlled damping control unit -J250-	2635
1.11 Digital sound package control unit -J525-	2636
1.12 Reversing camera system control unit -J772- (3 and 5-door)	2637
1.13 Fuel pump control unit -J538- (petrol engine)	2638
1.14 Fuel pump control unit -J538- (diesel engine)	2639
1.15 Tyre Pressure Monitoring System control unit -J502- (4 and 5-door)	2640
1.16 Aerial amplifier for mobile telephone -R86- (3 and 5-door)	2641
1.17 Remote control receiver for auxiliary heater -R64- (3 and 5-door)	2642
1.18 Control unit in dash panel insert -J285-, 18-pin	2643
1.19 Control unit in dash panel insert -J285-, 32-pin	2644
1.20 Selector lever sensors control unit -J587-	2645
1.21 Trailer detector control unit -J345-, up to April 2014 (3 and 5-door)	2646
1.22 Trailer detector control unit -J345-, up from May 2014 (3 and 5-door)	2647
1.23 Control unit for electronic steering column lock -J764-, up to June 2018	2648
1.24 Control unit for electronic steering column lock -J764-, from July 2018	2649
1.25 Lane change assist control unit 2 -J770-, up to April 2016	2650
1.26 Lane change assist control unit 2 -J770-, from May 2016	2651
1.27 Lane change assist control unit -J769-, up to April 2016	2652
1.28 Lane change assist control unit -J769-, from May 2016	2653
1.29 Entry and start authorisation control unit -J518-, up to June 2018	2654
1.30 Entry and start authorisation control unit -J518-, from July 2018	2655
1.31 Air conditioning system control unit -J301-	2656
1.32 Climatronic control unit -J255-	2657
1.33 Onboard supply control unit -J519-	2658
1.34 Data bus diagnostic interface -J533-	2659
1.35 Airbag control unit -J234-	2660
1.36 Parking aid control unit -J446-/ park assist steering control unit -J791-	2661
1.37 Driver door control unit -J386-	2662
1.38 Front passenger door control unit -J387-	2663
1.39 Steering column electronics control unit -J527-, without heated steering wheel, up to June 2018	2664
1.40 Steering column electronics control unit -J527-, with heated steering wheel, up to June 2018	2665
1.41 Steering column electronics control unit -J527-, without heated steering wheel, from July 2018	2666
1.42 Steering column electronics control unit -J527-, with heated steering wheel, from July 2018	2667
1.43 Headlight range control unit -J431-/ control unit for cornering light and headlight range -J745-, up to April 2017	2668
1.44 Control unit for cornering light and headlight range control -J745-, from May 2017	2669
1.45 CAN bus control unit -J916-	2670
1.46 Special vehicle control unit -J608- (3 and 5-door)	2671
1.47 Rear driver side door control unit -J926-	2672
1.48 Rear passenger side door control unit -J927-	2673
1.49 Aerial amplifier for mobile telephone -R86- (4-door)	2674
1.50 Reversing camera system control unit -J772- (4-door)	2675
1.51 Remote control receiver for auxiliary heater -R64- (4-door)	2676
1.52 Trailer detector control unit -J345-, up to April 2014 (4-door)	2677
1.53 Trailer detector control unit -J345-, up from May 2014 (4-door)	2678
1.54 Special vehicle control unit -J608- (4-door)	2679
1.55 Special vehicle control unit -J608- (Cabriolet)	2680
1.56 Aerial amplifier for mobile telephone -R86- (Cabriolet)	2681
1.57 Trailer detector control unit -J345-, up to April 2014 (Cabriolet)	2682
1.58 Trailer detector control unit -J345-, from May 2014 (Cabriolet)	2683
1.59 Driver door control unit -J386- (Cabriolet)	2684
1.60 Passenger door control unit -J387- (Cabriolet)	2685
1.61 Convertible roof actuation control unit -J256-	2686
1.62 Reversing camera system control unit -J772- (Cabriolet)	2687
1.63 Interior mirror -EX5-	2688
1.64 All-wheel drive control unit -J492-	2689
1.65 Display unit for front information display and operating unit control unit -J685-	2690
1.66 Multimedia system operating unit -E380- (MMI)	2691
1.67 Front camera for driver assist systems -R242-	2692

1.68 Control unit 1 for information electronics -J794- (MMI High), up to April 2016	2693
1.69 TV tuner -R78- (5-door)	2694
1.70 TV tuner -R78- (4-door)	2695
1.71 Sliding sunroof adjustment control unit -J245-	2696
1.72 Control unit 1 for information electronics -J794- (radio), up to July 2016	2697
1.73 Control unit 1 for information electronics -J794-, MMI radio (I8E), from May 2016	2698
1.74 Control unit 1 for information electronics -J794-, MMI Navigation plus (I8L), from May 2016	2699
1.75 Multimedia system operating unit -E380- (radio)	2700
1.76 Control unit 1 for information electronics -J794- (MMI with radio), up to April 2016	2701
1.77 Hybrid battery unit -AX1-	2702
1.78 Fitting location overview - battery modules	2703
1.79 Battery monitor control unit -J367-	2704
1.80 Emergency call module control unit and communication unit -J949-	2705
1.81 Engine sound generator control unit -J943-	2706
1.82 Entry and start authorisation control unit -J518-, with US equipment, up to June 2018	2707
1.83 Entry and start authorisation control unit -J518-, with US equipment, from July 2018	2708
1.84 Multifunction steering wheel control unit -J453-	2709
1.85 Control unit for front left belt tensioner -J854-/ control unit for front right belt tensioner -J855- (Cabriolet)	2710
1.86 Fresh air blower control unit -J126-	2711
1.87 Reversing camera system control unit -J772-, from May 2016	2712
1.88 Control unit with rear driver side window regulator motor -J1016-/ Control unit with rear passenger side window regulator motor -J1017- (4 and 5-door)	2713
1.89 Control unit with rear driver side window regulator motor -J1016-/ Control unit with rear passenger side window regulator motor -J1017- (Cabriolet)	2714
1.90 Control unit for front left belt tensioner -J854-/ control unit for front right belt tensioner -J855- (not for Cabriolet)	2715
1.91 Control unit for reducing agent heater -J891-	2716-2719
1.91.1 Control unit for reducing agent heater -J891-, up to June 2018	2716
1.91.2 Control unit for reducing agent heater -J891-, for rear axle with all-wheel drive (1X1), from July 2018	2717
1.91.3 Control unit for reducing agent heater -J891-, for 4-guide axle (0N4) and front-wheel drive (1X0), from July 2018	2718
1.91.4 Control unit for reducing agent heater -J891-, for rear axle standard (0N1), from July 2018	2719
1.92 Chip card reader control unit -J676-	2720
1.93 Control unit for fuel tank leak detection -J909-	2721
1.94 Seat occupied recognition control unit -J706-	2722
1.95 Left neck heating control unit -J846-/ right neck heating control unit -J847-	2723-2724
806 - - Fitting locations: Coupling stations - 1	2725-2783
1. Coupling stations	2725-2783
1.1 Overview of coupling stations (3-door models)	2725-2728
1.2 Overview of coupling stations (4-door models)	2729-2732
1.3 Overview of coupling stations (5-door models)	2733-2736
1.4 Overview of coupling stations (Cabriolet)	2737-2738
1.5 Right coupling station for door wiring harness	2739
1.6 Seat wiring coupling station, right	2740
1.7 Rear right coupling station, rear lid	2741
1.8 Coupling station for rear bumper	2742
1.9 Coupling station, rear left side of rear lid	2743
1.10 Seat wiring coupling station, left	2744
1.11 Door wiring harness coupling station, left	2745
1.12 Coupling station for engine pre-wiring	2746
1.13 Coupling station in front bumper	2747
1.14 Coupling station, alternator	2748
1.15 Coupling station on left A-pillar	2749-2750
1.16 Coupling station on right A-pillar, left-hand drive model	2751
1.17 Coupling station for radiator fan	2752
1.18 Coupling station for roof wiring harness	2753
1.19 Rear left coupling station for door wiring harness	2754
1.20 Rear right coupling station for door wiring harness	2755
1.21 Seat wiring coupling station, right	2756
1.22 Coupling station, rear left side of luggage compartment lid	2757
1.23 Seat wiring coupling station, left	2758
1.24 Coupling station, electric steering	2759
1.25 Coupling station on right of convertible roof box lid	2760
1.26 Coupling station for engine pre-wiring. with hybrid drive	2761

1.27 Fuel tank coupling station/all-wheel drive	2762-2763
1.28 Coupling station, reducing agent metering system, rear right, up to June 2018	2764-2765
1.29 Coupling station, reducing agent metering system, rear right, for rear axle standard (0N1) or rear axle with all-wheel drive (1X1), from July 2018	2766-2767
1.30 Coupling station, reducing agent metering system, rear left, for 4-guide axle (0N4) and front-wheel drive (1X0), from July 2018	2768-2769
1.31 Washing water container coupling station	2770-2771
1.32 Coupling point, luggage compartment, right	2772-2773
1.33 Longitudinal member coupling station	2774-2775
1.34 Coupling station, bottom of engine	2776-2777
1.35 Coupling station, top of engine	2778-2779
1.36 Exhaust system coupling station	2780-2781
1.37 Exhaust flap coupling station	2782
1.38 Coupling stations on hybrid battery unit -AX1-	2783