

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 Battery - general notes	2
2.2 Maintenance-free batteries	2
2.3 Exploded view - battery	2
2.4 Disconnecting and connecting battery	3
2.5 Removing and installing earth cable with battery monitor control unit J367	4
2.6 Removing and installing battery	5
2.7 Removing and installing battery mounting	8
2.8 Checking battery	8
2.9 Charging battery	8
2.10 Preparations before charging battery	8
2.11 Preparations for back-up power supply of battery	10
3 Start/stop system	12
3.1 Safety precautions for vehicles with start/stop system	12
3.2 Exploded view - start/stop system	12
3.3 Removing and installing voltage stabiliser J532	13
4 Removing and installing alternator	14
4.1 Exploded view - alternator without sliding bushes	14
4.2 Removing and installing alternator - vehicles with 1.8 ltr. / 2.0 ltr. TFSI engine	14
4.3 Exploded view - alternator with sliding bushes	17
4.4 Removing and installing alternator - vehicles with 1.2 ltr. TFSI engine	19
4.5 Removing and installing alternator - vehicles with 1.4 ltr. TFSI engine	21
4.6 Removing and installing alternator - vehicles with 1.6 ltr. MPI engine	22
4.7 Removing and installing alternator - vehicles with 1.6 ltr. TDI engine	24
4.8 Removing and installing alternator - vehicles with 1.9 ltr. TDI engine	27
4.9 Removing and installing alternator - vehicles with 2.0 ltr. TDI engine	31
5 Checking and servicing alternator	36
5.1 Checking alternator	36
6 Removing and installing starter	37
6.1 Exploded view - starter	37
6.2 Removing and installing starter - vehicles with 1.2 ltr. TFSI engine and dual clutch gearbox	38
6.3 Removing and installing starter - vehicles with 1.2 ltr./1.4 ltr. TFSI engine and manual gearbox	39
6.4 Removing and installing starter - vehicles with 1.4 ltr. TFSI engine and dual clutch gearbox	40
6.5 Removing and installing starter - vehicles with 1.6 ltr. engine	41
6.6 Removing and installing starter - vehicles with 1.8 ltr./2.0 ltr. TFSI engine and manual gearbox	43
6.7 Removing and installing starter - vehicles with 1.8 ltr./2.0 ltr. TFSI engine and dual clutch gearbox	45
6.8 Removing and installing starter - vehicles with 1.6 ltr. TDI engine	46
6.9 Removing and installing starter - vehicles with 1.9 ltr. TDI engine	48
6.10 Removing and installing starter - vehicles with 2.0 ltr. TDI engine	49
90 - Gauges, instruments	51
1 Contact corrosion	51
2 Instrument cluster	52
2.1 Exploded view - instrument cluster, radio controlled clock receiver, data bus diagnostic interface	52
2.2 Removing and installing instrument cluster	53



2.3	Multi-pin connectors on instrument cluster	54
2.4	Pin assignment at multi-pin connectors on instrument cluster	54
2.5	Pin assignment on fuel gauge sender G	55
2.6	Pin assignment at coolant temperature senders - vehicles with 1.6 ltr. MPI engine	56
2.7	Pin assignment at coolant temperature senders - vehicles with 1.8 ltr. / 2.0 ltr. TFSI engine	57
2.8	Pin assignment at coolant temperature senders - vehicles with 1.6 ltr. / 2.0 ltr. TDI engine	58
2.9	Removing and installing ambient temperature sensor G17	59
2.10	Removing and installing radio-controlled clock receiver J489	60
3	Cigarette lighter, 12 V electric socket	61
3.1	Exploded view - cigarette lighter, 12 V electric socket	61
3.2	Removing and installing cigarette lighter U1	61
3.3	Removing and installing cigarette lighter illumination bulb L28	63
3.4	Removing and installing electric socket U	64
3.5	Renewing electric socket U	64
4	Horns	66
4.1	Exploded view - horns	66
4.2	Removing and installing horns H2 / H7	66
4.3	Removing and installing bracket for horns	67
5	Data bus diagnostic interface	68
5.1	Data bus diagnostic interface J533	68
5.2	Removing and installing data bus diagnostic interface J533	68
5.3	Connector at data bus diagnostic interface J533	69
92	Windscreen wash/wipe system	70
1	Contact corrosion	70
2	Overview - windscreen wiper and washer system/headlight washer system	71
3	Windscreen wiper system	72
3.1	Exploded view - windscreen wiper system	72
3.2	Moving windscreen wipers to service position	73
3.3	Renewing wiper blade	74
3.4	Removing and installing wiper arms	74
3.5	Adjusting wiper arms	75
3.6	Removing and installing windscreen wiper motor V with wiper motor control unit J400	76
3.7	Renewing windscreen wiper motor V with wiper motor control unit J400	78
3.8	Removing and installing rain and light sensor	78
4	Windscreen washer system	82
4.1	Exploded view - washer fluid reservoir, washer fluid hoses, washer jets	82
4.2	Removing and installing filler neck for washer fluid reservoir	83
4.3	Removing and installing washer fluid reservoir - vehicles without auxiliary heater	84
4.4	Removing and installing windscreen washer fluid level sender G33	85
4.5	Removing and installing washer pump V5	86
4.6	Removing and installing washer jets	87
4.7	Adjusting washer jets	87
5	Headlight washer system	88
5.1	Exploded view - washer fluid reservoir, washer fluid hoses, washer jets	88
5.2	Removing and installing headlight washer system pump V11	88
5.3	Removing and installing headlight washer jets	89
5.4	Adjusting washer jets	90
5.5	Removing and installing washer fluid reservoir	90
6	Washer fluid hoses	91
94	Lights, bulbs, switches - exterior	92
1	Contact corrosion	92

2	Halogen headlights	93
2.1	Exploded view - halogen headlight	93
2.2	Removing and installing headlight housing	95
2.3	Removing and installing mounting for headlight housing	95
2.4	Renewing headlight dipped beam bulb M29 / M31	96
2.5	Renewing headlight main beam bulb M30 / M32	97
2.6	Renewing bulb for daytime running light and side light L186 / L188	98
2.7	Renewing front turn signal bulb M5 / M7	99
2.8	Removing and installing headlight range control motor V48 / V49	100
2.9	Installing repair kit for headlight housing	101
2.10	Adapting headlights for driving on the left side of the road	102
2.11	Adapting headlights for driving on the right side of the road	103
3	Bi-xenon gas discharge headlights with cornering light	104
3.1	Safety precautions when handling gas discharge bulbs	104
3.2	Exploded view - bi-xenon gas discharge headlight with cornering light	104
3.3	Removing and installing headlight housing	106
3.4	Removing and installing mounting for headlight housing	107
3.5	Renewing gas discharge bulb L13 / L14	108
3.6	Renewing LED module for daytime running light and side light L176 / L177	110
3.7	Removing and installing dip beam screen motor V294 / V295	110
3.8	Removing and installing headlight range control motor V48 / V49 - vehicles without cornering lights	110
3.9	Removing and installing dynamic cornering light control motor V318 / V319 - vehicles with cornering lights	110
3.10	Renewing front turn signal bulb M5 / M7	110
3.11	Removing and installing gas discharge bulb control unit J343 / J344	111
3.12	Removing and installing output module for headlight J667 / J668	112
3.13	Installing repair kit for headlight housing	113
3.14	Adapting headlights for driving on the left or right side of the road - rest-of-the-world vehicles	113
4	Automatic headlight range control	114
4.1	Overview - automatic headlight range control	114
4.2	Removing and installing control unit for headlight range control J431	114
5	Fog lights	116
5.1	Exploded view - fog light	116
5.2	Removing and installing fog lights	116
5.3	Renewing fog light bulb L22 / L23	117
6	Adjusting headlight settings	118
6.1	Adjusting headlights	118
6.2	Adjusting halogen headlights	118
6.3	Adjusting gas discharge headlights	120
6.4	Adjusting fog lights	123
7	Turn signal repeaters - vehicles up to model year 2010	125
7.1	Exploded view - exterior mirror turn signal	125
7.2	Removing and installing exterior mirror turn signal bulb L131 / L132	125
8	Turn signal repeaters - vehicles from model year 2011 onwards	128
8.1	Exploded view - exterior mirror turn signal	128
8.2	Removing and installing exterior mirror turn signal bulb L131 / L132	129
9	Tail light cluster	131
9.1	Exploded view - outer tail light cluster	131
9.2	Removing and installing outer tail light cluster	132
9.3	Removing and installing bulb holder	132
9.4	Exploded view - inner tail light cluster	132
9.5	Removing and installing inner tail light cluster	134
9.6	Removing and installing rear fog light bulb L46 / L47	135

9.7	Removing and installing reversing light bulb M16 / M17	135
10	Exterior lights (rear)	136
10.1	Exploded view - high-level brake light and number plate light	136
10.2	Removing and installing high-level brake light	137
10.3	Preparing high-level brake light for installation	137
10.4	Removing and installing number plate light X	138
11	Steering column switch module	139
11.1	Exploded view - steering column switch module	139
11.2	Removing and installing steering column electronics control unit J527	140
11.3	Pin assignment on steering column electronics control unit J527	141
11.4	Removing and installing return ring with slip ring	144
11.5	Removing and installing steering angle sender G85	145
11.6	Removing and installing turn signal switch E2 and cruise control system switch E45	145
11.7	Removing and installing intermittent wiper switch E22	146
12	Lock cylinder and ignition/starter switch with steering lock	147
12.1	Removing and installing lock cylinder	147
12.2	Removing and installing ignition key withdrawal lock solenoid N376	148
12.3	Removing and installing ignition/starter switch D	148
12.4	Pin assignment on ignition/starter switch	150
12.5	Removing and installing steering lock housing	150
12.6	Removing and installing adapter wiring harness for steering lock housing	151
13	Parking aid	152
13.1	Overview - parking aid (front)	152
13.2	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	153
13.3	Removing and installing front parking aid senders G252 / G253 / G254 / G255	153
13.4	Removing and installing front park assist steering senders G568 / G569	153
13.5	Overview - parking aid (rear)	153
13.6	Removing and installing parking aid control unit J446	154
13.7	Removing and installing rear parking aid warning buzzer H15	155
13.8	Removing and installing rear parking aid senders G203 / G204 / G205 / G206	155
96	Lights, bulbs, switches - interior	156
1	Lights and switches in dash panel	156
1.1	Overview - lights and switches in dash panel	156
1.2	Removing and installing central locking SAFELOCK function warning lamp K133	157
1.3	Removing and installing light switch E1	157
1.4	Removing and installing regulator/switch unit (E20 , E102) and “coming home” button	158
1.5	Removing and installing hazard warning light switch E3 - vehicles up to 01.2010	158
1.6	Removing and installing tyre pressure monitor button E226 - vehicles up to 01.2010	159
1.7	Removing and installing start/stop operation button E693 - vehicles up to 01.2010	159
1.8	Removing and installing TCS and ESP button E256 - vehicles up to 01.2010	160
1.9	Removing and installing warning lamp for airbag deactivated on front passenger side K145 - vehicles up to 01.2010	160
1.10	Removing and installing parking aid button E266 - vehicles up to 01.2010	161
1.11	Removing and installing switches in dash panel - vehicles from 01.2010 onwards	161
1.12	Removing and installing front heated seat regulator E94 / E95	162
1.13	Removing and installing glove compartment light W6	162
1.14	Removing and installing glove compartment light switch E26	163
1.15	Removing and installing bulb for footwell light W9 / W10	164
2	Lights and switches in front doors	165
2.1	Overview - lights and switches in front doors	165
2.2	Removing and installing mirror adjustment switch E43 / E168	166
2.3	Removing and installing operating unit for window regulator in driver door E512	167
2.4	Removing and installing window regulator switch in front passenger door E107	167
2.5	Removing and installing interior locking button for central locking system E308 / E309	168

2.6	Removing and installing door opener illumination bulb L108 / L109	168
2.7	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	169
2.8	Removing and installing door contact switch F2 / F3	169
2.9	Removing and installing front entry light W31 / W32 and door warning lamp W30 / W36	170
3	Lights and switches in centre console, front seats, luggage compartment	171
3.1	Overview - lights and switches in centre console, front seats, luggage compartment	171
3.2	Removing and installing selector lever position display Y26 with selector lever display illumination bulb L101	172
3.3	Removing and installing convertible roof actuation button E137	172
3.4	Removing and installing heated rear seat switch with regulator E128 / E129	173
3.5	Removing and installing luggage compartment light W18 / W35	173
3.6	Removing and installing rear lid contact switch	174
4	Lights and switches in roof trim	175
4.1	Overview - lights and switches in roof trim	175
4.2	Removing and installing illuminated vanity mirror W20 / W14	176
4.3	Removing and installing contact switch for vanity mirror F147 / F148	176
4.4	Removing and installing interior light/reading light (front)	176
4.5	Renewing interior light/reading light bulbs (front) W1 / W13 / W19	177
4.6	Removing and installing LED for background lighting	177
4.7	Removing and installing garage door operation control unit J530	178
4.8	Removing and installing garage door operating unit E284	178
5	Immobiliser	179
6	Ultrasonic interior monitoring	180
6.1	Overview - ultrasonic interior monitoring	180
6.2	Removing and installing interior monitoring sensor G273	181
6.3	Removing and installing alarm horn H12	181
7	Towing bracket	183
7.1	Removing and installing trailer detector control unit J345	183
97 - Wiring		184
1	Contact corrosion	184
2	Relay carriers, fuse carriers (engine compartment)	185
2.1	Exploded view - electronics box (engine compartment), connector point (plenum chamber)	185
2.2	Removing and installing relay and fuse holder B SB - vehicles up to 05.2009	187
2.3	Removing and installing relay and fuse holder B SB - vehicles from 06.2009 onwards	188
2.4	Removing and installing electronics box (engine compartment, left-side)	189
2.5	Removing and installing connector point in plenum chamber	190
3	Relay carriers, fuse carriers (vehicle interior, luggage compartment)	192
3.1	Exploded view - relay and fuse carrier (dash panel), relay and fuse carrier (luggage compartment)	192
3.2	Unplugging door disconnecter (left-side)	193
3.3	Removing and installing fuse holder C SC in dash panel (driver side)	193
3.4	Removing and installing onboard supply control unit J519 - vehicles up to 05.2009	194
3.5	Removing and installing onboard supply control unit J519 - vehicles from 06.2009 onwards	195
3.6	Removing and installing 5-position relay carrier - vehicles from 06.2009 onwards	196
3.7	Removing and installing 5-position relay carrier	197
3.8	Unplugging door disconnecter (right-side)	197
4	Repairing wiring harnesses and electrical connectors	199
5	Repairing connector housings and electrical connectors	200
6	Releasing and dismantling connector housings	201
7	Cleaning contact surfaces	202



8	Repairing aerial wires	203
9	Vehicle diagnostic, testing and information systems	204