

Contents

91 - Radio, telephone, navigation	1
1 Radio systems	1
1.1 General notes	1
1.2 Overview	2
1.3 Radio systems - layout	2
1.4 Connectors on Radio R	3
1.5 Fitting locations	5
1.6 Removing and installing "chorus" and "concert" radios	7
1.7 Removing and installing "symphony" radio	8
1.8 Activating/deactivating transport mode of "symphony II+" radio unit	8
2 Sound system	9
2.1 General notes	9
2.2 Overview	9
2.3 Active loudspeakers - layout	10
2.4 BOSE sound system - layout	10
2.5 Microphones - overview	10
2.6 Connector on amplifier R12	11
2.7 Connector on amplifier R12 (with bass loudspeaker R100)	12
2.8 Fitting locations	12
2.9 Removing and installing amplifier R12	14
2.10 Function test for internal microphone R74	14
2.11 Removing and installing front left mid-range and bass loudspeaker R101	15
2.12 Removing and installing rear left mid-range loudspeaker R105	15
2.13 Removing and installing amplifier R12 (with bass loudspeaker R100)	16
2.14 Removing and installing bass loudspeaker R100	16
2.15 Removing and installing front left treble loudspeaker R20	17
2.16 Removing and installing centre mid-range and treble loudspeaker R158	17
2.17 Removing and installing internal microphone R74	18
3 Aerial system	19
3.1 General notes	19
3.2 Overview	19
3.3 Pin assignment for aerial amplifier 2 R111	20
3.4 Pin assignment for aerial amplifier R24	20
3.5 Pin assignment for aerial selection control unit J515	20
3.6 Fitting locations	20
3.7 Removing and installing aerial amplifier R24 / aerial amplifier 2 R111	21
3.8 Removing and installing aerial selection control unit J515	22
3.9 Removing and installing navigation system aerial R50	22
3.10 Removing and installing telephone aerial R65	23
4 Telephone systems	24
4.1 General notes	24
4.2 Overview	24
4.3 Phone pre-installation - layout	26
4.4 Pre-fitted components for mobile phone installation - layout	26
4.5 Connectors and pin assignment	27
4.6 Fitting locations	28
4.7 Removing and installing telephone bracket R126	29
4.8 Removing and installing telephone transmitter and receiver unit R36	30
4.9 Removing and installing aerial amplifier for mobile telephone R86	31
4.10 Removing and installing telephone microphone R38	31
5 Navigation system RNS-E	33
5.1 General notes	33

5.2	On-screen fault messages	33
5.3	Overview	34
5.4	RNS-E - layout	35
5.5	Connectors on navigation operating electronics control unit J402	36
5.6	Fitting locations	38
5.7	Removing and installing operating electronics control unit for navigation J402	40
6	Navigation system RNS-Low	41
6.1	General notes	41
6.2	Overview	41
6.3	RNS-Low - layout	43
6.4	Connectors for control unit with display for radio and navigation J503	44
6.5	Fitting locations	45
6.6	Removing and installing control unit with display for radio and navigation J503	47
7	CD changer R41	48
7.1	General notes	48
7.2	Connectors on CD changer R41	48
7.3	Removing and installing CD changer R41	48
8	iPod holder R192	50
8.1	General notes	50
8.2	Connectors on iPod holder R192	50
8.3	Removing and installing iPod holder R192	50
9	Connection for external audio source R199	52
9.1	General notes	52
9.2	Connectors on connection for external audio source R199	52
9.3	Removing and installing connection for external audio source R199	52
10	Steering column electronics control unit J527	54
10.1	General notes	54
10.2	Steering column switch module - overview	54
10.3	Connectors on steering column electronics control unit J527	55
10.4	Removing and installing steering column electronics control unit J527	56
11	Multi-function steering wheel	58
11.1	General notes	58
11.2	Overview	58
11.3	Layout	60
11.4	Removing and installing multi-function buttons	60
11.5	Removing and installing tiptronic buttons	61