

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Routing and attaching pipes/hoses and wiring</b> .....	<b>1</b>
<b>2 Contact corrosion</b> .....	<b>2</b>
<b>50 - Body - front</b> .....	<b>3</b>
<b>1 Body - front</b> .....	<b>3</b>
1.1 Tools .....	3
1.2 Removing and installing lock carrier with attachments .....	3
1.3 Removing and installing noise insulation frame .....	5
1.4 Removing and installing plenum chamber cover .....	7
<b>2 Wing</b> .....	<b>8</b>
2.1 Removing and installing wing .....	8
<b>3 Noise insulation</b> .....	<b>10</b>
3.1 Removing and installing noise insulation .....	10
<b>55 - Bonnet, rear lid</b> .....	<b>11</b>
<b>1 Bonnet</b> .....	<b>11</b>
1.1 Removing and installing bonnet .....	11
1.2 Removing and installing cable for bonnet lock .....	16
1.3 Lining for bonnet .....	17
1.4 Bonnet seal .....	18
1.5 Removing and installing plenum chamber cover .....	19
<b>2 Rear lid</b> .....	<b>20</b>
2.1 Exploded view - rear lid hinge, gas strut and rear lid stop .....	20
2.2 Removing and installing rear lid .....	21
2.3 Removing and installing rear lid hinge .....	22
2.4 Gap widths at rear lid .....	22
2.5 Adjusting rear lid .....	23
2.6 Removing and installing adjusting buffers .....	25
2.7 Removing and installing stop buffer .....	25
2.8 Removing and installing gas strut and releasing gas from gas strut .....	26
2.9 Removing and installing cover for water channel .....	26
2.10 Exploded view - lock cylinder, handle trim, rear lid lock and striker .....	28
2.11 Removing and installing rear lid lock .....	29
2.12 Removing and installing striker .....	30
2.13 Removing and installing cable for rear lid lock .....	31
2.14 Removing and installing lock cylinder .....	32
2.15 Removing and installing handle trim .....	32
<b>3 Tank flap</b> .....	<b>33</b>
3.1 Exploded view - tank flap, tank flap unit and manual release mechanism .....	33
3.2 Removing and installing operating rod with manual release cable for tank flap release ..	34
3.3 Removing and installing trim for tank flap unit .....	34
3.4 Removing and installing tank flap unit .....	34
3.5 Gap widths at tank flap .....	35
3.6 Removing and installing tank flap cup for filler neck of fuel tank .....	36
3.7 Removing and installing drain hose for tank flap cup for filler neck of fuel tank .....	37
<b>57 - Front doors, door components, central locking</b> .....	<b>38</b>
<b>1 Front door</b> .....	<b>38</b>
1.1 Exploded view - front door .....	38
1.2 Removing and installing front door .....	39
1.3 Gap widths at door .....	39



1.4	Adjusting door	40
1.5	Exploded view - window regulator motor and window regulator	41
1.6	Removing and installing window regulator motor V147 / V148	42
1.7	Removing and installing cover panel for door shell	43
1.8	Removing and installing window regulator	44
1.9	Exploded view - outer and inner window slot trim strips and exterior mirror seal	45
1.10	Removing and installing outer window slot trim strip	46
1.11	Removing and installing inner window slot trim strip	47
1.12	Removing and installing exterior mirror seal	48
1.13	Exploded view - inner door seal and convertible roof seal (front)	48
1.14	Removing and installing inner door seal	49
1.15	Removing and installing seal for A-pillar/roof frame	50
1.16	Exploded view - door handle, mounting bracket and door lock	51
1.17	Removing and installing outer door handle trim	53
1.18	Removing and installing lock cylinder	54
1.19	Removing and installing mounting bracket and outer door handle	54
1.20	Removing and installing operating shaft for lock cylinder	56
1.21	Exploded view - striker, anti-theft bracket, door lock and operating cable for door handle	56
1.22	Removing and installing striker	57
1.23	Removing and installing cover for anti-theft system	57
1.24	Removing and installing door lock	58
1.25	Removing and installing operating cable for door handle	59
<b>2</b>	<b>Window regulators (rear)</b>	<b>60</b>
2.1	Exploded view - window regulator motor and window regulator	60
2.2	Removing and installing window regulator motor (rear) V26 / V27	61
2.3	Removing and installing door control unit at window regulator motor (rear)	61
2.4	Removing and installing mounting element for side window	61
2.5	Removing and installing window regulator	62
2.6	Exploded view - inner window slot trim strip and outer window slot trim strip/convertible roof compartment trim strip	63
2.7	Removing and installing outer window slot trim strip/convertible roof compartment trim strip	64
2.8	Removing and installing inner window slot trim strip	66
<b>3</b>	<b>Central locking system</b>	<b>67</b>
3.1	Overview - central locking system	67
3.2	Removing and installing bonnet contact switch F266	69
3.3	Removing and installing contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system F124	69
3.4	Removing and installing tank filler flap locking motor V155	69
3.5	Removing and installing convenience system central control unit J393	70
3.6	Servicing central locking system	71
<b>61</b>	<b>Convertible roof, hardtop, canopy</b>	<b>72</b>
<b>1</b>	<b>Repairing convertible roof (soft top)</b>	<b>72</b>
1.1	Safety precautions	72
1.2	Exploded view - convertible roof	72
1.3	Removing and installing convertible roof	74
1.4	Removing and installing tensioner	77
1.5	Adjusting convertible roof	79
1.6	Removing and installing seals for convertible roof	79
1.7	Removing and installing locking mechanism for convertible roof	81
1.8	Removing and installing locking element	85
1.9	Removing and installing headliner	86
1.10	Renewing convertible roof cover	93
<b>2</b>	<b>Repairing hydraulic system for convertible roof</b>	<b>105</b>

2.1	General information on hydraulic system	105
2.2	Rules for cleanliness	105
2.3	Filling and bleeding the hydraulic system	105
2.4	Exploded view - hydraulic system	106
2.5	Removing hydraulic pump	107
2.6	Renewing pump motor	110
2.7	Checking fluid level in hydraulic pump	110
2.8	Exploded view - hydraulic cylinder	112
<b>63</b>	<b>- Bumpers</b>	<b>115</b>
<b>1</b>	<b>Bumper (front)</b>	<b>115</b>
1.1	Removing and installing bumper (front)	115
1.2	Securing points for bumper cover	117
1.3	Removing and installing trim grille	118
1.4	Installing brackets for parking aid	119
<b>2</b>	<b>Bumper (rear)</b>	<b>124</b>
2.1	Exploded view - bumper cover (rear)	124
2.2	Removing and installing bumper cover (rear)	125
2.3	Gap widths at bumper cover (rear)	126
2.4	Removing and installing guides (side/rear)	127
2.5	Removing and installing bumper cover trim	129
2.6	Removing and installing bumper cover (bottom section)	129
2.7	Removing and installing bumper cover mounting	130
2.8	Removing and installing impact bar (vehicles without towing bracket)	130
2.9	Removing and installing impact bar (vehicles with towing bracket)	130
2.10	Installing brackets for parking aid	131
<b>64</b>	<b>- Glazing</b>	<b>136</b>
<b>1</b>	<b>Flush-bonded windows</b>	<b>136</b>
1.1	Removing and installing flush-bonded windows	136
1.2	Materials	139
1.3	Repairing windows using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	140
1.4	Minimum drying times	140
1.5	Re-sealing windows	141
1.6	Exploded view - windscreen	141
1.7	Removing and installing rain sensor	146
1.8	Removing windscreen	148
1.9	Installing windscreen	152
<b>2</b>	<b>Windows secured by threaded fasteners</b>	<b>155</b>
2.1	Exploded view - front door window	155
2.2	Removing and installing door window	156
2.3	Adjustment dimensions and gap widths - door window	156
2.4	Adjusting door window (lateral adjustment)	158
2.5	Adjusting door window (height adjustment)	160
2.6	Exploded view - side window (rear), mounting element and window regulator	161
2.7	Removing and installing side window	161
2.8	Adjustment dimensions and gap widths - side window	162
2.9	Adjusting side window (lateral adjustment)	164
2.10	Adjusting side window (height adjustment)	165
2.11	Exploded view - inner window slot trim strip and outer window slot trim strip/convertible roof compartment trim strip	166
2.12	Removing and installing outer window slot trim strip/convertible roof compartment trim strip	167
2.13	Removing and installing inner window slot trim strip	168



<b>66 - Exterior equipment</b> .....	<b>169</b>
<b>1 Strips and panels</b> .....	<b>169</b>
1.1 Exploded view - trim strips for front wing, front door, side panel and sill panel .....	169
1.2 Trim strip for front wing .....	169
1.3 Removing and installing trim strip for front door .....	171
1.4 Trim strip for side panel (rear) .....	171
1.5 Removing and installing sill panel trim .....	172
1.6 Removing and installing trim cover for convertible roof compartment trim strip .....	173
<b>2 Exterior mirrors</b> .....	<b>175</b>
2.1 Exploded view - exterior mirror - vehicles up to 05.2009 .....	175
2.2 Removing and installing mirror glass .....	175
2.3 Removing and installing housing for exterior mirror .....	177
2.4 Removing and installing cover for mounting for mirror adjustment unit .....	177
2.5 Removing and installing mounting for mirror adjustment unit .....	177
2.6 Removing and installing mirror adjustment unit .....	179
2.7 Exploded view - exterior mirror (vehicles from 06.2009 onwards) .....	179
2.8 Removing and installing mirror glass .....	180
2.9 Removing and installing housing for exterior mirror .....	182
2.10 Removing and installing cover for mounting for mirror adjustment unit .....	183
2.11 Removing and installing mounting for mirror adjustment unit .....	183
2.12 Removing and installing mirror adjustment unit .....	184
<b>3 Radiator grille</b> .....	<b>185</b>
3.1 Removing and installing radiator grille .....	185
<b>4 Underbody trim</b> .....	<b>186</b>
4.1 Removing and installing noise insulation .....	186
4.2 Exploded view - covers and heat shields .....	187
4.3 Removing and installing underbody cover (front) .....	189
4.4 Removing and installing outer underbody cover .....	189
4.5 Removing and installing underbody cover (centre) .....	190
4.6 Removing and installing floor trim cover (rear) .....	190
4.7 Removing and installing cross member for underbody .....	191
4.8 Removing and installing heat shield for centre tunnel .....	191
4.9 Removing and installing heat shield for centre silencer .....	192
4.10 Removing and installing heat shield for rear silencer .....	192
<b>5 Wheel housing liners</b> .....	<b>193</b>
5.1 Exploded view - wheel housing liner (front) .....	193
5.2 Exploded view - wheel housing liner (rear) .....	194
5.3 Removing and installing wheel housing liner (rear) .....	195
5.4 Removing and installing wheel spoiler .....	195
<b>6 Model emblems</b> .....	<b>196</b>
6.1 Dimensions for emblems .....	196