

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions for Automatic Rollover Support System	4
2.3 Safety precautions when working on the cooling system	4
2.4 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	6
3.1 Important notes	6
3.2 General notes	6
3.3 Information on handling fine dust, aluminium dust and steel dust	7
3.4 Routing and attachment of pipes, hoses and wiring	8
3.5 Contact corrosion	8
3.6 Bonding surfaces for adhesive strips	8
3.7 Self-locking bolts	8
3.8 Identification plates	8
3.9 Impact wrenches	8
3.10 Moulded foam inserts	9
3.11 Bonded joints	10
3.12 Corrosion protection	11
3.13 Matching the surface contour	12
4 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	13
5 Processing body structure adhesive D 180 004 M2	15
5.1 Preparing bonding surfaces	16
6 Vehicle identification data	29
6.1 Type plate and vehicle identification number	29
6.2 Vehicle data sticker	29
7 Body dimensions	30
7.1 Floor group, front	30
7.2 Floor group, centre	32
7.3 Floor group, rear	33
7.4 Body - front	34
7.5 Body - centre	36
7.6 Body - rear	39
8 Tools	41
9 Straightening jig	45
9.1 Procedure for repairing structural body damage on Audi vehicles	45
50 - Body - front	46
1 Safety precautions	46
2 Engine console - Renewal	47
2.1 Tools	47
2.2 Procedure	47
3 Upper wheel housing longitudinal member - Renewal	53
3.1 Tools	53
3.2 Procedure	53
4 Upper inner longitudinal member for wheel housing - Renewal	57
4.1 Tools	57
4.2 Procedure	57



5	Front longitudinal member - Renewal	61
5.1	Tools	61
5.2	Procedure	61
6	Front longitudinal member - Partial renewal	68
6.1	Tools	68
6.2	Procedure	68
7	Repairing threads for attachment of subframe	72
7.1	Tools	72
51 - Body - centre		79
1	Safety precautions	79
2	Roof frame - Renewal	80
2.1	Tools	80
2.2	Procedure	80
3	Upper A-pillar - Renewal	84
3.1	Tools	84
3.2	Procedure	84
4	A-pillar and outer side member - Renewal	87
4.1	Tools	87
4.2	Procedure	87
5	Reinforcement tube - Renewal	91
5.1	Tools	91
5.2	Procedure	91
6	Inner A-pillar - Renewal	94
6.1	Tools	94
6.2	Procedure	94
7	Inner B-pillar - Renewal	101
7.1	Tools	101
7.2	Procedure	101
8	Diagonal struts - Renewal	104
8.1	Tools	104
8.2	Procedure	104
9	Inner side member - Partial renewal	109
9.1	Tools	109
9.2	Procedure	109
10	Inner side member - Renewal	111
10.1	Tools	111
10.2	Procedure	111
53 - Body - rear		115
1	Safety precautions	115
2	Rear upper cross panel - Renewal	116
2.1	Tools	116
2.2	Procedure	116
3	Inner cross panel - Renewal	120
3.1	Tools	120
3.2	Procedure	120
4	Tail light mounting - Renewal	122
4.1	Tools	122
4.2	Procedure	122
5	Luggage compartment floor - Renewal	124
5.1	Tools	124
5.2	Procedure	124

6	Rear longitudinal member - Partial renewal	128
6.1	Tools	128
6.2	Procedure	128
7	Side panel - Renewal	131
7.1	Tools	131
7.2	Procedure	131
8	Rear wheel housing - Partial renewal	138
8.1	Tools	138
8.2	Procedure	138