

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 General notes</b>	<b>1</b>
1.1 Running gear	1
1.2 Steering	1
1.3 Types of tyre	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on vehicles with high-voltage system	2
2.2 Safety precautions when working in the vicinity of high-voltage components	3
2.3 Safety precautions when working on vehicles with start/stop system	3
2.4 Safety precautions when using testers and measuring instruments during a road test	3
<b>3 Repair instructions</b>	<b>4</b>
3.1 Leaks at shock absorbers	4
3.2 Noises from shock absorbers	5
3.3 Checking shock absorbers when removed	6
3.4 Checking shock absorbers on shock tester	6
3.5 Maximum values "a" in mm	7
3.6 Rules for cleanliness	8
3.7 General notes	8
3.8 General repair instructions	8
3.9 Contact corrosion	9
3.10 Steering rack	9
3.11 Gaskets, seals	10
3.12 Nuts, bolts	10
3.13 Electrical components	10
3.14 Repair instructions for drive shaft	11
3.15 Repairing damaged threads in longitudinal member (subframe to body)	12
3.16 Lifting suspension to unladen position - vehicles with coil springs	12
<b>4 Technical data</b>	<b>15</b>
4.1 Running gear	15
4.2 Steering	15
<b>5 Disposal</b>	<b>16</b>
5.1 Releasing gas and draining front gas-filled shock absorbers	16
5.2 Releasing gas and draining rear gas-filled shock absorbers	18
<b>40 - Front suspension</b>	<b>20</b>
<b>1 Front axle</b>	<b>20</b>
1.1 Overview of fitting locations - front axle	20
<b>2 Subframe</b>	<b>21</b>
2.1 Assembly overview - subframe	21
2.2 Fixing subframe in position	23
2.3 Lowering subframe	27
2.4 Removing and installing subframe without steering rack	39
2.5 Removing and installing subframe with steering rack	50
2.6 Servicing subframe	65
2.7 Removing and installing anti-roll bar	87
2.8 Removing and installing coupling rod	89
<b>3 Suspension strut, upper suspension links</b>	<b>91</b>
3.1 Assembly overview - suspension strut, upper suspension links	91
3.2 Removing and installing suspension strut	93
3.3 Servicing suspension strut	99
3.4 Lowering suspension strut	101
<b>4 Lower wishbone, swivel joint</b>	<b>104</b>



4.1	Assembly overview - lower wishbone, swivel joint	104
4.2	Removing and installing lower wishbone	107
4.3	Renewing bonded rubber bushes for lower wishbone	111
4.4	Removing and installing swivel joint	118
<b>5</b>	<b>Wheel bearing</b>	<b>121</b>
5.1	Assembly overview - wheel bearing	121
5.2	Removing and installing wheel bearing housing	123
5.3	Removing and installing wheel bearing unit	127
<b>6</b>	<b>Drive shaft</b>	<b>132</b>
6.1	Overview - drive shaft	132
6.2	Assembly overview - drive shaft	133
6.3	Loosening and tightening bolt securing drive shaft	147
6.4	Removing and installing heat shield for drive shaft	148
6.5	Removing and installing drive shaft	150
6.6	Dismantling and assembling drive shaft	176
6.7	Checking outer constant velocity joint	220
6.8	Checking inner constant velocity joint	222
<b>42</b>	<b>Rear suspension</b>	<b>226</b>
<b>1</b>	<b>Rear axle</b>	<b>226</b>
1.1	Overview - rear axle	226
1.2	Removing and installing rear axle	228
<b>2</b>	<b>Axle beam</b>	<b>249</b>
2.1	Assembly overview - axle beam	249
2.2	Renewing bonded rubber bushes for axle beam	250
<b>3</b>	<b>Subframe</b>	<b>262</b>
3.1	Assembly overview - subframe	262
3.2	Fixing subframe in position	266
3.3	Servicing subframe	275
<b>4</b>	<b>Anti-roll bar</b>	<b>286</b>
4.1	Assembly overview - anti-roll bar	286
4.2	Removing and installing anti-roll bar	286
4.3	Removing and installing coupling rod	292
<b>5</b>	<b>Suspension links, track rod</b>	<b>295</b>
5.1	Assembly overview - transverse links	295
5.2	Assembly overview - track rod	297
5.3	Removing and installing upper transverse link	298
5.4	Removing and installing lower transverse links	300
5.5	Removing and installing track rod	303
<b>6</b>	<b>Suspension strut/shock absorber, spring</b>	<b>305</b>
6.1	Assembly overview - suspension strut/shock absorber, spring	305
6.2	Removing and installing shock absorber	307
6.3	Servicing shock absorber	311
6.4	Removing and installing spring	316
<b>7</b>	<b>Wheel bearing, trailing arm</b>	<b>322</b>
7.1	Assembly overview - wheel bearing	322
7.2	Assembly overview - trailing arm	327
7.3	Removing and installing wheel bearing housing	328
7.4	Removing and installing wheel bearing unit	339
7.5	Renewing bonded rubber bush for wheel bearing housing	350
7.6	Removing and installing trailing arm with mounting bracket	356
7.7	Servicing trailing arm	360
<b>8</b>	<b>Drive shaft</b>	<b>364</b>
8.1	Overview - drive shaft	364

8.2	Assembly overview - drive shaft	365
8.3	Loosening and tightening bolt securing drive shaft	369
8.4	Removing and installing drive shaft	371
8.5	Dismantling and assembling drive shaft	373
8.6	Checking outer constant velocity joint	385
8.7	Checking inner constant velocity joint	387
<b>43</b>	<b>- Self-levelling suspension</b>	<b>390</b>
1	<b>Electronic damping control</b>	<b>390</b>
1.1	Assembly overview - electronic damping control	390
1.2	Removing and installing electronically controlled damping control unit J250	391
2	<b>Vehicle level senders</b>	<b>393</b>
2.1	Assembly overview - front vehicle level senders	393
2.2	Assembly overview - rear vehicle level senders	394
2.3	Removing and installing front vehicle level senders G78/G289	395
2.4	Removing and installing rear vehicle level senders G76/G77	397
<b>44</b>	<b>- Wheels, tyres, vehicle geometry</b>	<b>400</b>
1	<b>Wheels, tyres</b>	<b>400</b>
2	<b>Wheel alignment</b>	<b>401</b>
2.1	Notes on wheel alignment	401
2.2	When does wheel alignment have to be checked?	402
2.3	Test requirements	403
2.4	Preparations required before calibration of driver assist systems	404
2.5	Explanatory notes on production control numbers (PR numbers)	404
2.6	Preparations for measurement	405
2.7	Wheel runout compensation	406
2.8	Checking maximum steering angle	407
2.9	Wheel alignment procedure	407
2.10	Wheel alignment specifications	408
2.11	Adjusting camber at front wheels	412
2.12	Adjusting camber at rear wheels	414
2.13	Adjusting toe setting at rear wheels	416
2.14	Adjusting toe setting at front wheels	417
3	<b>Adaptive cruise control</b>	<b>420</b>
3.1	Adjusting adaptive cruise control	420
4	<b>Front camera for driver assist systems</b>	<b>438</b>
4.1	Calibrating front camera for driver assist systems	438
<b>48</b>	<b>- Steering</b>	<b>446</b>
1	<b>Steering wheel</b>	<b>446</b>
1.1	Assembly overview - steering wheel	446
1.2	Removing and installing steering wheel	448
2	<b>Steering column</b>	<b>450</b>
2.1	Assembly overview - steering column	450
2.2	Handling and transporting steering column	452
2.3	Checking steering column for damage	453
2.4	Removing and installing steering column	454
2.5	Removing and installing control unit for electronic steering column lock J764	460
3	<b>Steering rack</b>	<b>462</b>
3.1	Assembly overview - steering rack	462
3.2	Servicing steering rack	464
3.3	Handling and transporting steering rack	466
3.4	Removing and installing steering rack	467
3.5	Removing and installing boot	469



3.6	Removing and installing track rod .....	472
3.7	Removing and installing track rod ball joint .....	475