

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
1.4 Safety precautions when working on the hydraulic system	2
2 Repair instructions	3
2.1 Routing and attachment of pipes, hoses and wiring	3
2.2 Contact corrosion	3
2.3 Rules for cleanliness	3
2.4 Bonding surfaces for self-adhesive components	4
2.5 Secure threaded connections	4
2.6 Identification plates	4
3 Manual operation of convertible roof	5
3.1 General notes	5
50 - Body - front	6
1 Lock carrier	6
1.1 Assembly overview - lock carrier	6
1.2 Removing and installing lock carrier	9
1.3 Removing and installing struts	14
1.4 Removing and installing cover for arrester	14
1.5 Removing and installing air duct for radiator	15
1.6 Removing and installing air duct - vehicles with manual gearbox	15
2 Wing	17
2.1 Assembly overview - wing	17
2.2 Assembly overview - repair set for wing	19
2.3 Removing and installing wing	19
2.4 Removing and installing wing panel brace	22
2.5 Removing and installing closure plate	22
3 Bulkhead	24
3.1 Assembly overview - bulkhead	24
3.2 Assembly overview - plenum chamber cover	24
3.3 Removing and installing plenum chamber cover	25
3.4 Removing and installing plenum chamber bulkhead	26
3.5 Removing and installing sealing element	26
55 - Bonnet, rear lid	28
1 Bonnet	28
1.1 Assembly overview - bonnet	28
1.2 Assembly overview - Bowden cable	29
1.3 Removing and installing bonnet	30
1.4 Adjusting bonnet	31
1.5 Removing and installing hinges	33
1.6 Resetting hinge	36
1.7 Removing and installing striker	36
1.8 Removing and installing gas strut	37
1.9 Releasing gas from gas strut	39
1.10 Removing and installing insulation	39
1.11 Removing and installing impact guard	39
1.12 Removing and installing Bowden cable	40
1.13 Removing and installing arrester	43

1.14	Removing and installing bonnet lock	43
1.15	Removing and installing operating lever for bonnet lock	45
2	Rear lid	48
2.1	Assembly overview - rear lid	48
2.2	Removing and installing rear lid	51
2.3	Adjusting rear lid	51
2.4	Removing and installing hinges	55
2.5	Removing and installing rear lid seal	55
2.6	Removing and installing adjusting buffer	56
2.7	Removing and installing gas strut	56
2.8	Releasing gas from gas strut	57
2.9	Removing and installing rear lid lock	57
2.10	Removing and installing cable for rear lid lock	57
2.11	Removing and installing lock cylinder	58
2.12	Removing and installing striker	59
2.13	Removing and installing actuator	59
3	Convertible roof compartment lid	60
3.1	Assembly overview - convertible roof compartment lid	60
3.2	Removing and installing convertible roof compartment lid	63
3.3	Adjusting convertible roof compartment lid	64
3.4	Removing and installing convertible roof compartment seal	68
3.5	Removing and installing mounting for outer convertible roof compartment seal	69
3.6	Removing and installing hinge for convertible roof compartment lid	69
3.7	Removing and installing adjusting buffer	70
3.8	Removing and installing manual release cable	70
3.9	Removing and installing striker	71
3.10	Removing and installing convertible roof box lid lock motor V222	71
3.11	Removing and installing crash hook for convertible roof compartment lid	72
3.12	Removing and installing trim for convertible roof compartment lid	73
4	Tank flap unit	75
4.1	Assembly overview - tank flap unit	75
4.2	Removing and installing tank flap unit	76
4.3	Removing and installing trim panel for tank flap unit	77
4.4	Removing and installing drain hose for tank flap unit	78
4.5	Removing and installing manual release cable	79
57	- Front doors, door components, central locking	80
1	Door	80
1.1	Assembly overview - door	80
1.2	Assembly overview - door seals	81
1.3	Removing and installing door	82
1.4	Adjusting door	83
1.5	Removing and installing door arrester	87
1.6	Removing and installing inner door seal	88
1.7	Removing and installing outer door seal	91
2	Door components	94
2.1	Assembly overview - window regulator	94
2.2	Assembly overview - door handle and door lock	95
2.3	Assembly overview - window guides and window slot seals	97
2.4	Removing and installing window regulator	98
2.5	Removing and installing window regulator motor	99
2.6	Removing and installing microswitch for lowering window E621 / E622	100
2.7	Removing and installing door handle	101
2.8	Removing and installing door handle trim	102
2.9	Removing and installing mounting bracket	103

2.10	Removing and installing operating cable for exterior door handle	104
2.11	Removing and installing lock cylinder	106
2.12	Removing and installing cap for lock cylinder	106
2.13	Removing and installing housing	107
2.14	Removing and installing door lock	108
2.15	Removing and installing cover for door lock	108
2.16	Removing and installing striker	109
2.17	Removing and installing operating cable for interior door handle	109
2.18	Removing and installing inner door cover	110
2.19	Removing and installing inner window slot seal	111
2.20	Removing and installing outer window slot seal	112
3	Central locking system	114
3.1	Overview of fitting locations - central locking system	114
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	116
3.3	Removing and installing control unit with rear driver side window regulator motor J1016 and control unit with rear passenger side window regulator motor J1017	116
3.4	Removing and installing interface control unit for vehicle location system J843	117
3.5	Removing and installing bonnet contact switch F266	117
3.6	Removing and installing tank filler flap locking motor V155	118
58	Rear doors, door components	119
1	Door components	119
1.1	Assembly overview - window regulator	119
1.2	Assembly overview - window guides and window slot seals	120
1.3	Removing and installing window regulator	121
1.4	Removing and installing window regulator motor	123
1.5	Removing and installing mounting for side window	123
1.6	Removing and installing inner cover	124
1.7	Removing and installing inner window slot seal	125
1.8	Removing and installing outer window slot seal	126
61	Convertible roof, hardtop, canopy	128
1	Convertible roof	128
1.1	Assembly overview - convertible roof	128
1.2	Assembly overview - main mounting for convertible roof	129
1.3	Assembly overview - convertible roof locking mechanism	130
1.4	Removing and installing convertible roof	132
1.5	Removing and installing retaining plate for convertible roof	137
1.6	Removing and installing convertible roof locking mechanism	138
1.7	Removing and installing locking element	138
1.8	Removing and installing convertible roof lock motor V223	139
1.9	Removing and installing drive unit for convertible roof locking mechanism	139
1.10	Service position of convertible roof and convertible roof compartment lid	140
1.11	Manual operation	141
2	Convertible roof cover	145
2.1	Assembly overview - insulation and convertible roof headliner	145
2.2	Assembly overview - tensioning cables and control cables for convertible roof headliner	146
2.3	Removing and installing convertible roof cover	148
2.4	Removing and installing tensioning cable for convertible roof cover	153
2.5	Removing and installing guide strap for convertible roof cross strut	155
2.6	Removing and installing convertible roof headliner	158
3	Attachments	162
3.1	Assembly overview - convertible roof seals	162
3.2	Removing and installing convertible roof seals	163
3.3	Removing and installing convertible roof trim	165



4	Hydraulic system	167
4.1	Assembly overview - hydraulic system	167
4.2	Assembly overview - motor and fluid reservoir for hydraulic pump	168
4.3	Assembly overview - hydraulic cylinder for convertible roof	170
4.4	Assembly overview - hydraulic cylinder for convertible roof compartment lid	171
4.5	Removing and installing hydraulic pump	171
4.6	Removing and installing hydraulic pump motor	172
4.7	Removing and installing hydraulic fluid reservoir	174
4.8	Checking fluid level in hydraulic system	175
4.9	Filling and bleeding hydraulic system	175
4.10	Removing and installing power operated convertible roof valve N272 / N341 / N342	178
4.11	Removing and installing hydraulic line	178
4.12	Removing and installing hydraulic cylinders	181
5	Electrical and electronic components	184
5.1	Assembly overview - convertible roof actuation button	184
5.2	Removing and installing convertible roof actuation control unit J256	188
5.3	Removing and installing switches	189
5.4	Removing and installing permanent magnets	195
63	- Bumpers	199
1	Front bumper	199
1.1	Assembly overview - bumper cover	199
1.2	Assembly overview - impact bar	204
1.3	Removing and installing bumper cover	206
1.4	Adjusting bumper cover	209
1.5	Removing and installing bumper cover mounting	211
1.6	Removing and installing impact bar	211
1.7	Removing and installing attachments	214
2	Rear bumper	226
2.1	Assembly overview - bumper cover	226
2.2	Assembly overview - impact bar	232
2.3	Removing and installing bumper cover	233
2.4	Removing and installing impact bar	235
2.5	Removing and installing attachments	238
64	- Glazing	241
1	Repair instructions	241
1.1	Minimum drying times for bonded windows	241
1.2	Repairing windscreen	241
1.3	Notes on installing flush-bonded windows	242
1.4	Preparing undamaged windows for installation	245
1.5	Preparing new windows for installation	245
1.6	Preparing body flange for installation	247
1.7	Cleaning off adhesive sealant	247
2	Windscreen	248
2.1	Assembly overview - windscreen	248
2.2	Removing and installing windscreen	249
3	Side windows	254
3.1	Assembly overview - rear side window	254
3.2	Removing and installing rear side window	254
3.3	Adjusting rear side window	255
4	Door windows	262
4.1	Assembly overview - front door window	262
4.2	Removing and installing front door window	262
4.3	Adjusting front door window	263

66 - Exterior equipment	270
1 Radiator grille/front trim	270
1.1 Assembly overview - radiator grille	270
1.2 Removing and installing radiator grille	272
2 Strips/trim panels/extensions	277
2.1 Assembly overview - trim strip and covers	277
2.2 Assembly overview - trim panel for A-pillar	279
2.3 Assembly overview - sill panel trim	280
2.4 Assembly overview - side member trim	281
2.5 Assembly overview - heat shield	282
2.6 Removing and installing trim strip	284
2.7 Removing and installing trim panel for A-pillar	287
2.8 Removing and installing sill panel trim	287
2.9 Removing and installing side member trim	289
2.10 Removing and installing heat shield for floor	292
3 Noise insulation	296
3.1 Assembly overview - noise insulation	296
3.2 Removing and installing noise insulation	297
4 Underbody cladding	298
4.1 Assembly overview - underbody cladding	298
4.2 Assembly overview - underbody struts	298
4.3 Removing and installing underbody cladding	300
4.4 Removing and installing tunnel cross-piece	300
4.5 Removing and installing diagonal struts	301
5 Exterior mirrors	302
5.1 Assembly overview - exterior mirror	302
5.2 Removing and installing mirror glass	303
5.3 Removing and installing mirror adjustment unit	305
5.4 Removing and installing mirror trim	305
5.5 Removing and installing mirror cover	306
5.6 Removing and installing exterior mirror	306
6 Wheel housing liners	308
6.1 Assembly overview - front wheel housing liner	308
6.2 Assembly overview - rear wheel housing liner	308
6.3 Removing and installing front wheel housing liner	310
6.4 Removing and installing rear wheel housing liner	311
7 Lettering and badges	314
7.1 Assembly overview - lettering and badges	314
7.2 Dimensions - lettering and badges at rear	314
7.3 Dimensions - lettering and badges on sides	316
7.4 General notes on renewing lettering and badges	316
7.5 Removing and installing lettering and badges for radiator grille	317
8 Towing bracket	320
8.1 Assembly overview - towing bracket	320
8.2 Removing and installing trailer detector control unit J345	320