

Contents

1	Notes on servicing	1
1.1	Overview of engines	1
2	Delivery Inspection	6
2.1	Delivery Inspection (service sticker)	7
3	LongLife Service	8
3.1	Extended servicing intervals	8
3.2	LongLife Service	9
4	Oil Change Service	13
4.1	Oil Change Service (service sticker)	13
5	Inspection Service	14
5.1	Inspection Service (service sticker)	18
6	Description of work	19
6.1	Switches, electrical equipment, displays and other driver-operated controls: checking operation	19
6.2	Windscreen wiper/washer system and headlight washer system: checking jet settings and operation	19
6.3	Wiper blades: checking park position and checking for damage	21
6.4	Electric windows: checking positions	22
6.5	Clock: setting	23
6.6	Air conditioner: checking operation and setting temperature to 22 °C	23
6.7	Radio / Navigation System Plus (chorus, concert, symphony): deactivating transport mode	23
6.8	Radio or Navigation System Plus: activating anti-theft coding by entering fixed code number	26
6.9	Self-diagnosis: interrogating fault memory with fault reader V.A.G 1551	27
6.10	Instrument cluster: setting the language	28
6.11	Service interval display: resetting	30
6.12	Service interval display: resetting LongLife Service	36
6.13	Service interval display: resetting Inspection Service (fixed interval)	42
6.14	Rear lid hinges: lubricating	44
6.15	Door hinges with arresters, lock cylinder and bonnet arrester hook: lubricating	45
6.16	Sliding/tilting sunroof: cleaning and lubricating	46
6.17	Telematics: renewing emergency backup battery	49
6.18	Steps required before disconnecting battery	50
6.19	Battery: checking electrolyte level	50
6.20	Battery: checking "no load" voltage before starting the engine for the first time (only applies to stock vehicles)	51
6.21	Battery: checking that battery cables are securely fitted (only applies to vehicles kept in stock for long periods)	52
6.22	Battery: performing load test	53
6.23	Engine cover panel: removing	54
6.24	Engine (from above and below) and engine compartment: visual check for leaks and damage	55
6.25	Crankcase pressure: checking (V6 TDI engine AFB, AKN)	56
6.26	Windscreen and headlight washer system: topping up with washer fluid	57
6.27	Cooling system: checking antifreeze and topping up with coolant if necessary	57
6.28	Air cleaner housing and snow strainer: cleaning; renewing filter element	60
6.29	Spark plugs: renewing	61
6.30	Hydraulic system: checking for leaks, checking hydraulic fluid level and topping up if necessary	65
6.31	Fuel filter: renewing (TDI engines)	66
6.32	Fuel filter: draining water (TDI engines)	68
6.33	Dust and pollen filter: renewing	70
6.34	Noise insulation: removing	71



6.35	Lock carrier: moving into service position	71
6.36	V-belt and poly V-belt: renewing (4-cyl. petrol engines ADP, ADR, AEB, AFY, AJL, ANB, APT, APU, ARG)	74
6.37	Poly V-belt: renewing (4-cyl. petrol engines AHL, ARM, ANA)	77
6.38	Poly V-belt: renewing (V6 petrol engines)	79
6.39	Toothed belt for camshaft drive: checking for damage (2.6 ltr. 2V engines and 2.8 ltr. 2V engines)	79
6.40	Toothed belt for camshaft drive: checking for damage, measuring width of toothed belt (4-cyl. TDI engines up to and including model year 1999 X)	80
6.41	Toothed belt for camshaft drive: checking condition and tension (V6 TDI engines)	80
6.42	Toothed belt for injection pump: checking condition and tension (V6 TDI engines), tensioning toothed belt	81
6.43	Toothed belt: renewing	81
6.44	Bearing bushes for poly V-belt tensioner: checking	83
6.45	Transport locks: removing locking elements for front suspension struts	84
6.46	Manual gearbox/final drive: checking oil level, topping up with oil if necessary	84
6.47	Final drive (automatic gearbox): checking oil level, topping up with oil if necessary	90
6.48	Engine oil: draining or extracting, changing oil filter	92
6.49	Brake system: visual check for leaks and damage	94
6.50	Brake pads: checking thickness	95
6.51	Underseal: visual check for damage	95
6.52	Track rod ball joints: checking play, security and boots	95
6.53	Tyres: checking condition, wear pattern, tread depth and correcting inflation pressures.	97
6.54	Winter tyres (factory-fitted)	98
6.55	Wheel bolts: tightening to specified torque	98
6.56	Engine oil: filling up	100
6.57	Engine: checking oil level	101
6.58	Brake fluid level (depends on brake pad wear): checking	102
6.59	Brake fluid: changing (every 2 years)	103
6.60	Headlights: checking settings and adjusting if necessary	107
6.61	Road test	112
7	Type plate, vehicle identification number	114
7.1	Information encoded in vehicle identification number:	114
7.2	Vehicle data sticker	114
7.3	Engine code and engine number	114
8	Lifting the vehicle	117
8.1	Trolley jack	117
8.2	Lifting platform	117
8.3	Lifting points for lifting platform and trolley jack	117
9	Tow-starting/towing	118
9.1	Towing eyes	118
9.2	Notes on towing and tow-starting	119
10	Vehicle tests carried out as part of inspection services and maintenance	121