

Contents

00	Technical data	1
1	Engine number	1
2	Engine data	2
3	Safety precautions	4
3.1	Working on the fuel system	4
3.2	Working on the cooling system	4
3.3	Using testers and measuring instruments during a road test	5
3.4	Working on the exhaust system	5
4	General repair instructions	6
4.1	Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.2	Checking for leaks in the fuel system	6
4.3	Foreign particles in engine	6
4.4	Contact corrosion!	6
4.5	Routing and attachment of pipes, hoses and wiring	7
4.6	Installing radiators, condensers and charge air coolers	7
4.7	Checking vacuum system	7
10	Removing and installing engine	9
1	Removing engine - engine codes AEB, AJL	9
2	Removing engine - engine codes ANB, APU, ARK, ATW	24
3	Securing engine to engine and gearbox support	39
4	Installing engine	40
13	Crankshaft group	45
1	Cylinder block (pulley end)	45
1.1	Poly V-belt drive for power steering pump, alternator and viscous fan, poly V-belt drive for coolant pump - exploded view	45
1.2	Poly V-belt drive for air conditioner - exploded view	48
1.3	Routing of V-belt and poly V-belt	49
1.4	Removing and installing poly V-belts	49
1.5	Removing and installing V-belt	51
1.6	Removing and installing bracket for ancillaries	52
1.7	Removing and installing vibration damper	55
2	Sealing flanges and dual-mass flywheel/drive plate	57
2.1	Sealing flanges and dual-mass flywheel/drive plate - exploded view	57
2.2	Renewing crankshaft oil seal (pulley end)	59
2.3	Removing and installing dual-mass flywheel - vehicles with manual gearbox	61
3	Crankshaft	64
3.1	Crankshaft - exploded view	64
3.2	Measuring axial clearance of crankshaft	65
3.3	Measuring radial clearance of crankshaft	66
3.4	Extracting and driving in needle bearing for crankshaft	67
3.5	Crankshaft dimensions	68
4	Pistons and conrods	69
4.1	Pistons and conrods - exploded view	69
4.2	Measuring radial clearance of conrods	71
4.3	Piston and cylinder dimensions	72
15	Cylinder head, valve gear	73
1	Toothed belt drive up to 05.1999	73
1.1	Toothed belt drive - exploded view	73



1.2	Removing and installing toothed belt	74
2	Toothed belt drive from 06.1999 onwards	78
2.1	Toothed belt drive - exploded view	78
2.2	Removing and installing toothed belt	79
3	Cylinder head	83
3.1	Intake manifold - exploded view	83
3.2	Removing and installing intake manifold - engine codes AEB, AJL	84
3.3	Removing and installing intake manifold - engine codes ANB, APU, ARK, ATW	86
3.4	Cylinder head - exploded view	89
3.5	Removing and installing cylinder head cover	92
3.6	Removing cylinder head - engine codes AEB, AJL	94
3.7	Removing cylinder head - engine codes ANB, APU, ARK, ATW	97
3.8	Installing cylinder head	101
3.9	Checking compression	103
4	Valve gear	105
4.1	Valve gear - exploded view	105
4.2	Checking axial clearance of camshafts	108
4.3	Renewing exhaust camshaft oil seal	109
4.4	Renewing inlet camshaft oil seal	113
4.5	Removing and installing camshafts and hydraulic chain tensioner	115
4.6	Checking hydraulic bucket tappets	122
4.7	Renewing valve stem oil seals with cylinder head installed	123
4.8	Renewing valve stem oil seals with cylinder head removed	127
4.9	Valve dimensions	130
4.10	Checking valves	131
4.11	Checking valve guides	131
4.12	Machining valve seats	132
17 - Lubrication		135
1	Sump and oil pump	135
1.1	Sump, oil pump - exploded view	135
1.2	Removing and installing oil level and oil temperature sender G266	138
1.3	Removing sump	138
1.4	Installing sump - engines with moulded gasket	145
1.5	Installing sump - engines with liquid gasket	146
1.6	Removing and installing oil pump	149
2	Oil filter and oil cooler	150
2.1	Oil filter and oil cooler - exploded view	150
2.2	Removing and installing oil pressure switch F1	151
2.3	Checking oil pressure and oil pressure switch F1	152
2.4	Engine oil	153
2.5	Checking oil level	153
19 - Cooling		154
1	Cooling system	154
1.1	Diagram of coolant hose connections	154
1.2	Draining and filling cooling system	156
1.3	Coolant pump and thermostat - exploded view	161
1.4	Removing and installing coolant pump	163
1.5	Removing and installing thermostat	163
1.6	Checking thermostat	163
1.7	Removing and installing coolant pipe (bottom)	163
2	Radiator and viscous fan	165
2.1	Removing and installing radiator	165
2.2	Removing and installing viscous fan	168

2.3	Removing and installing viscous fan bearing	169
2.4	Checking cooling system for leaks	171
21	Turbocharging/supercharging	173
1	Charge air system with turbocharger	173
1.1	Diagram of connections for charge pressure control system and vacuum system	173
1.2	Effects of leaks in charge air system	175
1.3	Checking turbocharger and charge pressure regulating valve - engine codes AEB, AJL ..	176
1.4	Checking turbocharger and charge pressure regulating valve - engine codes ANB, APU, ARK, ATW	179
1.5	Checking mechanical air recirculation valve	183
1.6	Checking turbocharger air recirculation valve N249 - engine codes ANB, APU, ARK, ATW	184
1.7	Checking charge pressure control solenoid valve N75	188
1.8	Checking charge pressure sender G31 - engine codes ANB, APU, ARK, ATW	193
2	Turbocharger and charge air cooler	197
2.1	Turbocharger - exploded view	197
2.2	Removing and installing turbocharger	200
3	Charge air cooling	205
3.1	Charge air cooler - exploded view	205
3.2	Removing and installing charge air cooler	205
26	Exhaust system	207
1	Exhaust system on vehicles with front-wheel drive	207
1.1	Silencers - exploded view	207
1.2	Separating centre and rear silencers	210
1.3	Stress-free alignment of exhaust system	211
2	Exhaust system on vehicles with four-wheel drive	213
2.1	Silencers - exploded view	213
2.2	Separating centre and rear silencers	216
2.3	Stress-free alignment of exhaust system	217
3	Catalytic converter, exhaust manifold	219
3.1	Removing and installing catalytic converter	219
3.2	Removing and installing exhaust manifold	221
3.3	Checking exhaust system for leaks	224
4	Secondary air system - engine codes ANB, ATW	225
4.1	Secondary air system - overview	225
4.2	Checking combination valve for secondary air system for proper operation and leakage ..	227
4.3	Checking secondary air inlet valve N112	228
4.4	Checking secondary air pump relay J299 and secondary air pump motor V101	233
4.5	Removing and installing combination valve for secondary air system	239