

Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Safety precautions	1
1.4 Connecting vehicle diagnostic, testing and information system VAS 5051 and selecting functions	1
2 Interrogating and erasing fault memory	5
2.1 Interrogating and erasing fault memory	5
2.2 Interrogating fault memory	5
2.3 Erasing fault memory	6
2.4 Ending output	7
2.5 Fault table	8
2.6 Fault codes 16485 - 17948	8
2.7 Fault codes 17954 - 19466	16
3 Final control diagnosis	23
3.1 Final control diagnosis	23
4 Basic setting	31
4.1 Basic setting	31
5 Coding control unit	34
5.1 Coding control unit	34
6 Reading measured value block	36
6.1 Reading measured value block	36
6.2 Performing road test at full throttle	37
6.3 Display group overview	38
6.4 Readout specifications for general vehicle inspection	41
6.5 Readout specifications for unit injectors	43
6.6 Readout specifications for engine idling speed	44
6.7 Readout specifications for exhaust gas recirculation	46
6.8 Readout specifications for temperature senders	46
6.9 Readout specifications for engine power output	47
6.10 Readout specifications for charge pressure control	49
6.11 Readout specifications for data bus	49
23 - Mixture preparation, Injection	51
1 Servicing diesel direct injection system	51
1.1 Servicing diesel direct injection system	51
1.2 Safety precautions	51
1.3 Rules for cleanliness	51
1.4 Fitting locations overview	52
1.5 Servicing intake manifold flap	57
1.6 Testing intake manifold flap change-over function	59
1.7 Servicing unit injector	64
1.8 Testing unit injector solenoid valves	67
1.9 Removing and installing unit injector	71
1.10 Removing and installing O rings for unit injector	75
1.11 Wiring and component check with test box V.A.G 1598/31	76
1.12 Renewing engine control unit	78
1.13 Testing voltage supply for diesel direct injection system	80
2 Testing control unit input values	85
2.1 Testing control unit input values	85
2.2 Testing engine speed sender -G28	85
2.3 Testing intake manifold pressure sender -G71 and altitude sender -F96	87

2.4	Testing coolant temperature sender -G62	89
2.5	Checking brake light switch -F and brake pedal switch -F47	91
2.6	Testing clutch pedal switch -F36	94
2.7	Checking intake manifold temperature sender -G72	97
2.8	Testing fuel temperature sender -G81	99
2.9	Testing air mass meter -G70	101
2.10	Checking Hall sender for camshaft position -G40	103
3	Testing auxiliary signals	105
3.1	Testing auxiliary signals	105
3.2	Testing AC compressor signal and AC compressor shut-off	106
3.3	Testing speed signal	107
3.4	Testing cruise control system (CCS)	109
3.5	Testing engine speed signal	111
4	Testing signals from and to automatic gearbox	111
4.1	Testing signals from and to automatic gearbox	111
4.2	Testing signal wire (CAN bus) between engine control unit and gearbox control unit	111
5	Testing signals from and to ABS control unit	112
5.1	Testing signals from and to ABS control unit	112
5.2	Testing signal wire (CAN bus) between engine control unit and ABS control unit	112
6	Testing signals to and from dash panel insert	112
6.1	Testing signals to and from dash panel insert	112
6.2	Testing signal wire (CAN bus) between engine control unit and dash panel insert	112
7	Testing a 2-wire bus system (CAN bus)	113
7.1	Testing a 2-wire bus system (CAN bus)	113
7.2	Testing data exchange between engine control unit and other control units with CAN interface	113
28 - Glow plug system	117	
1	Checking glow plug system	117
1.1	Checking glow plug system	117
1.2	Testing operation	117
1.3	Testing glow plug relay -J52 and activation	119
1.4	Checking glow plugs	122