

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	Engine number	2
1.3	Vehicle identification number	5
1.4	Vehicle data sticker	5
2	Preparations	7
2.1	Vehicle: raising	7
2.2	Engine cover panel: removing and installing	8
2.3	Noise insulation: removing and installing	14
2.4	Window regulators: activating automatic open/close function	14
2.5	Vehicle diagnostic tester: connecting	15
3	Maintenance	17
3.1	Diesel particulate filter: reading out ash deposit volume	19
3.2	Event memory: reading out and erasing	20
3.3	Service interval display: resetting service	20
3.4	Transport mode: deactivating	20
3.5	Transport mode (engine): deactivating	21
3.6	Battery: checking that battery and battery cables are securely fitted	21
3.7	Battery: checking electrolyte level	23
3.8	Brake fluid: changing	27
3.9	Brake fluid: checking fluid level	32
3.10	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	32
3.11	Brake pads: checking thickness	33
3.12	Tyres: checking condition and wear pattern, and checking and recording tread depth	34
3.13	Tyres: checking tyre pressures and adjusting if necessary	35
3.14	Tyre Pressure Loss Indicator: storing changed tyre pressures	36
3.15	Tyre repair kit: checking that set is complete, and checking and recording expiry date	37
3.16	Wheel bolts: tightening to specified torque	38
3.17	Suspension struts on front and rear axle: removing locking elements	38
3.18	Components of front and rear axles: checking play, secure attachment and protective boots	39
3.19	Engine, gearbox, final drive and steering: checking for leaks and damage	43
3.20	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	44
3.21	Roof insert: checking operation	44
3.22	Roof insert - sliding/tilting sunroof: cleaning and lubricating	44
3.23	Rear lid hinges: lubricating	47
3.24	Bonnet arrester hook: lubricating	47
3.25	Door hinges with arresters and locking cylinders: lubricating	48
3.26	Gas strut for rear lid: checking bolt connection of socket for ball-head pin	49
3.27	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	50
3.28	Wiper blades: checking for damage	51
3.29	Headlight washer system: checking operation	51
3.30	Headlights: checking for correct adjustment	52
3.31	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	53
3.32	Luggage compartment lighting: checking operation	54
3.33	Glove box light, interior lighting and reading light: checking operation	55
3.34	Horn: checking operation	55
3.35	Front passenger airbag: checking key switch on / off and setting to "on"	55
3.36	Vehicle keys: checking operation and recording number of keys given to customer	56
3.37	Engine oil: draining	56



3.38	Engine oil: renewing oil filter	66
3.39	Engine oil: filling up	75
3.40	Engine oil: checking oil level and correcting if necessary	76
3.41	Poly V-belts for ancillaries: checking bearing bushes of tensioning system	77
3.42	Toothed belt for injection pump: checking for damage and checking tension	77
3.43	Toothed belt for camshaft drive: checking for damage	78
3.44	Toothed belt for camshaft drive: renewing belt and checking tensioning system and idler rollers	79
3.45	Spark plugs: renewing	80
3.46	Hydraulic system: checking fluid level	91
3.47	Cooling system: checking anti-freeze and coolant level, and correcting if necessary	92
3.48	Air cleaner: renewing filter element and cleaning housing	95
3.49	Plenum chamber and water drains: checking for dirt	110
3.50	Snow screen: cleaning	111
3.51	Dust and pollen filter: renewing	111
3.52	Fuel filter: renewing	112
3.53	Fuel filter: draining	115
3.54	Fuel tank: adding fuel additive	116
3.55	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	117
3.56	Road test	117
3.57	Stock vehicles: observing measures specified in Maintenance table for stock vehicles (see "Before handing vehicle over to customer")	117
3.58	Display instruments: setting time and date	118
3.59	Automatic gearbox (multitronic): changing ATF	118
3.60	Interior mirror: calibrating compass	118
3.61	Poly V-belts for ancillaries: renewing	118
3.62	Instrument cluster: resetting driver information system	118
3.63	Toothed belt for injection pump and tensioning roller: renewing	118
3.64	Toothed belt for camshaft drive: renewing	119
3.65	Toothed belt for camshaft drive and tensioning roller: renewing	119