

Contents

27 - Starter, current supply, CCS	1
1 Contact corrosion	1
2 Battery	2
2.1 Battery - general notes	2
2.2 Maintenance-free batteries	2
2.3 Disconnecting and connecting battery in engine compartment	2
2.4 Disconnecting and connecting battery in luggage compartment	3
2.5 Removing and installing battery in engine compartment	4
2.6 Removing and installing battery in luggage compartment	7
2.7 Checking battery	8
2.8 Charging battery	8
2.9 Preparations before charging battery	8
2.10 Preparations for back-up power supply of battery	10
2.11 Removing and installing battery isolation igniter N253 - Audi RS 4	12
3 Removing and installing alternator	13
3.1 Vehicles with 1.6 ltr., 1.8 ltr. turbo, 2.0 ltr. MPI and 2.0 ltr. FSI engine	13
3.2 Vehicles with 2.0 ltr. TFSI engine	16
3.3 Vehicles with 2.4 ltr. engine	18
3.4 Vehicles with 3.0 ltr. MPI engine	21
3.5 Vehicles with 3.2 ltr. FSI engine	24
3.6 Vehicles with 4.2 ltr. MPI engine - Audi S4	26
3.7 Vehicles with 4.2 ltr. FSI engine - Audi RS 4	34
3.8 Vehicles with 1.9 ltr. TDI engine to 05.2003	43
3.9 Vehicles with 1.9 ltr. or 2.0 ltr. 2 V TDI engine from 06.2003	45
3.10 Vehicles with 2.0 ltr. 4V TDI engine	47
3.11 Vehicles with 2.5 ltr. TDI engine	50
3.12 Vehicles with 2.7 ltr. or 3.0 ltr. TDI engine	54
4 Checking and servicing alternator	57
4.1 Checking alternator	57
4.2 Servicing alternator	57
5 Removing and installing starter	58
5.1 Vehicles with 1.6 ltr., 1.8 ltr. turbo, 2.0 ltr. MPI and 2.0 ltr. FSI engine	58
5.2 Vehicles with 2.0 ltr. TFSI engine	59
5.3 Vehicles with 2.4 ltr. or 3.0 ltr. MPI engine	60
5.4 Vehicles with 3.2 ltr. FSI engine	61
5.5 Vehicles with 4.2 ltr. MPI engine - Audi S4	62
5.6 Vehicles with 4.2 ltr. FSI engine - Audi RS 4	66
5.7 Vehicles with 1.9 ltr. TDI engine	71
5.8 Vehicles with 2.0 ltr. 2V TDI engine	72
5.9 Vehicles with 2.0 ltr. 4V TDI engine	74
5.10 Vehicles with 2.5 ltr. TDI engine	76
5.11 Vehicles with 2.7 ltr. or 3.0 ltr. TDI engine	77
90 - Gauges, instruments	79
1 Instrument cluster	79
1.1 Fault message "dEF" in trip recorder display	79
1.2 Removing and installing instrument cluster	79
1.3 Multi-pin connectors on instrument cluster	81
1.4 Pin assignment at multi-pin connectors on instrument cluster	82
1.5 Pin assignment at fuel gauge sender G - vehicles with front-wheel drive	83
1.6 Pin assignment at fuel gauge senders - vehicles with four-wheel drive	84
1.7 Pin assignment at coolant temperature display sender G2	86



1.8	Pin assignment at coolant temperature sender G62	94
1.9	Removing and installing radio-controlled clock receiver J489	99
1.10	Removing and installing garage door operation control unit J530 - vehicles up to 10.2004	99
1.11	Removing and installing garage door operation control unit J530 - vehicles from 11.2004 onwards	99
92	- Windscreen wash/wipe system	101
1	Windscreen wiper system	101
1.1	Renewing wiper blade - vehicles up to 10.2004	101
1.2	Wiper mounting on vehicles up to 10.2004 - exploded view	101
1.3	Removing and installing wiper mounting - vehicles up to 10.2004	102
1.4	Renewing wiper blade - vehicles from 11.2004 onwards	103
1.5	Removing and installing wiper arms	104
1.6	Adjusting wiper arms	104
1.7	Removing and installing wiper motor	105
2	Windscreen washer system	108
2.1	Removing and installing washer fluid reservoir - Audi A4, Audi S4	108
2.2	Removing and installing washer fluid reservoir - Audi RS 4	109
2.3	Removing and installing washer jets	111
2.4	Adjusting washer jets	112
3	Rear window wiper and washer system (Avant)	113
3.1	Rear window wiper - exploded view	113
3.2	Removing and installing washer jet	113
3.3	Adjusting washer jet	114
3.4	Removing and installing wiper arm	114
3.5	Adjusting wiper arm	115
3.6	Renewing wiper blade	115
3.7	Rear window wiper motor - exploded view	115
3.8	Removing and installing rear window wiper motor	116
3.9	Removing and installing washer fluid reservoir	117
4	Headlight washer system - vehicles up to 10.2004	118
4.1	Removing and installing headlight washer jets	118
4.2	Adjusting washer jets	118
4.3	Removing and installing washer fluid reservoir	118
5	Headlight washer system - vehicles from 11.2004	119
5.1	Removing and installing headlight washer jets	119
5.2	Adjusting washer jets	119
5.3	Removing and installing washer fluid reservoir	119
6	Washer fluid hoses	120
94	- Lights, bulbs, switches - exterior	121
1	Halogen headlights - vehicles up to 10.2004	121
1.1	Halogen headlights - exploded view	121
1.2	Removing and installing headlights	122
1.3	Adjusting headlights	123
1.4	Preparations before working on headlights	125
1.5	Renewing bulb for dipped beam headlights	131
1.6	Renewing bulb for main beam headlights	132
1.7	Renewing bulb for side lights	133
1.8	Renewing bulb for turn signal	134
1.9	Removing and installing headlight range control motor	135
1.10	Installing repair kit for headlight housing	136
1.11	Adapting headlights for driving on the left or right side of the road	136
2	Halogen headlights - USA vehicles up to 10.2004	138

2.1	Halogen headlights - exploded view	138
2.2	Removing and installing headlights	139
2.3	Adjusting headlights	140
2.4	Preparations before working on headlights	142
2.5	Renewing bulb for dipped beam headlights	144
2.6	Renewing bulb for main beam headlights	145
2.7	Renewing turn signal/side light bulb	146
2.8	Installing repair kit for headlight housing	146
3	Halogen headlights - all vehicles from 11.2004	148
3.1	Halogen headlights - exploded view	148
3.2	Removing and installing headlights	149
3.3	Adjusting headlights	150
3.4	Renewing bulb for dipped beam headlights	152
3.5	Renewing bulb for main beam headlights	152
3.6	Renewing bulb for side lights	153
3.7	Renewing bulb for turn signal	154
3.8	Installing repair kit for headlight range control motor	155
3.9	Installing repair kit for headlight housing	156
3.10	Adapting headlights for driving on the left side of the road	156
3.11	Adapting headlights for driving on the right side of the road	157
4	Gas discharge headlights - vehicles up to 10.2004	159
4.1	Safety precautions when handling gas discharge bulbs	159
4.2	Gas discharge headlights - exploded view	159
4.3	Removing and installing headlights	160
4.4	Adjusting headlights	162
4.5	Preparations before working on headlights	165
4.6	Renewing gas discharge lamp - vehicles up to approx. 09.2001	171
4.7	Renewing gas discharge lamp - vehicles from approx. 09.2001	173
4.8	Renewing bulb for main beam headlights	174
4.9	Renewing bulb for side lights	175
4.10	Renewing bulb for turn signal	177
4.11	Removing and installing headlight range control motor	177
4.12	Removing and installing control unit for gas discharge lamp - vehicles up to approx. 09.2001	178
4.13	Removing and installing control unit for gas discharge lamp - vehicles from approx. 09.2001	179
4.14	Installing repair kit for headlight housing	180
4.15	Adapting headlights for driving on the left or right side of the road	181
5	Gas discharge headlights - USA vehicles up to 10.2004	183
5.1	Safety precautions when handling gas discharge bulbs	183
5.2	Gas discharge headlights - exploded view	183
5.3	Removing and installing headlights	184
5.4	Adjusting headlights	186
5.5	Preparations before working on headlights	189
5.6	Renewing gas discharge lamp - vehicles up to approx. 09.2001	192
5.7	Renewing gas discharge lamp - vehicles from approx. 09.2001	193
5.8	Renewing bulb for main beam headlights	194
5.9	Renewing turn signal/side light bulb	195
5.10	Removing and installing headlight range control motor	196
5.11	Removing and installing control unit for gas discharge lamp - vehicles up to approx. 09.2001	197
5.12	Removing and installing control unit for gas discharge lamp - vehicles from approx. 09.2001	198
5.13	Installing repair kit for headlight housing	199
6	Bi-xenon gas discharge headlights - vehicles up to 10.2004	200
6.1	Safety precautions when handling gas discharge bulbs	200

6.2	Gas discharge headlights - exploded view	200
6.3	Removing and installing headlights	201
6.4	Adjusting headlights	203
6.5	Renewing gas discharge bulb	205
6.6	Renewing bulb for main beam headlights	206
6.7	Renewing bulb for side lights	207
6.8	Removing and installing headlight screen adjustment solenoid	207
6.9	Renewing bulb for turn signal	207
6.10	Removing and installing headlight range control motor	208
6.11	Removing and installing gas discharge bulb control unit	209
6.12	Removing and installing adapter cable for gas discharge lamp control unit	210
6.13	Installing repair kit for headlight housing	211
6.14	Adapting headlights for driving on the left or right side of the road	212
7	Bi-xenon gas discharge headlights - USA vehicles up to 10.2004	213
7.1	Safety precautions when handling gas discharge bulbs	213
7.2	Gas discharge headlights - exploded view	213
7.3	Removing and installing headlights	214
7.4	Adjusting headlights	216
7.5	Renewing gas discharge bulb	218
7.6	Renewing bulb for main beam headlights	219
7.7	Removing and installing headlight screen adjustment solenoid	220
7.8	Renewing turn signal/side light bulb	220
7.9	Removing and installing headlight range control motor	220
7.10	Removing and installing gas discharge bulb control unit	222
7.11	Removing and installing adapter cable for gas discharge lamp control unit	222
7.12	Installing repair kit for headlight housing	223
8	Gas discharge headlights - all vehicles from 11.2004	225
8.1	Safety precautions when handling gas discharge bulbs	225
8.2	Gas discharge headlights - exploded view	225
8.3	Removing and installing headlights	226
8.4	Adjusting headlights	227
8.5	Preparations before working on headlights	230
8.6	Renewing gas discharge bulb	238
8.7	Renewing bulb for daytime running light	240
8.8	Renewing bulb for side lights	240
8.9	Removing and installing main and dip beam switch-over solenoid	241
8.10	Removing and installing swivel module position sensor and dynamic cornering light control motor	241
8.11	Renewing bulb for turn signal	242
8.12	Removing and installing gas discharge bulb control unit	243
8.13	Installing repair kit for headlight housing	243
8.14	Adapting headlights for driving on the left or right side of the road (rest-of-the-world vehicles with adjustment lever)	244
8.15	Adapting headlights for driving on the left or right side of the road (rest-of-the-world vehicles without adjustment lever)	245
9	Fog lights - vehicles up to 10.2004	247
9.1	Removing and installing fog lights	247
9.2	Renewing fog light bulb	248
9.3	Adjusting fog lights	248
10	Fog lights - vehicles from 11.2004	249
10.1	Removing and installing fog lights - Audi A4	249
10.2	Removing and installing fog lights - Audi S line	250
10.3	Removing and installing fog lights - Audi RS 4	250
10.4	Renewing fog light bulb - Audi A4	251
10.5	Renewing fog light bulb - Audi S line	252
10.6	Renewing fog light bulb - Audi RS 4	252

10.7	Adjusting fog lights	252
11	Turn signal repeaters	254
11.1	Removing and installing turn signal repeaters	254
12	Rear lights - vehicles up to 10.2004	255
12.1	Rear light (Saloon) - exploded view	255
12.2	Removing and installing rear light and bulb carrier (Saloon)	255
12.3	Rear light (Avant) - exploded view	256
12.4	Removing and installing rear light and bulb carrier (Avant)	257
13	Rear lights - vehicles from 11.2004	259
13.1	Outer rear light (Saloon) - exploded view	259
13.2	Removing and installing outer rear light and bulb carrier (Saloon)	259
13.3	Inner rear light (Saloon) - exploded view	260
13.4	Removing and installing inner rear light (Saloon)	261
13.5	Removing and installing bulb for tail light and rear fog light (Saloon)	262
13.6	Outer rear light (Avant) - exploded view	263
13.7	Removing and installing outer rear light and bulb carrier (Avant)	263
13.8	Inner rear light (Avant) - exploded view	264
13.9	Removing and installing inner rear light (Avant)	265
13.10	Removing and installing bulb for tail light and rear fog light (Avant)	266
14	High-level brake light - vehicles up to 10.2004	268
14.1	Removing and installing high-level brake light (saloon)	268
14.2	Removing and installing high-level brake light (Avant)	268
15	High-level brake light - vehicles from 11.2004	270
15.1	Removing and installing high-level brake light (saloon)	270
15.2	Removing and installing high-level brake light (Avant)	270
16	Number plate light	272
16.1	Removing and installing number plate light	272
17	Steering column switch module	273
17.1	Steering column switch module - exploded view	273
17.2	Removing and installing steering column switch module	273
17.3	Removing and installing return ring with slip ring	275
17.4	Removing and installing steering angle sender G85	276
17.5	Removing and installing steering column electronics control unit J527	277
17.6	Pin assignment at steering column electronics control unit J527 (front)	277
17.7	Pin assignment at steering column electronics control unit J527 (reverse side)	279
17.8	Removing and installing turn signal switch E2	280
17.9	Removing and installing cruise control system switch E45	280
17.10	Removing and installing intermittent wiper switch E22	281
18	Lock cylinder and ignition/starter switch	282
18.1	Removing and installing lock cylinder	282
18.2	Removing and installing ignition/starter switch	284
18.3	Pin assignment on ignition/starter switch	284
19	Parking aid	285
19.1	Parking aid - overview	285
19.2	Removing and installing parking aid control unit J446	286
19.3	Removing and installing front parking aid warning buzzer H22 (8-channel parking aid)	287
19.4	Removing and installing rear parking aid warning buzzer H15 (saloon)	287
19.5	Removing and installing rear parking aid warning buzzer H15 (Avant)	288
19.6	Removing and installing senders for parking aid (front) - vehicles up to 10.2004	288
19.7	Removing and installing senders for parking aid (front) - vehicles from 11.2004	289
19.8	Removing and installing senders for parking aid (rear) - vehicles up to 05.2004	290
19.9	Removing and installing senders for parking aid (rear) - vehicles from 06.2004	291
20	Automatic headlight range control	292
20.1	Automatic headlight range control - overview	292

20.2	Removing and installing control unit for headlight range control J431	293
96	- Lights, bulbs, switches - interior	294
1	Switches	294
1.1	Removing and installing light switch E1	294
1.2	Removing and installing headlight range control adjuster and "coming home" switch	294
1.3	Removing and installing hazard warning lights button E229	295
1.4	Removing and installing switches in centre console	295
1.5	Removing and installing front seat heating switches	296
1.6	Removing and installing heated rear seat switch with regulator E128 / E129	297
1.7	Removing and installing function selection switch 2 E272	297
1.8	Removing and installing starter button E378 - Audi RS 4	297
1.9	Removing and installing glove compartment light switch E26	297
1.10	Removing and installing mirror adjustment switch E43	299
1.11	Removing and installing window regulator switch E40 / E41 (driver's side)	299
1.12	Removing and installing window regulator switches E40 / E41 / E53 / E55	300
1.13	Removing and installing front right window regulator switch E41	300
1.14	Removing and installing rear left/rear right window regulator switch E52 / E54	300
1.15	Removing and installing sunroof switch E8	301
1.16	Removing and installing door contact switch	301
1.17	Removing and installing interior locking switch E150 / E198 (central locking button)	302
1.18	Removing and installing rear interior locking switch E273 / E273 (central locking button)	302
1.19	Removing and installing interior monitor deactivation switch E183 and rear lid release switch E165	302
1.20	Removing and installing switches for seat memory with seat memory ON/OFF button	303
1.21	Removing and installing garage door operating unit E284	304
1.22	Removing and installing rear lid contact switch (saloon up to 10.2004)	304
1.23	Removing and installing rear lid contact switch (Avant up to 10.2004)	304
1.24	Removing and installing rear lid contact switch - vehicles from 11.2004 onwards	305
1.25	Removing and installing 12 V socket in luggage compartment - vehicles up to 10.2004	305
1.26	Removing and installing 12 V socket in luggage compartment - vehicles from 11.2004 onwards	306
2	Immobiliser	307
3	Ultrasonic interior monitoring	308
3.1	Removing and installing anti-theft alarm ultrasonic sensor G209	308
3.2	Removing and installing anti-theft/tilt system control unit J529	308
3.3	Removing and installing alarm horn H12	308
4	Interior lights	310
4.1	Removing and installing vanity mirror light	310
4.2	Removing and installing interior light/reading light (front)	310
4.3	Removing and installing LED for background lighting	312
4.4	Renewing bulb for front interior light	312
4.5	Renewing bulb for reading light (front)	313
4.6	Removing and installing front passenger side airbag deactivated warning lamp K145 - vehicles up to 10.2004	314
4.7	Removing and installing front passenger side airbag deactivated warning lamp K145 - vehicles from 11.2004	314
4.8	Removing and installing interior light/reading light (rear)	314
4.9	Renewing bulb for interior light/reading light (rear)	315
4.10	Removing and installing glove compartment light	316
4.11	Removing and installing ashtray light (front)	316
4.12	Removing and installing ashtray light (rear)	317
4.13	Removing and installing bulb for door opener light	317
4.14	Removing and installing door warning lamp and entry light	317
4.15	Removing and installing footwell light (front)	318

4.16	Removing and installing ashtray light (rear)	318
4.17	Removing and installing footwell light (rear)	318
4.18	Removing and installing luggage compartment lights (saloon)	319
4.19	Removing and installing luggage compartment light (Avant)	319
4.20	Removing and installing bulb for luggage compartment light (Avant)	320
4.21	Removing and installing rear lid light (Avant)	320
5	Horn	322
5.1	Removing and installing horn and dual tone horn H1 - vehicles up to 10.2004	322
5.2	Removing and installing horn and dual tone horn H1 - vehicles from 11.2004	323
6	Towing bracket	324
6.1	Socket for towing bracket	324
6.2	Removing and installing trailer detector control unit J345	324
97	- Wiring	325
1	Relay carriers, fuse carriers	325
1.1	Removing and installing fuse holder	325
1.2	Removing and installing onboard supply control unit J519	326
1.3	Removing and installing 9-position relay carrier	327
1.4	Removing and installing 3-position relay carrier	328
1.5	Removing and installing 4-position relay carrier	328
1.6	Removing and installing connector point (left-side)	330
1.7	Removing and installing convenience system central control unit J393	330
1.8	Removing and installing connector point (right-side)	331
1.9	Removing and installing main fuse box in luggage compartment (rear left) - Audi RS 4	332
1.10	Removing and installing main fuse in luggage compartment (rear left) - Audi RS 4	333
1.11	Removing and installing electronics box (plenum chamber)	333
1.12	Removing and installing fan for electronics box (plenum chamber)	335
1.13	Removing and installing 4-position relay carrier in electronics box (plenum chamber)	336
1.14	Removing and installing connector point in electronics box (plenum chamber)	337
1.15	Removing and installing main fuse holder - vehicles with battery in engine compartment	339
1.16	Removing and installing remote positive terminal in plenum chamber - Audi RS 4	340
2	Repairing wiring harnesses and electrical connectors	342
3	Repairing connector housings and electrical connectors	343
4	Releasing and dismantling connector housings	344
5	Repairing aerial wires	345
6	Vehicle diagnostic, testing and information systems	346