

## Contents

<b>91 - Radio, telephone, navigation</b> .....	<b>1</b>
<b>1 Radio systems</b> .....	<b>1</b>
1.1 General notes .....	1
1.2 Radio systems - overview .....	3
1.3 Connectors and pin assignment .....	9
1.4 Connectors for aerial amplifiers .....	21
1.5 Overview of fitting locations (Saloon) .....	27
1.6 Overview of fitting locations (Avant) .....	28
1.7 Removing and installing "chorus" and "concert" radios .....	29
1.8 Removing and installing "symphony" radio .....	30
1.9 Activating/deactivating transport mode of "symphony II+" radio unit .....	31
1.10 Removing and installing CD changer R41 .....	31
1.11 Removing and installing iPod holder R192 .....	33
1.12 Removing and installing loudspeakers in doors .....	34
1.13 Removing and installing internal loudspeaker R70 .....	36
1.14 Removing and installing bass loudspeaker R100 (Saloon) .....	37
1.15 Removing and installing bass loudspeaker R100 (Avant) .....	37
1.16 Removing and installing amplifier R12 (Saloon) .....	38
1.17 Removing and installing amplifier R12 (Avant) .....	38
1.18 Removing and installing amplifier R12 BOSE (Saloon) .....	38
1.19 Removing and installing amplifier R12 BOSE (Avant) .....	39
1.20 Function test for internal microphone R74 .....	39
1.21 Removing and installing internal microphone R74 .....	40
1.22 Removing and installing aerial amplifier R24 / aerial selection control unit J515 (Saloon) .....	41
1.23 Removing and installing aerial module, left R108 (Avant) .....	41
<b>2 Radio systems SDARS (USA)</b> .....	<b>44</b>
2.1 General notes .....	44
2.2 Radio systems - overview .....	46
2.3 Layout of communication system with SDARS .....	48
2.4 Connectors and pin assignment .....	49
2.5 Connectors for aerial amplifiers .....	58
2.6 Overview of fitting locations (Saloon) .....	63
2.7 Overview of fitting locations (Avant) .....	65
2.8 Removing and installing satellite radio R146 , enabling the radio system .....	66
2.9 Removing and installing radio, telephone and navigation system aerial R52 (Saloon) .....	69
2.10 Removing and installing radio, telephone and navigation system aerial R52 (Avant) .....	70
<b>3 Telephone system</b> .....	<b>72</b>
3.1 General notes .....	72
3.2 Telephone systems - overview .....	72
3.3 Connectors and pin assignment .....	76
3.4 Overview of fitting locations (Saloon) .....	80
3.5 Overview of fitting locations (Avant) .....	82
3.6 Removing and installing telephone bracket R126 .....	83
3.7 Removing and installing telephone transmitter and receiver unit R36 .....	85
3.8 Removing and installing telephone transmitter and receiver unit R36 (fixed installation telephone) .....	86
3.9 Removing and installing aerial amplifier for mobile telephone R86 (Saloon) .....	87
3.10 Removing and installing aerial amplifier for mobile telephone R86 (Avant) .....	87
3.11 Removing and installing telephone microphone R38 .....	87
3.12 Removing and installing telephone aerial R65 (Saloon) .....	88
3.13 Removing and installing telephone aerial R65 (Avant) .....	89
<b>4 Telephone system (USA)</b> .....	<b>91</b>

4.1	General notes	91
4.2	Phone pre-installation - overview	91
4.3	Connectors and pin assignment	92
4.4	Overview of fitting locations (Saloon)	94
4.5	Overview of fitting locations (Avant)	96
<b>5</b>	<b>Navigation system IV (BNS 4.0)</b>	<b>97</b>
5.1	General notes	97
5.2	Layout of navigation system BNS 4.0	97
5.3	Connectors on navigation system with CD drive control unit J401	98
5.4	Overview of fitting locations (Saloon)	99
5.5	Overview of fitting locations (Avant)	101
5.6	Removing and installing navigation system with CD drive control unit J401	101
5.7	Removing and installing function selection switch 2 E272	102
5.8	Removing and installing navigation aerial R50 (Saloon)	102
5.9	Removing and installing navigation aerial R50 (Avant)	103
<b>6</b>	<b>Navigation system II-D (Navigation system plus)</b>	<b>105</b>
6.1	General notes	105
6.2	On-screen fault messages	105
6.3	Navigation system II-D - overview	107
6.4	Connectors and pin assignment	111
6.5	Overview of fitting locations (Saloon)	116
6.6	Overview of fitting locations (Avant)	118
6.7	Removing and installing operating electronics control unit for navigation J402	119
6.8	Removing and installing navigation interface R94 (Saloon)	120
6.9	Removing and installing navigation interface R94 (Avant)	121
6.10	Removing and installing navigation/TV tuner J415	121
6.11	Removing and installing aerial module, right R109 (Avant)	122
<b>7</b>	<b>Navigation system RNS-E</b>	<b>123</b>
7.1	General notes	123
7.2	On-screen fault messages	123
7.3	Navigation system RNS-E - overview	124
7.4	Connectors on navigation system with CD drive control unit J401	129
7.5	Connectors on navigation system tuner for TV J415	131
7.6	Overview of fitting locations (Saloon)	131
7.7	Overview of fitting locations (Avant)	133
7.8	Removing and installing navigation system with CD drive control unit J401	134
<b>8</b>	<b>Navigation system RNS-E USA</b>	<b>136</b>
8.1	General notes	136
8.2	On-screen fault messages	136
8.3	Navigation system RNS-E - overview	137
8.4	Connectors on navigation system with CD drive control unit J401	142
8.5	Overview of fitting locations (Saloon)	144
8.6	Overview of fitting locations (Avant)	146
<b>9</b>	<b>Navigation system RNS-JP3 Japan</b>	<b>148</b>
9.1	General notes	148
9.2	Navigation system RNS-JP3 - overview	148
9.3	Connectors and pin assignment	153
9.4	Overview of fitting locations	155
9.5	Removing and installing operating electronics control unit for navigation J402	158
9.6	Removing and installing aerial selection control unit J515 (Saloon)	159
9.7	Removing and installing aerial selection control unit J515 (Avant)	160
<b>10</b>	<b>Navigation system RNS-JP4 Japan</b>	<b>161</b>
10.1	General notes	161
10.2	RNS-JP4 - overview	161
10.3	Connectors and pin assignment	164

10.4	Overview of fitting locations (Saloon) .....	165
10.5	Overview of fitting locations (Avant) .....	166
<b>11</b>	<b>Navigation system RNS-Low .....</b>	<b>168</b>
11.1	General notes .....	168
11.2	Navigation system RNS-Low - overview .....	168
11.3	Connectors for control unit with display for radio and navigation J503 .....	173
11.4	Overview of fitting locations (Saloon) .....	174
11.5	Overview of fitting locations (Avant) .....	176
11.6	Removing and installing control unit with display for radio and navigation J503 .....	177
<b>12</b>	<b>Telematics system .....</b>	<b>179</b>
12.1	General notes .....	179
12.2	Telematics system - overview .....	179
12.3	Connectors on telephone/telematics control unit J526 .....	181
12.4	Overview of fitting locations (Saloon) .....	183
12.5	Overview of fitting locations (Avant) .....	185
12.6	Activating/deactivating service mode .....	186
12.7	Removing and installing telephone and telematics control unit J526 .....	187
12.8	Renewing telematics SIM card .....	188
12.9	Initialising telephone/telematics control unit J526 .....	189
12.10	Removing and installing emergency battery for telematics A16 .....	190
12.11	Removing and installing emergency call button E276 and breakdown help button E275 .....	191
12.12	Removing and installing additional loudspeaker for telematics R91 .....	192
12.13	Removing and installing additional aerial for telematics R90 .....	192
12.14	Removing and installing aerial filter (GPS) R110 (Avant) .....	193
12.15	Removing and installing connector for fax/laptop .....	193
<b>13</b>	<b>Voice control system .....</b>	<b>195</b>
13.1	General notes .....	195
13.2	Voice control system - overview .....	195
13.3	Connectors on language input control unit J507 .....	197
13.4	Overview of fitting locations .....	197
13.5	Removing and installing language input control unit J507 .....	199
<b>14</b>	<b>Multi-function steering wheel .....</b>	<b>200</b>
14.1	General notes .....	200
14.2	Multi-function steering wheel - overview .....	200
14.3	Removing and installing multi-function buttons .....	201
14.4	Removing and installing tiptronic buttons .....	203
<b>15</b>	<b>Steering column electronics control unit J527 .....</b>	<b>206</b>
15.1	General notes .....	206
15.2	Pin assignment on steering column electronics control unit J527 .....	206
<b>16</b>	<b>Electronic logbook .....</b>	<b>209</b>
16.1	General notes .....	209
16.2	Electronic log book - overview .....	209
16.3	Fault message .....	209
16.4	Removing and installing chip card reader unit R99 .....	210