

Contents

00 - Technical data	1
1 Routing and attaching pipes and wiring	1
2 Contact corrosion	2
68 - Interior equipment	3
1 Shelves / trim panels	3
1.1 Removing and installing glove box	4
1.2 Removing and installing glove box lock	6
1.3 Removing and installing glove box lid	6
1.4 Removing and installing cushioning mechanism for glove box lid	7
1.5 Removing and installing glove box on vehicles with knee bolster	9
1.6 Removing and installing handle for glove box lock on vehicles with knee bolster	11
1.7 Removing and installing storage compartment (driver side) with or without knee bolster ..	11
1.8 Removing and installing cover for instrument cluster	13
1.9 Removing and installing steering column switch trim	13
1.10 Removing and installing centre armrest	14
1.11 Removing and installing support bracket for centre armrest	15
1.12 Making opening for centre armrest	16
1.13 Removing and installing centre console - USA vehicles up to 10.2004 and RoW vehicles	17
1.14 Removing and installing centre console - USA vehicles from 11.2004 onwards	19
1.15 Removing and installing cassette holder - USA vehicles up to 10.2004 and RoW vehicles	22
1.16 Removing and installing gearshift cover and gear lever boot	23
1.17 Removing and installing navigation system operating unit in centre console - USA vehicles up to 10.2004 and RoW vehicles	23
1.18 Removing and installing cigarette lighter in centre console - USA vehicles up to 10.2004 and RoW vehicles	24
1.19 Removing and installing cigarette lighter in centre console - USA vehicles from 11.2004 onwards	26
1.20 Removing and installing footwell trim	26
1.21 Removing and installing handbrake lever grip	27
1.22 Removing and installing handbrake lever trim	27
1.23 Removing and installing mobile phone carrier in centre console	29
1.24 Making openings for mobile phone carrier in centre console	29
1.25 Removing and installing cradle for telephone handset in centre console	30
1.26 Making openings for telephone handset cradle in centre console	31
1.27 Removing and installing centre section of dash panel	31
1.28 Removing and installing cup holder and storage compartment	32
1.29 Removing and installing ashtray (front)	33
1.30 Removing and installing ashtray (rear)	35
2 Interior mirror	36
2.1 Removing and installing interior mirror with rigid base	36
2.2 Removing interior mirror (automatic anti-dazzle interior mirror, interior mirror with compass)	37
2.3 Checking operation of automatic anti-dazzle interior mirror	38
2.4 Calibrating interior mirror with compass	38
2.5 Calibrating a new compass	44
2.6 Calibrating an existing compass	45
2.7 Setting correct zone	45
2.8 Bonding in retaining plate for interior mirror	45
69 - Passenger protection	47

1	Safety regulations and test methods for pyrotechnic, electrical and mechanical components of the restraint system	47
1.1	General safety regulations	48
1.2	Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	49
1.3	Additional safety regulations for side airbags	50
1.4	Additional safety regulations for curtain airbags	50
1.5	Safety regulations for crash sensors (pressure sensors) for side airbag (front)	51
1.6	Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	51
1.7	Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	52
1.8	Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	52
1.9	Checking airbag mounting components following an accident	54
1.10	Accident in which no airbag was triggered	55
1.11	Checking seat belts	55
1.12	Checking belt webbing	55
1.13	Checking automatic belt retractor (locking action)	56
1.14	Visual inspection of belt buckle	57
1.15	Functional check of belt buckle	57
1.16	Checking guide fittings and latch plate	57
1.17	Checking securing components and anchorage points following an accident	57
1.18	Checking child seat restraint function for additional child seats (not for driver's seat belt) - country-specific version	58
1.19	Checking child seat anchors following an accident	58
2	Seat belts	59
2.1	Overview of seat belt anchorage points	59
2.2	Removing and installing three-point seat belt with belt height adjuster	60
2.3	Removing and installing belt buckle (standard seat, Recaro seat and seat with seat memory)	62
2.4	Removing and installing belt buckle for seat-occupied sensor controlling deactivation of front passenger's airbag (country-specific version)	66
2.5	Removing and installing belt buckle (RS bucket seat)	68
2.6	Removing and installing belt end fitting	68
2.7	Removing and installing three-point seat belt (rear)	69
2.8	Removing and installing belt guide (rear right and left)	71
2.9	Removing and installing third rear three-point seat belt (fixed backrest, rear)	71
2.10	Removing and installing third rear three-point seat belt (folding backrest, rear)	73
2.11	Anchorage points for centre floor panel	76
2.12	Children's bench anchorage system (rear seat, saloon)	77
2.13	Removing and installing children's bench anchorage system (Avant)	78
3	Removing and installing ISOFIX retainer	80
3.1	Removing and installing ISOFIX retainer (front)	80
3.2	Removing and installing ISOFIX retainer (rear)	80
4	Servicing airbags	82
4.1	Overview of fitting locations	82
4.2	Removing and installing airbag control unit -J 234-	83
4.3	Removing and installing battery isolation igniter N253 (equipment version)	84
5	Servicing airbag (driver side)	87
5.1	Removing and installing airbag unit (standard steering wheel)	87
5.2	Removing and installing airbag unit (sports steering wheel)	89
5.3	Removing and installing airbag unit (multi-function steering wheel)	91
5.4	Exploded view of airbag unit on driver side (RS 4)	93
5.5	Removing and installing airbag unit (RS 4)	94
5.6	Removing and installing return ring with slip ring	96

6	Servicing airbag (front passenger side)	97
6.1	Removing and installing airbag (front passenger side)	97
6.2	Removing and installing key-operated switch to deactivate airbag on front passenger side	99
6.3	Removing and installing warning lamp for airbag deactivated on front passenger side K145 (vehicles up to approx. week 43/03)	100
6.4	Removing and installing warning lamp for airbag deactivated on front passenger side K145 (vehicles from approx. week 44/03 onwards)	100
7	Servicing side airbags	102
7.1	Removing and installing side airbag igniter on driver side N199 and side airbag igniter on front passenger side N200, front (airbag fixed onto outside of seat)	102
7.2	Removing and installing side airbag igniter (driver side/front passenger side)	104
7.3	Removing and installing rear side airbag (fixed backrest)	107
7.4	Removing and installing rear side airbag (folding backrest)	109
8	Servicing curtain airbags	112
8.1	Removing and installing curtain airbag (saloon)	112
8.2	Removing and installing curtain airbag (Avant)	120
9	Deactivating side airbag (rear)	128
9.1	Deactivating	128
9.2	Activating	128
10	Servicing crash sensors for airbags	130
10.1	Removing and installing crash sensor for front airbags	130
10.2	Removing and installing crash sensor for side airbag (front) (vehicles up to 10.2004)	131
10.3	Removing and installing crash sensor (pressure sensor) for side airbag (front) (vehicles from 11.2004 onwards)	133
10.4	Removing and installing crash sensor for rear side airbag (curtain airbag)	135
11	Belt-fastened recognition	137
12	Servicing seat occupied recognition system for front passenger airbag (country-specific version)	139
12.1	Removing and installing seat occupied sensor	139
70 - Trim, insulation		143
1	Door trim (front)	143
1.1	Overview of fitting locations	143
1.2	Removing and installing door trim (front)	144
1.3	Removing and installing armrest	145
1.4	Removing and installing window winder	147
1.5	Removing and installing window regulator switch	147
1.6	Overview of wiring in door trim	148
1.7	Removing and installing door warning light and footwell light	148
1.8	Removing and installing treble loudspeaker	149
1.9	Removing and installing bass loudspeaker	149
1.10	Removing and installing interior door handle	149
2	Door trim (rear)	150
2.1	Overview of fitting locations	150
2.2	Removing and installing door trim (rear)	151
2.3	Removing and installing window regulator switch	152
2.4	Removing and installing window winder	153
2.5	Removing and installing armrest	153
2.6	Overview of wiring in door trim	155
2.7	Removing and installing door warning light	155
2.8	Removing and installing bass loudspeaker	156
2.9	Removing and installing treble loudspeaker	156
2.10	Removing and installing interior door handle	156
2.11	Removing and installing sun blind for side window (rear)	157
2.12	Removing and installing retaining hook for sun blind	158



3	Dash panel	159
3.1	Overview of fitting locations	159
3.2	Removing and installing dash panel	160
3.3	Removing and installing dash panel trim (left-side)	165
3.4	Removing and installing dash panel trim (right-side)	166
3.5	Removing and installing dash panel vent (left and right)	168
3.6	Removing and installing dash panel air duct (left and right)	169
3.7	Removing and installing dash panel vent (centre)	169
4	Removing and installing central tube	171
4.1	Overview of fitting locations	171
4.2	Removing and installing central tube for dash panel	172
5	Roof trim (saloon)	177
5.1	Removing and installing sun visor	177
5.2	Removing and installing sun visor (centre)	178
5.3	Removing and installing moulded headliner	179
5.4	Wire routing at back of moulded headliner	181
5.5	Removing and installing roof grab handle	181
6	Roof trim (Avant)	183
6.1	Removing and installing sun visor	183
6.2	Removing and installing sun visor (centre)	184
6.3	Removing and installing moulded headliner	185
6.4	Wire routing at back of moulded headliner	187
6.5	Removing and installing roof grab handle	187
7	Trim panels	189
7.1	Removing and installing A-pillar trim (top)	189
7.2	Removing and installing A-pillar trim (bottom)	191
7.3	Removing and installing foot rest and foot rest bracket	192
7.4	Removing and installing B-pillar trim (top)	193
7.5	Removing and installing B-pillar trim (bottom)	196
7.6	Removing and installing C-pillar trim	196
7.7	Removing and installing D-pillar trim	198
7.8	Removing and installing roof end trim	200
7.9	Removing and installing sill/pillar trim	201
7.10	Removing and installing rear shelf	201
7.11	Removing and installing electric sun blind for rear window	203
7.12	Removing and installing rear lid trim	204
7.13	Removing and installing rear cross panel trim	205
7.14	Removing and installing luggage compartment side trim	206
7.15	Removing and installing base retainer	207
7.16	Removing and installing back panel trim	209
7.17	Removing and installing loading aid	209
7.18	Removing and installing storage well liner	211
7.19	Removing and installing luggage compartment floor covering	212
7.20	Removing and installing floor covering	213
8	Trim panels - Avant	214
8.1	Removing and installing C-pillar trim	214
8.2	Removing and installing cover above rear door	215
8.3	Removing and installing D-pillar trim	218
8.4	Removing and installing roof end trim	220
8.5	Removing and installing rear lid trim	220
8.6	Luggage compartment side trim	222
8.7	Removing and installing base retainer	223
8.8	Removing electric socket (rear)	224
8.9	Removing and installing load guard	225
8.10	Removing and installing rear cross panel trim	226

8.11	Removing and installing luggage compartment floor	228
8.12	Removing and installing storage well liner	229
8.13	Bracket for fastening rings	229
72	- Seat frames	231
1	Front seats (standard seats) - vehicles up to 10.2004	231
1.1	Removing and installing front seats (standard seats)	231
1.2	Connecting airbag adapter VAS 6036	235
1.3	Disconnecting connector for side airbag	237
1.4	Removing and installing backrests, front (standard seats)	237
1.5	Removing and installing backrest adjuster	241
1.6	Removing and installing seat cushion extension (sports seat)	242
1.7	Removing and installing head restraints with slide-in locking mechanism	244
2	Front seats (standard seats) - vehicles from 11.2004 onwards	245
2.1	Removing and installing front seats (standard seats)	246
2.2	Unplugging connectors	249
2.3	Connecting airbag adapter VAS 6036	249
2.4	Connector assignment at connector point	252
2.5	Exploded view of modular wire routing for vehicles from 08.2005 onwards	252
2.6	Modular wire routing with corrugated tube at front seat	253
2.7	Removing and installing seat rail covers	256
2.8	Removing and installing backrests, front (standard seats)	257
2.9	Removing and installing backrest adjuster	259
2.10	Removing and installing seat height adjuster	260
2.11	Removing and installing side trim (sill side)	262
2.12	Removing and installing side trim (tunnel side)	264
2.13	Removing and installing seat height adjustment unit	265
2.14	Removing and installing switch for four-way lumbar support	266
2.15	Removing and installing drawer - vehicles up to 06.2006	267
2.16	Exploded view of storage compartment (passenger side) - vehicles from 06.2006 onwards	270
2.17	Removing and installing storage compartment	270
2.18	Exploded view of storage compartment components	272
2.19	Dismantling and assembling storage compartment	273
2.20	Removing and installing seat cushion extension (sports seat)	276
2.21	Renewing backrest	278
2.22	Renewing seat pan	278
2.23	Removing and installing backrest cover panel	280
2.24	Removing and installing four-way lumbar support - vehicles up to 06.2006 (country-specific version) / up to 11.2006 (RoW)	281
2.25	Removing and installing four-way lumbar support control motors	283
2.26	Removing and installing head restraints with slide-in locking mechanism	285
2.27	Removing and installing rear footwell light	285
2.28	Exploded view of front seat (standard seat) without active head restraint system - vehicles from 06.2006 onwards (country-specific version) / from 11.2006 onwards (RoW)	286
2.29	Backrest without active head restraint system - removing and installing head restraint	287
2.30	Backrest without active head restraint system - removing and installing backrest cover panel	287
2.31	Backrest without active head restraint system - removing and installing four-way lumbar support	287
2.32	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	290
2.33	Backrest without active head restraint system - removing and installing head restraint guides	291
2.34	Backrest without active head restraint system - removing and installing cover with padding	291
2.35	Backrest without active head restraint system - detaching cover from padding	291

3	Front seats (with seat memory, electric adjustment) - vehicles up to 10.2004	292
3.1	Basic setting after renewing seat control unit/motor	293
3.2	Removing and installing front seats (with seat memory, electric seat adjustment)	293
3.3	Removing front seat in event of defective seat longitudinal adjustment motor or control unit	294
3.4	Removing and installing seat rail cover (front)	297
3.5	Removing and installing seat rail cover (rear)	298
3.6	Unplugging connectors	298
3.7	Connecting airbag adapter VAS 6036	299
3.8	Disconnecting connector for side airbag	300
3.9	Removing and installing front seat backrest	301
3.10	Removing and installing side trim (sill side)	303
3.11	Removing and installing side trim (tunnel side)	305
3.12	Renewing backrest	306
3.13	Renewing seat pan	307
3.14	Removing and installing guide for side airbag	308
3.15	Removing and installing seat adjustment switch	309
3.16	Removing and installing switch for four-way lumbar support	310
3.17	Removing and installing control unit	311
3.18	Removing and installing seat longitudinal adjustment motor	313
3.19	Renewing electric height adjuster for seats bolted onto seat rails (old version)	314
3.20	Renewing electric height adjuster on seats with upper section laser-welded to seat rail (new version)	315
3.21	Removing and installing seat rake adjustment motor	316
3.22	Removing and installing seat cushion extension (sports seat)	317
3.23	Removing and installing backrest adjustment motor	319
3.24	Removing and installing backrest cover panel	324
3.25	Removing and installing backrest frame	325
3.26	Removing and installing four-way lumbar support	325
3.27	Removing and installing four-way lumbar support motors	327
3.28	Removing and installing head restraint with slide-in locking mechanism	328
3.29	Removing and installing rear footwell light	329
3.30	Removing and installing spring mat with wiring harness for seat pan	329
3.31	Wiring assignment for seat	331
3.32	Wiring assignment for backrest	332
3.33	Removing and installing wiring harness for backrest	332
4	Front seats (with seat memory, electric adjustment) - vehicles from 11.2004 onwards	334
4.1	Basic setting after renewing seat control unit/motor	336
4.2	Removing and installing front seats (with seat memory, electric seat adjustment)	336
4.3	Removing front seats in event of defective seat longitudinal adjustment control unit or motor	338
4.4	Unplugging connectors	341
4.5	Connecting airbag adapter VAS 6036	342
4.6	Connector assignment at connector point	344
4.7	Exploded view of modular wire routing for vehicles from 08.2005 onwards	344
4.8	Modular wire routing with corrugated tube at front seat	344
4.9	Removing and installing seat rail covers	344
4.10	Removing and installing front seat backrest	345
4.11	Removing and installing side trim (sill side)	349
4.12	Removing and installing side trim (tunnel side)	351
4.13	Renewing backrest	353
4.14	Renewing seat pan	353
4.15	Removing and installing seat adjustment switch	354
4.16	Removing and installing switch for four-way lumbar support	355
4.17	Removing and installing control unit for seat memory	356
4.18	Removing and installing seat longitudinal adjustment motor	358

4.19	Removing and installing seat height adjustment motor	358
4.20	Removing and installing seat rake adjustment motor	360
4.21	Removing and installing drawer - vehicles up to 06.2006	362
4.22	Exploded view of storage compartment (passenger side) - vehicles from 06.2006 onwards	364
4.23	Removing and installing storage compartment	364
4.24	Exploded view of storage compartment components	364
4.25	Dismantling and assembling storage compartment	364
4.26	Removing and installing seat cushion extension (sports seat)	364
4.27	Removing and installing backrest adjustment motor	366
4.28	Removing and installing backrest cover panel	370
4.29	Removing and installing four-way lumbar support - vehicles up to 06.2006 (country-specific version) / up to 11.2006 (RoW)	372
4.30	Removing and installing four-way lumbar support control motors	374
4.31	Removing and installing head restraint with slide-in locking mechanism	376
4.32	Removing and installing rear footwell light	376
4.33	Exploded view of seat pan	376
4.34	Dismantling and assembling seat pan	378
4.35	Removing and installing spring mat with wiring harness for seat pan	380
4.36	Wiring assignment for seat	382
4.37	Wiring assignment for backrest	383
4.38	Removing and installing wiring harness for backrest	383
4.39	Exploded view of front seat (seat with seat memory, electric adjustment) without active head restraint system - vehicles from 06.2006 onwards (country-specific version) / from 11.2006 onwards (RoW)	385
4.40	Backrest without active head restraint system - removing and installing head restraint	386
4.41	Backrest without active head restraint system - removing and installing backrest cover panel	386
4.42	Backrest without active head restraint system - removing and installing four-way lumbar support	386
4.43	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	389
4.44	Backrest without active head restraint system - removing and installing head restraint guides	390
4.45	Backrest without active head restraint system - removing and installing cover with padding	390
4.46	Backrest without active head restraint system - detaching cover from padding	390
5	Recaro seats (front) - vehicles up to 10.2004	391
5.1	Basic setting after renewing seat control unit/motor	392
5.2	Removing and installing seat	392
5.3	Removing seat in event of defective control unit or defective longitudinal adjustment motor	394
5.4	Removing and installing seat rail cover (front)	397
5.5	Removing and installing seat rail cover (rear)	398
5.6	Unplugging connectors	398
5.7	Connecting airbag adapter VAS 6036	399
5.8	Disconnecting connector for side airbag	400
5.9	Removing and installing front seat backrest	401
5.10	Removing and installing side trim (sill side)	403
5.11	Removing and installing side trim (tunnel side)	405
5.12	Removing and installing drawer (storage compartment)	407
5.13	Removing and installing guide for side airbag	408
5.14	Removing and installing seat adjustment switch	410
5.15	Removing and installing switch for four-way lumbar support	411
5.16	Removing and installing control unit	412
5.17	Removing and installing seat longitudinal adjustment motor	413
5.18	Removing and installing seat height adjustment motor	414
5.19	Removing and installing seat rake adjustment motor	416

5.20	Removing and installing seat cushion extension	418
5.21	Removing and installing backrest adjustment motor	420
5.22	Removing and installing backrest cover panel	424
5.23	Removing and installing backrest frame	426
5.24	Removing and installing four-way lumbar support	426
5.25	Removing and installing four-way lumbar support motors	428
5.26	Removing and installing head restraint with slide-in locking mechanism	429
5.27	Removing footwell light (rear)	430
5.28	Removing and installing spring mat with wiring harness for seat pan	430
5.29	Wiring assignment for seat	432
5.30	Wiring assignment for backrest	433
5.31	Removing and installing wiring harness for backrest	433
6	Recaro seats (front) - vehicles from 11.2004 onwards	435
6.1	Basic setting after renewing seat control unit/motor	437
6.2	Removing and installing seat	437
6.3	Removing front seats in event of defective seat longitudinal adjustment control unit or motor	439
6.4	Removing and installing seat rail covers	441
6.5	Unplugging connectors	442
6.6	Connecting airbag adapter VAS 6036	442
6.7	Disconnecting connector for side airbag	442
6.8	Removing and installing front seat backrest	442
6.9	Exploded view of trim (sill side and tunnel side)	442
6.10	Removing and installing trim and assembly cover (sill side)	443
6.11	Removing and installing trim (tunnel side)	447
6.12	Exploded view of retaining brackets for trim (sill side)	448
6.13	Removing and installing retaining bracket (front)	450
6.14	Removing and installing retaining bracket (rear)	451
6.15	Removing and installing retaining bracket (top)	452
6.16	Removing and installing drawer - vehicles up to 06.2006	453
6.17	Exploded view of storage compartment (passenger side) - vehicles from 06.2006 onwards	456
6.18	Removing and installing storage compartment	456
6.19	Exploded view of storage compartment components	458
6.20	Dismantling and assembling storage compartment	459
6.21	Removing and installing seat adjustment switch	462
6.22	Removing and installing switch for four-way lumbar support	462
6.23	Removing and installing control unit	462
6.24	Removing and installing seat longitudinal adjustment motor	462
6.25	Exploded view of height adjustment motor V245 / V246	462
6.26	Removing and installing seat height adjustment motor V245 / V246	463
6.27	Removing and installing toothed segment for seat height adjustment	465
6.28	Removing and installing seat rake adjustment motor	467
6.29	Removing and installing backrest adjustment motor	470
6.30	Removing and installing seat cushion extension	470
6.31	Removing and installing backrest cover panel	470
6.32	Removing and installing four-way lumbar support	471
6.33	Removing and installing four-way lumbar support control motors	474
6.34	Removing and installing head restraint with slide-in locking mechanism	476
6.35	Removing and installing rear footwell light	476
6.36	Removing and installing spring mat with wiring harness for seat pan	476
6.37	Exploded view of seat pan	476
6.38	Dismantling and assembling seat pan	478
6.39	Exploded view of front seat (Recaro) without active head restraint system	481
6.40	Backrest without active head restraint system - removing and installing head restraint	482

6.41	Backrest without active head restraint system - removing and installing backrest cover panel	482
6.42	Backrest without active head restraint system - removing and installing four-way lumbar support	482
6.43	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	485
6.44	Backrest without active head restraint system - removing and installing head restraint guides	486
6.45	Backrest without active head restraint system - removing and installing cover with padding	486
6.46	Backrest without active head restraint system - detaching cover from padding	486
7	RS bucket seat (front)	487
7.1	Removing and installing seat	487
7.2	Removing and installing seat rail cover	488
7.3	Unplugging electrical connectors	489
7.4	Connector housing with terminating resistor for side airbag	490
7.5	Removing and installing side trim panels	490
7.6	Removing and installing backrest adjuster knob	493
7.7	Removing and installing seat height adjuster	493
7.8	Removing and installing lumbar support adjustment switch	493
7.9	Removing and installing button for backrest bolster adjustment and button for seat bolster adjustment	494
7.10	Removing and installing control unit	496
7.11	Removing and installing backrest and seat pan (front)	496
7.12	Removing and installing operating cable for seat longitudinal adjustment	500
7.13	Removing and installing seat height adjustment unit	501
7.14	Removing and installing backrest cover panels	503
7.15	Pneumatic block - allocation of components	505
8	Rear seats	508
8.1	Removing and installing seat bench - vehicles up to 10.2004	508
8.2	Removing and installing seat bench - vehicles from 11.2004 onwards	510
8.3	Removing and installing 1/3 section of backrest (left-side)	512
8.4	Removing and installing 2/3 section of backrest (right-side)	517
8.5	Removing and installing centre armrest	520
8.6	Removing and installing cup holder	521
8.7	Removing and installing centre armrest trim panel (rear)	521
8.8	Removing and installing side padding for rear seat	522
8.9	Removing and installing centre bracket	524
8.10	Removing and installing outer fitting for rear seat backrest	524
8.11	Head restraints - exploded view of components	524
8.12	Removing and installing head restraints with slide-in locking mechanism	525
8.13	Removing and installing head restraints without slide-in locking mechanism	526
8.14	Removing and installing fixed rear seat backrest	526
9	Recaro seats (rear)	529
9.1	Removing and installing seat bench	529
74	Seat - padding, covers	530
1	Seat covers and padding for front seats	530
1.1	Removing and installing seat cushion cover and padding (standard seat)	530
1.2	Removing and installing seat pan cover and padding (sports seat)	532
1.3	Removing and installing backrest cover and padding	536
1.4	Removing and installing rear footwell light	540
1.5	Removing and installing seat heating element	540
1.6	Removing and installing seat heating element (sports seat)	540
1.7	Removing and installing backrest heating element	541
1.8	Removing and installing cover and padding for head restraint with slide-in locking mechanism	542



2	Covers and padding on front seats (with seat memory, with electric adjustment)	544
2.1	Removing and installing seat pan cover and padding (standard seat)	544
2.2	Removing and installing seat pan cover and padding (sports seat)	547
2.3	Removing and installing backrest cover and padding (sports seat, standard seat)	551
2.4	Removing and installing head restraint guides - vehicles up to 10.2004	553
2.5	Removing and installing head restraint guides - vehicles from 11.2004 onwards	554
2.6	Removing and installing seat heating element (standard seat)	555
2.7	Removing and installing seat heating element (sports seat)	556
2.8	Removing and installing backrest heating element	556
2.9	Removing and installing cover and padding for head restraint with slide-in locking mechanism	557
3	Recaro seat (front) covers and padding	558
3.1	Removing and installing seat pan cover and padding	558
3.2	Removing and installing backrest cover and padding	563
3.3	Removing and installing head restraint guides	566
3.4	Removing and installing seat heating element	566
3.5	Removing and installing backrest heating element	566
3.6	Removing and installing cover and padding for head restraint with slide-in locking mechanism	567
4	Covers and padding for RS bucket seat (front)	568
4.1	Removing and installing seat pan cover and padding	568
4.2	Removing and installing backrest cover and padding	569
4.3	Removing and installing seat heating element	571
4.4	Removing and installing backrest heating element	572
5	Covers and padding on rear seats	573
5.1	Removing and installing cover and padding for seat bench	573
5.2	Removing and installing cover and padding - fixed rear seat backrest	574
5.3	Removing and installing cover and padding for split rear seat backrest	577
5.4	Removing and installing locking mechanism and lock cylinder	581
5.5	Removing and installing head restraint guides with slide-in locking mechanism	583
5.6	Removing and installing outer head restraint guides without slide-in locking mechanism	583
5.7	Removing and installing inner head restraint guides without slide-in locking mechanism	584
5.8	Removing and installing frame for load-through hatch (folding seat)	586
5.9	Removing and installing load-through hatch (folding rear seat)	586
5.10	Cutting out cover for load-through hatch (folding seat)	586
6	Recaro seats (rear)	587
6.1	Removing and installing cover and padding for seat bench	587