

Contents

00 - Technical data	1
1 Routing and attaching pipes and wiring	1
2 Contact corrosion	2
3 Bonding surfaces for adhesive strips	3
50 - Body - front	4
1 Body - front	4
1.1 Lock carrier service position	4
1.2 Removing and installing lock carrier with attachments	5
1.3 Removing and installing cowl panel trim	9
1.4 Removing and installing cross brace (body brace)	10
1.5 Removing and installing wing panel	11
1.6 Exploded view - noise insulation	13
55 - Bonnet, rear lid	14
1 Bonnet	14
1.1 Removing and installing bonnet, adjusting bonnet	14
1.2 Bonnet panel gaps	18
1.3 Lining for bonnet	19
1.4 Bonnet seal	19
1.5 Installing impact guard	20
1.6 Removing and installing bonnet release cable	21
2 Rear lid - saloon	22
2.1 Removing and installing rear lid	22
2.2 Rear lid panel gaps	23
2.3 Removing and installing rear lid lock and handle mechanism	25
2.4 Removing and installing motor for remote control (country-specific version)	26
2.5 Removing and installing rear lid hinge	26
2.6 Installing rear lid seal	28
2.7 Adjusting stop buffers	28
3 Rear lid - Avant	29
3.1 Removing and installing rear lid	29
3.2 Bonding insulating mats onto inside of rear lid	30
3.3 Adjusting rear lid	30
3.4 Removing and installing rear lid hinge	31
3.5 Removing and installing gas strut for rear lid	32
3.6 Removing and installing seal for rear lid	33
3.7 Rear lid adjustment dimensions	33
3.8 Removing and installing rear lid lock cylinder	35
3.9 Removing and installing handle trim for rear lid	35
3.10 Removing and installing rear lid lock	35
3.11 Removing and installing actuator for rear lid	36
4 Tank flap	38
57 - Front doors, door components, central locking	39
1 Front door	39
1.1 Removing and installing window frame and window regulator	39
1.2 Removing door window from window regulator	41
1.3 Removing and installing window regulator motor	42
1.4 Adjusting front door	42
1.5 Adjustment using template T40038 /6	45
1.6 Panel gaps	46



1.7	Adjusting window frame	47
1.8	Installing window frame	51
1.9	Adjustment dimensions for front door window frame	55
1.10	Exploded view - front door handle and door lock	56
1.11	Removing door handle	57
1.12	Removing door handle	58
1.13	Removing door lock	59
2	Central locking system	61
2.1	Overview of components - saloon	61
2.2	Overview of components - Avant	62
2.3	Servicing central locking system	63
58	Rear doors, door components	64
1	Rear door	64
1.1	Exploded view - window frame and window regulator	64
1.2	Separating window regulator and door window	65
1.3	Removing and installing window regulator motor	66
1.4	Removing and installing manual window regulator	67
1.5	Adjusting rear door	68
1.6	Adjustment dimensions for rear door window frame	69
1.7	Adjustment using template T40038 /6	69
1.8	Panel gaps	71
1.9	Exploded view - rear door handle and door lock	73
1.10	Removing door handle	73
1.11	Removing door handle	74
1.12	Removing door lock	76
60	Sunroof	78
1	Exploded view - sliding/tilting sunroof	78
1.1	Removing and installing wind deflector	79
1.2	Exploded view - sliding/tilting sunroof panel	80
1.3	Removing and installing sunroof headliner	81
1.4	Removing and installing trim	81
1.5	Removing and installing bellows - vehicles from week 27/2002 onwards	82
1.6	Removing sliding/tilting sunroof panel	83
1.7	Adjusting sliding/tilting sunroof panel	83
1.8	Renewing panel seal	83
1.9	Adjusting zero position (motor)	84
1.10	Checking and adjusting zero position (slotted guide)	84
2	Water drain hoses	86
2.1	Removing and installing water drain hoses	86
63	Bumpers	88
1	Bumper (front)	88
1.1	Removing and installing bumper (front)	88
1.2	Removing and installing radiator grille	95
1.3	Centring holes for bumper guards	97
1.4	Removing and installing bumper (front)	99
1.5	Securing bumper to impact damper	103
1.6	Removing and installing guide	104
1.7	Removing cross member from cover/installing	105
1.8	Separating two-piece bumper cover	105
1.9	Removing and installing impact damper	105
2	Rear bumper - saloon	106
2.1	Removing and installing bumper	106

2.2	Renewing bumper guards	111
3	Rear bumper - Avant	114
3.1	Removing and installing bumper	114
3.2	Centring holes for bumper guards	119
3.3	Removing and installing guide	121
3.4	Removing and installing cross member for bumper	122
3.5	Removing and installing cross member for bumper - vehicles with towing bracket	123
64	- Glazing	125
1	Flush-bonded windows	125
1.1	Removing and installing flush-bonded windows	125
1.2	Materials	127
1.3	Repairing windows using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	128
1.4	Minimum drying times	128
1.5	Re-sealing windows	129
1.6	Exploded view - windscreen	129
1.7	Removing and installing rain and light sensor G397	131
1.8	Removing and installing windscreen	133
1.9	Preparations before installing windscreen	137
1.10	Installing windscreen	138
2	Removing and installing side window - Saloon	140
2.1	Exploded view - side window with moulding	140
2.2	Exploded view - side window (high-gloss package)	141
2.3	Removing undamaged window	142
2.4	Preparations before installing a new window	144
2.5	Installing side window	145
3	Removing and installing side window - Avant	146
3.1	Exploded view - removing and installing side window	146
3.2	Removing undamaged side window	146
3.3	Preparations before installing a new window	149
3.4	Installing side window	150
4	Removing and installing rear window - Saloon	152
4.1	Exploded view	152
4.2	Removing undamaged rear window	152
4.3	Removing damaged rear window	156
4.4	Preparations before installing a new rear window	157
4.5	Installing rear window	158
5	Removing and installing rear window - Avant	160
5.1	Exploded view	160
5.2	Removing undamaged rear window	161
5.3	Removing damaged rear window	163
5.4	Preparations before installing a new rear window	164
5.5	Installing rear window	165
66	- Exterior equipment	167
1	Strips and panels	167
1.1	Removing and installing roof joint moulding - saloon	167
1.2	Removing and installing roof joint moulding - Avant	168
1.3	Removing and installing roof trim strip - saloon	168
1.4	Removing and installing roof trim strip - Avant	169
1.5	Removing and installing trim panel for B-pillar	171
1.6	Window slot trim strip (front door)	171
1.7	Window slot trim strip (front) - vehicles with high-gloss package	172
1.8	Window slot trim strip (rear door)	173



1.9	Window slot trim strip (rear) - vehicles with high-gloss package	174
1.10	Renewing protective side strips	175
1.11	Removing and installing trim cover for side member	176
1.12	Removing and installing trim cover for side member - S4	177
1.13	Renewing outer sill panel trim	178
1.14	Removing and installing side member trim	179
2	Roof rail	181
2.1	Removing and installing roof rail	181
3	Exterior mirrors	182
3.1	Removing and installing exterior mirror	182
3.2	Installing mirror glass	183
3.3	Removing and installing mirror adjustment motor	183
3.4	Removing and installing mirror housing	184
4	Removing and installing exterior mirror - RS 4	185
4.1	Exploded view - exterior mirror (RS 4)	185
4.2	Removing exterior mirror	186
5	Spoilers	189
5.1	Spoiler (front)	189
5.2	Removing and installing spoiler for rear lid	190
5.3	Wheel spoiler	195
6	Underbody trim	198
6.1	Floor trim (front)	198
6.2	Floor trim (rear) on vehicles with front-wheel drive	199
6.3	Floor trim (rear) on vehicles with four-wheel drive	200
6.4	Floor trim for rough terrain package	201
7	Wheel housing liners	202
7.1	Exploded view - wheel housing liner (front)	202
7.2	Exploded view - wheel housing liner (rear)	203
8	Brand emblems and model badges	204
8.1	Emblems on rear lid - saloon	204
8.2	Emblems on rear lid - Avant	205
9	Brand emblems and model badges from VIN 400 001 onwards	208
9.1	Emblems on rear lid - saloon	208
9.2	Emblems on rear lid - Avant	211