

Contents

01 - Self-diagnosis, Electrical check	1
1 Heater self-diagnosis	1
1.1 Heater self-diagnosis	1
1.2 Technical data of self-diagnosis	1
1.3 Function	1
1.4 Fault detection	1
1.5 Safety precautions	3
2 Performing self-diagnosis	3
2.1 Performing self-diagnosis	3
2.2 Connecting up vehicle diagnostic, testing and information system VAS 5051 and selecting functions	3
3 Interrogating fault memory	7
3.1 Interrogating fault memory	7
3.2 Fault table	9
3.3 Fault table up to fault code "00975"	10
3.4 Fault table as of fault code "01044"	18
4 Final control diagnosis	29
4.1 Final control diagnosis	29
5 Basic setting	34
5.1 Basic setting	34
6 Erasing fault memory, end of output	37
6.1 Erasing fault memory, end of output	37
7 Encoding operating and display unit for air conditioner/Climatronic -E87 (heating)	39
7.1 Encoding operating and display unit for air conditioner/Climatronic -E87 (heating)	39
8 Reading measured value block	41
8.1 Reading measured value block	41
8.2 Measured value blocks (up to display group 016)	47
8.3 Measured value blocks (as of display group 017)	57
8.4 Display groups not used at present for service purposes	69
9 Checking convenience data bus	70
9.1 Checking convenience data bus	70
9.2 Function of bus systems	70
9.3 Checking convenience data bus	71
10 Adaption of operating and display unit for air conditioner/Climatronic -E87 (heating)	74
10.1 Adaption of operating and display unit for air conditioner/Climatronic -E87 (heating)	74
10.2 Performing adaption in adaption channels 01, 02, 06 and 07	77
10.3 Performing adaption of fresh-air blower speed reduction (adaption channel 08)	81
10.4 Performing adaption of chassis number (adaption channel 81)	85
11 Electrical check on heater	89
11.1 Electrical check on heater	89
11.2 Wiring and component check using test box V.A.G 1598 A	89
11.3 Test steps 1 to 6	91
12 Electrical checking of components actuated by operating and display unit for air conditioner/ Climatronic -E87 (heating)	98
12.1 Electrical checking of components actuated by operating and display unit for air conditioner/ Climatronic -E87 (heating)	98
12.2 Checking of heated rear window -Z1	98
12.3 Checking heated seats	100
12.4 Checking electric additional heater	104
12.5 Checking actuation of heated windscreen -Z2	106
13 Electrical checking of solar roof	108
13.1 Electrical checking of solar roof	108



14	Heated windscreen	110
14.1	Heated windscreen	110
14.2	Operation of heated windscreen	110
14.3	Deactivating heated windscreen	111
80	- Heating	112
1	Components for control of heater	112
1.1	Components for control of heater	112
1.2	Components in engine compartment and at rear of vehicle	113
1.3	Removing and installing dust and pollen filter	115
1.4	Dust and pollen filter with charcoal filter element	116
1.5	Checking vent frame	117
1.6	Components in passenger compartment	118
1.7	Removing and installing operating and display unit for air conditioner/Climatronic -E87 (heating)	127
1.8	Removing and installing control unit -J126 and fresh-air blower -V2	130
1.9	Removing and installing left vent temperature sender -G150	131
1.10	Removing and installing right vent temperature sender -G151	131
1.11	Removing and installing vent temperature sender, left footwell -G261	132
1.12	Removing and installing vent temperature sender, right footwell -G262	132
1.13	Preparing adapter cables for control motor actuation	133
1.14	Removing and installing defrost flap control motor -V107	133
1.15	Removing and installing temperature flap control motor, right -V159	134
1.16	Removing and installing temperature flap control motor, left -V158	135
1.17	Removing and installing central flap control motor -V70	135
1.18	Removing and installing air-recirculation flap control motor -V113	136
1.19	Removing and installing air-flow flap control motor -V71	137
1.20	Removing and installing fresh-air intake duct temperature sensor -G89	138
1.21	Removing and installing additional heating heater element -Z35	139
2	Dash panel vents and air ducts	141
2.1	Dash panel vents and air ducts	141
2.2	Air routing in vehicle	141
2.3	Air routing in heater	147
2.4	Connecting elements between temperature flaps "1" and "2"	154
2.5	Removing and installing intermediate piece for windscreen defroster vent	154
2.6	Removing and installing front footwell vent	155
3	Removing and installing heating system heat exchanger	157
3.1	Removing and installing heating system heat exchanger	157
4	Checking heat output	161
4.1	Checking heat output	161
4.2	Note on vehicles with auxiliary heater (poor heat output)	165
5	Removing and installing heater	166
5.1	Removing and installing heater	166
6	Dismantling and assembling heater	171
6.1	Dismantling and assembling heater	171
6.2	Detaching electrical add-on components from heater / re-attaching	172
6.3	Detaching heating elements and air ducts from heater/attaching	177
6.4	Dismantling and assembling heater	180