

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Code letters, allocation, transmission ratios, capacities .....	1
<b>2 Rear final drive identification</b> .....	<b>3</b>
<b>3 Transmission layout</b> .....	<b>4</b>
<b>4 Calculations</b> .....	<b>5</b>
4.1 Calculating transmission ratios "i" .....	5
<b>5 General repair instructions</b> .....	<b>6</b>
<b>30 - Clutch</b> .....	<b>10</b>
<b>1 Servicing clutch mechanism</b> .....	<b>10</b>
1.1 Exploded view - pedal cluster (LHD vehicles) .....	11
1.2 Removing and installing clutch pedal switch F36 .....	12
1.3 Removing and installing clutch pedal switch for engine start F194 .....	13
1.4 Removing and installing over-centre spring .....	14
1.5 Exploded view - pedal cluster (RHD vehicles) .....	15
1.6 Exploded view - hydraulic system .....	17
1.7 Notes on removing and installing master cylinder and slave cylinder .....	19
1.8 Function check for master and slave cylinders .....	19
1.9 Removing and installing clutch master cylinder .....	20
1.10 Bleeding clutch system .....	27
<b>2 Servicing clutch release mechanism</b> .....	<b>30</b>
2.1 Clutch release mechanism - exploded view .....	30
2.2 Removing and installing clutch slave cylinder .....	32
<b>3 Servicing clutch</b> .....	<b>35</b>
3.1 Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism .....	35
3.2 Servicing conventional clutch - exploded view .....	40
3.3 Removing and installing conventional clutch .....	43
3.4 Servicing self-adjusting clutch (Sachs version) - exploded view .....	44
3.5 Removing and installing self-adjusting clutch (Sachs version) .....	47
3.6 Clutch with SAC pressure plate - exploded view .....	49
3.7 Removing and installing clutch with SAC pressure plate .....	50
3.8 Resetting adjuster ring in SAC clutch pressure plate .....	52
<b>34 - Controls, housing</b> .....	<b>55</b>
<b>1 Servicing selector mechanism</b> .....	<b>55</b>
1.1 Installation position of selector mechanism .....	55
1.2 Removing and installing gear knob and boot .....	57
1.3 Servicing gear lever and gear lever bearing .....	58
1.4 Servicing selector rod and push rod .....	59
1.5 Removing and installing gear lever with gear lever bearing .....	60
1.6 Removing and installing selector mechanism .....	63
1.7 Adjusting selector mechanism .....	68
<b>2 Removing and installing gearbox</b> .....	<b>72</b>
2.1 Removing gearbox .....	72
2.2 Installing gearbox .....	78
2.3 Transporting gearbox .....	82
<b>3 Removing and installing gearbox mounting</b> .....	<b>84</b>
<b>4 Removing and installing cover with centre differential</b> .....	<b>87</b>
<b>5 Checking oil level in manual gearbox</b> .....	<b>92</b>



<b>6</b>	<b>Dismantling and assembling gearbox</b>	<b>93</b>
6.1	General layout of gearbox	93
6.2	Exploded view	94
6.3	Removing and installing input shaft ball bearing and multi-function sender	95
6.4	Removing and installing input shaft, pinion shaft, hollow shaft, selector rods, gearbox cover and cover with centre differential	97
6.5	Assembly sequence - dismantling and assembling gearbox	98
<b>7</b>	<b>Servicing cover for centre differential, removing and installing centre differential</b>	<b>106</b>
<b>8</b>	<b>Dismantling and assembling selector mechanism in gearbox</b>	<b>113</b>
<b>35 - Gears, shafts</b>		<b>118</b>
1	Dismantling and assembling input shaft	118
2	Adjusting input shaft	128
3	Dismantling and assembling pinion shaft and hollow shaft	131
4	Removing and installing reverse gear wheel	144
<b>39 - Final drive - differential</b>		<b>145</b>
1	Renewing oil seal for flange shaft	145
2	Removing and installing speedometer sender and drive wheel	150
2.1	Removing and installing speedometer sender G22	150
2.2	Removing and installing speedometer drive wheel	151
3	Renewing oil seal for flange shaft (rear)	154
4	Removing and installing differential	157
5	Dismantling and assembling differential	161
6	Adjusting pinion shaft and crown wheel	169
6.1	Adjustment and marking of final drive gear set	169
6.2	Position of shims	171
6.3	Table of adjustments	171
6.4	Re-adjustment sequence for final drive gear set	172
6.5	Adjusting pinion shaft	172
6.6	Re-determining shim "S4" when renewing gearbox cover	181
6.7	Adjusting crown wheel	183