

Contents

00	Technical data	1
1	Gearbox identification	1
1.1	Code letters, allocation, transmission ratios, capacities	1
2	Transmission layout	4
3	Calculating ratio "i"	5
4	General repair instructions	6
4.1	Special tools	6
4.2	Components	6
30	Clutch	12
1	Servicing clutch mechanism	12
1.1	Exploded view - pedal cluster (LHD vehicles)	13
1.2	Removing and installing clutch pedal switch F36	14
1.3	Removing and installing clutch pedal switch for engine start F194	15
1.4	Removing and installing over-centre spring	16
1.5	Exploded view - pedal cluster (RHD vehicles)	17
1.6	Exploded view - hydraulic system	18
1.7	Notes on removing and installing clutch master cylinder and slave cylinder	20
1.8	Function check for clutch master cylinder and slave cylinder	20
1.9	Removing and installing clutch master cylinder	21
1.10	Bleeding clutch system	28
2	Servicing clutch release mechanism	30
2.1	Checking release bearing	32
2.2	Removing and installing clutch slave cylinder	33
3	Servicing clutch	40
3.1	Servicing conventional clutch	40
3.2	Removing and installing conventional clutch	43
3.3	Servicing self-adjusting clutch (Sachs version)	44
3.4	Removing and installing self-adjusting clutch (Sachs version)	47
3.5	Servicing clutch with SAC pressure plate (LuK version)	49
3.6	Removing and installing clutch with SAC pressure plate	51
3.7	Resetting adjuster ring in SAC pressure plate	52
34	Controls, housing	55
1	Servicing selector mechanism	55
1.1	Installation position of selector mechanism	55
1.2	Exploded view - selector mechanism	56
1.3	Removing and installing gear knob with boot	58
1.4	Removing and installing selector mechanism	59
1.5	Adjusting selector mechanism	63
2	Removing and installing gearbox	66
2.1	Removing gearbox on vehicles with 4-cylinder petrol engine	66
2.2	Removing gearbox on vehicles with 4-cylinder TDI engine	74
2.3	Removing gearbox on vehicles with 6-cylinder engine	85
2.4	Installing gearbox on vehicles with 4-cylinder or 6-cylinder engine	97
2.5	Transporting gearbox	105
3	Removing and installing gearbox mounting	107
4	Checking oil level in manual gearbox	110
5	Mounting gearbox on assembly stand	111
6	Dismantling and assembling gearbox	113
6.1	General layout of gearbox	113



6.2	Exploded view - dismantling and assembling gearbox	114
6.3	Exploded view - removing and installing ball bearing for input shaft, gearbox cover, bearing housing and selector shaft	114
6.4	Exploded view - removing and installing 3rd to 6th gear	116
6.5	Exploded view - removing and installing input shaft, output shaft, reverse gear wheel and reverse selector gear	119
6.6	Assembly sequence - dismantling and assembling gearbox	120
7	Servicing gearbox cover	142
8	Servicing bearing housing	147
9	Servicing gearbox housing	153
10	Servicing selector shaft	159
10.1	Removing and installing selector shaft with gearbox installed	159
10.2	Renewing oil seal for selector shaft with gearbox removed (gearbox remains assembled)	163
10.3	Renewing oil seal for selector shaft with gearbox installed	165
10.4	Removing and installing reversing light switch F4	167
35	Gears, shafts	169
1	Input shaft	169
1.1	Exploded view - input shaft	169
1.2	Dismantling and assembling input shaft	171
1.3	Adjusting input shaft	173
2	Pinion shaft (output shaft)	177
2.1	Exploded view - pinion shaft (output shaft)	177
2.2	Dismantling and assembling pinion shaft (output shaft)	180
39	Final drive - differential	192
1	Renewing oil seals for flange shafts	192
1.1	Renewing oil seal for flange shaft (left-side)	192
1.2	Renewing oil seal for flange shaft (right-side)	195
2	Differential	199
2.1	Removing and installing differential	199
2.2	Dismantling and assembling differential	202
3	Adjusting pinion shaft and crown wheel	209
3.1	Adjustment and marking of final drive gear set	209
3.2	Position of shims	211
3.3	Table of adjustments	211
3.4	Recommended sequence for adjusting gear set	212
3.5	Adjusting pinion shaft	212
3.6	Re-determining shim "S4" when renewing bearing housing	221
3.7	Adjusting crown wheel	223