

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
<b>2 Code letters, allocation, transmission ratios, capacities</b> .....	<b>2</b>
2.1 Audi A4 2001 ► Code letters, allocation, transmission ratios, capacities .....	2
2.2 Audi A4 Cabriolet 2003 ► Code letters, allocation, transmission ratios, capacities .....	4
<b>3 Identification of rear final drive units 01R, 0AR and 08V</b> .....	<b>7</b>
3.1 Rear final drive 01R .....	7
3.2 Rear final drive 0AR .....	8
3.3 Rear final drive 08V .....	9
<b>4 Transmission layout</b> .....	<b>11</b>
4.1 Calculating ratio „i“ .....	11
<b>5 General repair instructions</b> .....	<b>13</b>
<b>30 - Clutch</b> .....	<b>16</b>
<b>1 Exploded view - clutch mechanism</b> .....	<b>16</b>
1.1 Exploded view - pedal cluster (LHD vehicles) .....	17
1.2 Removing and installing clutch pedal switch F36 .....	18
1.3 Removing and installing clutch pedal switch for engine start F194 .....	19
1.4 Removing and installing over-centre spring .....	20
1.5 Exploded view - pedal cluster (RHD vehicles) .....	21
<b>2 Exploded view - hydraulic system</b> .....	<b>23</b>
2.1 Notes on removing and installing clutch master cylinder and slave cylinder .....	25
2.2 Function check for clutch master cylinder and slave cylinder .....	25
2.3 Removing and installing clutch master cylinder .....	26
2.4 Bleeding clutch system .....	33
<b>3 Exploded view - clutch release mechanism</b> .....	<b>36</b>
3.1 Checking release bearing .....	40
3.2 Removing and installing clutch slave cylinder on vehicles with 4-cylinder engine and 6-cylinder TDI engine .....	41
3.3 Removing and installing clutch slave cylinder on vehicles with 8-cylinder engine .....	46
<b>4 Servicing clutch</b> .....	<b>51</b>
4.1 Exploded view - servicing clutch with SAC pressure plate (LuK version) .....	51
4.2 Removing and installing clutch with SAC pressure plate .....	54
4.3 Resetting adjuster ring in SAC clutch pressure plate .....	56
<b>34 - Controls, housing</b> .....	<b>59</b>
<b>1 Servicing selector mechanism</b> .....	<b>59</b>
1.1 Installation position of selector mechanism .....	59
1.2 Exploded view - selector mechanism .....	61
1.3 Exploded view - gear lever and gear lever bearing .....	62
1.4 Exploded view - Selector rod, connecting rod and push rod .....	63
1.5 Removing and installing gear knob with boot .....	64
1.6 Removing and installing selector mechanism .....	65
1.7 Adjusting selector mechanism .....	70
<b>2 Removing and installing gearbox</b> .....	<b>73</b>
2.1 Removing gearbox - vehicles with 4-cylinder TDI engine .....	73
2.2 Installing gearbox - vehicles with 4-cylinder TDI engine .....	83
2.3 Removing gearbox - vehicles with 2.5 ltr. TDI engine .....	88
2.4 Installing gearbox - vehicles with 2.5 ltr. TDI engine .....	99
2.5 Removing gearbox - vehicles with 3.0 ltr. TDI engine .....	106
2.6 Installing gearbox - vehicles with 3.0 ltr. TDI engine .....	117
2.7 Removing gearbox - vehicles with 8-cyl. MPI engine (Audi S4) .....	123



2.8	Installing gearbox - vehicles with 8-cyl. MPI engine (Audi S4)	137
2.9	Removing gearbox - vehicles with 8-cyl. FSI engine (Audi RS 4)	145
2.10	Installing gearbox - vehicles with 8-cyl. FSI engine (Audi RS 4)	156
2.11	Transporting gearbox	163
<b>3</b>	<b>Exploded view - gearbox mounting and tunnel cross member</b>	<b>165</b>
3.1	Removing and installing gearbox mounting	165
<b>4</b>	<b>Checking oil level in manual gearbox</b>	<b>168</b>
<b>5</b>	<b>Removing reversing light switch F4</b>	<b>169</b>
<b>6</b>	<b>Renewing oil seal for selector shaft with gearbox installed</b>	<b>170</b>
<b>7</b>	<b>Removing and installing selector shaft</b>	<b>173</b>
<b>8</b>	<b>Removing and installing selector shaft locking bushes (with gearbox installed in vehicle)</b>	<b>174</b>
<b>9</b>	<b>Exploded view – centre differential and centre differential housing</b>	<b>177</b>
9.1	Removing and installing centre differential housing with gearbox installed	177
<b>10</b>	<b>Exploded view - centre differential housing</b>	<b>180</b>
<b>11</b>	<b>Dismantling and assembling gearbox</b>	<b>181</b>
<b>35 - Gears, shafts</b>		<b>182</b>
1	Dismantling and assembling input shaft and output shaft	182
<b>39 - Final drive - front differential</b>		<b>183</b>
<b>1</b>	<b>Renewing oil seals for flange shaft</b>	<b>183</b>
1.1	Renewing flange shaft oil seal (left-side) with gearbox installed in vehicle	183
1.2	Renewing flange shaft oil seal (right-side) with gearbox installed in vehicle	186
<b>2</b>	<b>Front differential</b>	<b>191</b>
2.1	Removing and installing differential	191
2.2	Dismantling and assembling differential	191
<b>3</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>192</b>