

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
<b>2 General repair instructions</b> .....	<b>2</b>
2.1 Special tools .....	2
2.2 Components .....	2
<b>34 - Controls, housing</b> .....	<b>7</b>
<b>1 Dismantling and assembling gearbox</b> .....	<b>7</b>
1.1 Overview of gearbox .....	7
1.2 Exploded view .....	8
1.3 Removing and installing gearbox cover and selector shaft - exploded view .....	9
1.4 Removing and installing 1st, 2nd and reverse gear - exploded view .....	11
1.5 Removing and installing input shaft, 3rd - 6th gear wheels, pinion shaft and selector rods - exploded view .....	14
1.6 Dismantling and assembling sequence .....	17
1.7 Renewing grooved ball bearing for input shaft with gearbox removed (gearbox remains assembled) .....	42
<b>2 Servicing gearbox cover</b> .....	<b>46</b>
<b>3 Servicing gearbox housing</b> .....	<b>51</b>
<b>4 Servicing selector shaft</b> .....	<b>59</b>
4.1 Renewing oil seal for selector shaft with gearbox removed (gearbox remains assembled) .....	59
<b>35 - Gears, shafts</b> .....	<b>61</b>
<b>1 Input shaft</b> .....	<b>61</b>
1.1 Input shaft - exploded view .....	61
1.2 Dismantling and assembling input shaft - assembly sequence .....	65
<b>2 Pinion shaft</b> .....	<b>74</b>
2.1 Pinion shaft - exploded view of components .....	74
2.2 Dismantling and assembling pinion shaft .....	78
2.3 Re-determining shim "S5" for positioning 4th gear wheel .....	79
2.4 Re-determining shim "S6" for positioning 2nd speed selector gear .....	80
<b>39 - Final drive - differential</b> .....	<b>84</b>
<b>1 Renewing flange shaft oil seals</b> .....	<b>84</b>
<b>2 Removing and installing differential</b> .....	<b>85</b>
<b>3 Dismantling and assembling differential</b> .....	<b>89</b>
<b>4 Adjusting pinion shaft and crown wheel</b> .....	<b>96</b>
4.1 Adjustment and marking of final drive gear set .....	96
4.2 Adjusting pinion shaft .....	99
4.3 Adjusting crown wheel .....	105