

Contents

00 - Technical data	1
1 Gearbox, front final drive, transfer box	1
1.1 Gearbox identification	1
1.2 Notes on 5-speed automatic gearbox 01V	1
1.3 Gearbox (four-wheel drive) - code letters, gearbox allocation, ratios, equipment	2
2 Rear final drive	5
3 Capacities	6
3.1 ATF in planetary gearbox	6
3.2 Front final drive	6
3.3 Transfer box	6
3.4 Rear final drive	7
4 Safety precautions	8
5 Notes on tow-starting and towing	9
6 Transmission layout	10
6.1 Actuation of selector elements	10
7 Repair instructions	12
7.1 Resetting adaption values for gearbox control unit (basic setting)	14
8 Rules for cleanliness when working on the automatic gearbox	15
32 - Torque converter	16
1 Exploded view - torque converter	16
1.1 Identification of torque converter	17
1.2 Draining torque converter	17
1.3 Renewing oil seal for torque converter	17
1.4 Checking torque converter	18
1.5 Installing torque converter	18
37 - Controls, housing	20
1 Electrical/electronic components and fitting locations	20
1.1 Removing and installing automatic gearbox control unit J217	26
1.2 Checking automatic gearbox relay J60	27
2 Exploded view - selector mechanism cover, selector lever handle	29
2.1 Checking ignition key removal lock	30
2.2 Checking selector mechanism	30
2.3 Removing and installing selector lever handle	31
2.4 Removing and installing selector mechanism cover	32
2.5 Removing and installing tiptronic switch F189	33
3 Exploded view - selector mechanism	34
3.1 Removing and installing selector mechanism	35
3.2 Dismantling and assembling selector mechanism	39
3.3 Removing and installing selector lever lock solenoid N110	42
4 Exploded view - selector lever cable and locking cable	43
4.1 Removing and installing selector lever cable	44
4.2 Checking and adjusting selector lever cable	49
4.3 Adjusting selector lever cable to basic setting	50
4.4 Removing and installing locking cable	52
4.5 Adjusting locking cable	54
5 Removing and installing gearbox	57
5.1 Removing	57
5.2 Installing gearbox	69
5.3 Removing and installing gearbox support (left and right)	77



5.4	Transporting the automatic gearbox	80
5.5	Securing gearbox to assembly stand	81
6	ATF in planetary gearbox	82
6.1	Checking and topping up ATF level in planetary gearbox	82
6.2	Checking ATF level - vehicles with auxiliary ATF cooler	85
6.3	Changing ATF or filling up after performing repairs	86
7	ATF pipes	88
7.1	Exploded view - ATF pipes on vehicles with 1.8 ltr. turbocharged petrol engine	88
7.2	Exploded view - ATF pipes on vehicles with 3.0 ltr. petrol engine	90
7.3	Exploded view - ATF pipes on vehicles with 2.5 ltr. TDI engine	91
7.4	Exploded view - auxiliary ATF cooler	92
7.5	Removing and installing ATF pipes	92
7.6	Removing and installing auxiliary ATF cooler	93
7.7	Cleaning ATF pipes and ATF cooler	95
38	Gears, control	97
1	Oil pan, ATF strainer and valve body	97
1.1	Exploded view - hydraulic control components	97
1.2	Removing and installing oil pan	100
1.3	Removing and installing ATF strainer	102
1.4	Removing and installing valve body	102
1.5	Removing and installing internal oil pipe	102
1.6	Renewing oil seal for selector shaft	102
1.7	Removing and installing multifunction switch F125	104
1.8	Removing and installing speedometer sender G22	105
1.9	Removing and installing gearbox input speed sender G182	106
1.10	Removing and installing gearbox output speed sender G195	106
1.11	Removing and installing wiring harness in gearbox	107
1.12	Removing and installing gearbox oil temperature sender G93	107
39	Final drive - rear differential	108
1	For full description see corresponding Manual for rear final drive	108
39	Final drive - front differential	109
1	Gear oil in front final drive	109
1.1	Checking gear oil level in front final drive	109
1.2	Filling up gear oil in front final drive after repairs	110
2	Exploded view - front final drive	112
2.1	Renewing oil seal for flange shaft (right-side)	113
2.2	Renewing oil seal and grooved ball bearing for flange shaft (left-side)	116
2.3	Renewing gasket for front axle drive	122
2.4	Renewing oil seal for final drive/gearbox housing	124
2.5	Renewing O-ring on cover for final drive	128
3	Gear oil in transfer box	131
3.1	Checking gear oil level in transfer box and topping up	131
3.2	Changing gear oil in transfer box or filling up after repairs	132
4	Front axle drive and transfer box	135
4.1	Exploded view - front axle drive and transfer box	135
4.2	Removing and installing transfer box with centre differential	135
4.3	Renewing oil seal for output flange for propshaft	137
4.4	Renewing oil seal in intermediate flange for front axle drive	139
4.5	Renewing oil seal in input pinion	139
4.6	Renewing needle bearing for spur gear 2	139
5	Servicing propshaft	140