

Contents

| | |
|--|-----------|
| 24 - Mixture preparation - injection | 1 |
| 1 Technical data | 1 |
| 2 Safety precautions | 2 |
| 2.1 Safety precautions when working on the fuel supply system | 2 |
| 2.2 Safety precautions when working on vehicles with start/stop system | 2 |
| 2.3 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 2.4 Safety precautions when working on the cooling system | 3 |
| 2.5 Safety precautions when working on the exhaust system | 3 |
| 2.6 Safety precautions when working on the ignition system | 4 |
| 2.7 Safety precautions when working on the subframe | 4 |
| 3 Repair instructions | 5 |
| 3.1 Identification plates | 5 |
| 3.2 Use of impact wrenches | 5 |
| 3.3 Rules for cleanliness | 6 |
| 3.4 General notes | 6 |
| 3.5 General repair instructions | 6 |
| 3.6 Foreign particles in engine | 7 |
| 3.7 Contact corrosion | 7 |
| 3.8 Routing and attachment of pipes, hoses and wiring | 7 |
| 3.9 Nuts, bolts | 7 |
| 3.10 Installing radiators and condensers | 8 |
| 3.11 Checking vacuum system | 8 |
| 4 Overview of fitting locations - injection system | 9 |
| 4.1 Exploded view - air cleaner | 17 |
| 4.2 Removing and installing engine cover panel | 18 |
| 4.3 Removing and installing air filter element | 18 |
| 4.4 Removing and installing air mass meter G70 | 20 |
| 4.5 Exploded view - intake manifold | 20 |
| 4.6 Fuel rail - exploded view | 23 |
| 4.7 Removing and installing intake manifold with fuel rail | 24 |
| 4.8 Removing and installing fuel rail | 28 |
| 4.9 Removing and installing injectors | 29 |
| 4.10 Renewing combustion chamber ring seal (teflon ring seal) | 31 |
| 4.11 Cleaning injectors | 33 |
| 4.12 Removing and installing intake manifold flap motor V157 with intake manifold flap potentiometer G336 | 34 |
| 4.13 Removing and installing fuel pressure sender G247 | 36 |
| 4.14 Checking fuel pressure sender G247 | 37 |
| 4.15 Checking fuel pressure and residual pressure (up to high-pressure pump) | 39 |
| 4.16 Exploded view - high-pressure pump | 43 |
| 4.17 Removing and installing high-pressure pump | 44 |
| 4.18 Wiring and component check with test box V.A.G 1598/42 | 45 |
| 4.19 Renewing engine control unit J623 | 47 |
| 4.20 Removing and installing Lambda probe G39 and Lambda probe heater Z19 before catalytic converter | 51 |
| 4.21 Removing and installing Lambda probe after catalytic converter G130 and Lambda probe 1 heater after catalytic converter Z29 | 52 |
| 28 - Ignition system | 54 |
| 1 Checking ignition system | 54 |
| 1.1 Technical data for ignition system | 54 |
| 2 Servicing ignition system | 55 |
| 2.1 Exploded view - ignition system | 55 |



| | | |
|-----|---|----|
| 2.2 | Removing and installing ignition coils with output stages | 55 |
| 2.3 | Removing and installing knock sensor 1 G61 and knock sensor 2 G66 | 57 |