

## Contents

<b>24</b>	<b>Mixture preparation - injection</b> .....	<b>1</b>
<b>1</b>	<b>Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1	General notes on self-diagnosis .....	1
1.2	Safety precautions .....	1
1.3	Rules for cleanliness when working on the injection system .....	2
1.4	Important: Required procedure prior to opening high-pressure injection system .....	3
1.5	Safety precautions when working on the exhaust system .....	4
1.6	Checking vacuum system .....	5
<b>2</b>	<b>Injection system</b> .....	<b>6</b>
2.1	Technical data .....	6
2.2	Overview of fitting locations .....	6
2.3	Exploded view - air cleaner .....	14
2.4	Removing and installing air cleaner housing .....	16
2.5	Removing and installing air filter element .....	17
2.6	Removing and installing air mass meter G70 .....	20
2.7	Exploded view - intake manifold .....	20
2.8	Removing and installing intake manifold .....	22
2.9	Exploded view - injectors and fuel rail .....	30
2.10	Removing and installing injectors .....	33
2.11	Checking fuel pressure and residual pressure (up to high-pressure pump) .....	37
2.12	Exploded view - high-pressure pump .....	41
2.13	Removing and installing high-pressure pump .....	43
2.14	Overview - Lambda probes .....	45
2.15	Removing and installing Lambda probes .....	46
<b>3</b>	<b>Engine control unit</b> .....	<b>49</b>
3.1	Wiring and component check with test box V.A.G 1598/42 .....	49
3.2	Removing and installing engine control unit J623 .....	51
3.3	Removing and installing engine control unit 2 J624 .....	54
<b>28</b>	<b>Ignition system</b> .....	<b>58</b>
<b>1</b>	<b>General notes and safety precautions</b> .....	<b>58</b>
1.1	General notes on ignition system .....	58
1.2	Safety precautions .....	58
<b>2</b>	<b>Servicing ignition system</b> .....	<b>59</b>
2.1	Test data .....	59
2.2	Exploded view - ignition system .....	59
2.3	Removing and installing ignition coils .....	60
2.4	Removing and installing knock sensors .....	62