

Contents

| | |
|--|-----------|
| 24 - Mixture preparation, Injection | 1 |
| 1 Servicing injection system | 1 |
| 1.1 Servicing injection system | 1 |
| 1.2 Safety precautions | 1 |
| 1.3 Rules for cleanliness | 1 |
| 1.4 Technical data | 2 |
| 1.5 Fitting locations overview | 3 |
| 1.6 Servicing injection system | 9 |
| 1.7 Dismantling and assembling fuel rail | 12 |
| 1.8 Checking system pressure, fuel pressure regulator and holding pressure | 13 |
| 1.9 Checking injection quantity, leak-tightness and spray pattern of injectors | 16 |
| 1.10 Removing and installing lambda probe | 18 |
| 1.11 Wiring and component check with test box V.A.G 1598/31 | 18 |
| 1.12 Renewing engine control unit | 20 |
| 1.13 Procedure after voltage supply open circuit | 27 |
| 28 - Ignition system | 28 |
| 1 Testing ignition system | 28 |
| 1.1 Testing ignition system | 28 |
| 1.2 General notes on ignition system | 28 |
| 1.3 Safety precautions | 28 |
| 1.4 Technical data for ignition system | 28 |