

Contents

24	Mixture preparation, Injection	1
1	Servicing injection system	1
1.1	Servicing injection system	1
1.2	Safety precautions	1
1.3	Rules for cleanliness	1
1.4	Important - Procedure to be followed prior to opening high-pressure injection system	2
1.5	Technical data	5
1.6	Exploded view of fitting locations	6
1.7	Dismantling and assembling air cleaner	15
1.8	Removing and installing intake manifold	17
1.9	Crankcase breather	18
1.10	Low-pressure/high-pressure lines at fuel rail, high-pressure pump and load motion flap for air flow control	19
1.11	Throttle valve control unit, exhaust-gas recirculation valve on intake manifold	22
1.12	Installation position of high-pressure injectors, air guides, high-pressure pump, coolant pipe	25
1.13	Removing and installing injectors, replacing combustion-chamber sealing ring (Teflon sealing ring)	27
1.14	Checking initial fuel pressure up to mechanical high-pressure pump	32
1.15	Removing and installing lambda probe	34
1.16	Wiring and component check using test box V.A.G 1598/39	34
1.17	Replacing engine control unit	35
1.18	Procedure following interruption of power supply	38
28	Ignition system	39
1	Checking ignition system	39
1.1	Checking ignition system	39
1.2	General notes on ignition system	39
1.3	Safety precautions	39
1.4	Ignition system technical data	39