

Contents

00 - Technical data	1
1 Technical data	1
1.1 Engine number	1
1.2 Engine data	1
10 - Removing and installing engine	2
1 Removing and installing engine	2
1.1 Removing engine	2
1.2 Securing engine to assembly stand	18
1.3 Installing engine	19
13 - Crankshaft group	24
1 Servicing belt drive	24
1.1 Poly V-belt for alternator, power steering pump and air conditioner compressor - exploded view of components	24
1.2 Removing and installing poly V-belt	25
1.3 Removing and installing vibration damper	26
1.4 Removing and installing bracket for ancillaries	28
2 Servicing toothed belt drive - vehicles to 04.2003	33
2.1 Toothed belt drive - exploded view	33
2.2 Removing and installing toothed belt	34
2.3 Detaching toothed belt from camshaft sprocket	39
3 Servicing toothed belt drive - vehicles from 05.2003 to 05.2004	45
3.1 Toothed belt drive - exploded view	45
3.2 Removing and installing toothed belt	46
3.3 Detaching toothed belt from camshaft sprocket	52
4 Servicing toothed belt - vehicles from 06.2004	58
4.1 Toothed belt drive - exploded view	58
4.2 Removing and installing toothed belt	59
4.3 Detaching toothed belt from camshaft sprocket	64
5 Sealing flanges and flywheel/dual-mass flywheel	69
5.1 Sealing flanges and flywheel/dual-mass flywheel - exploded view of components	69
5.2 Renewing crankshaft oil seal (pulley end)	70
5.3 Removing and installing sealing flange (front)	73
5.4 Removing and installing dual-mass flywheel - vehicles with manual gearbox	78
5.5 Removing and installing flywheel - vehicles with multitronic gearbox	79
5.6 Removing and installing sealing flange (rear)	80
6 Removing and installing crankshaft	84
6.1 Crankshaft - exploded view of components	84
6.2 Crankshaft dimensions	86
6.3 Extracting and driving in needle bearing for crankshaft - needle bearing (open version) ..	87
6.4 Extracting and driving in needle bearing for crankshaft - needle bearing (closed version)	88
6.5 Removing and installing drive chain sprocket for oil pump	89
7 Dismantling and assembling pistons and conrods	91
7.1 Pistons and conrods - exploded view	91
7.2 Piston and cylinder dimensions	94
15 - Cylinder head, valve gear	95
1 Removing and installing cylinder head	95
1.1 Cylinder head - exploded view	95
1.2 Removing and installing cylinder head cover	96



1.3	Removing and installing cylinder head	99
1.4	Checking compression	106
2	Servicing valve gear	108
2.1	Valve gear - exploded view	108
2.2	Cylinder head (rear) - exploded view of components	110
2.3	Removing and installing camshaft control valve 1 N205	111
2.4	Checking axial clearance of camshafts	113
2.5	Renewing exhaust camshaft oil seal	114
2.6	Removing and installing camshafts	118
2.7	Removing and installing camshaft adjuster	129
2.8	Renewing valve stem oil seals	138
2.9	Checking supporting elements with hydraulic clearance compensation	142
2.10	Valve dimensions	143
2.11	Checking valve guides	143
2.12	Checking valves	144
17	- Lubrication	145
1	Removing and installing parts of lubrication system	145
1.1	Sump and balance shaft assembly with oil pump - exploded view of components	145
1.2	Removing and installing sump and balance shaft assembly	148
1.3	Balance shaft assembly with oil pump - exploded view of components	161
1.4	Oil filter and oil cooler - exploded view of components	164
1.5	Removing and installing oil cooler	165
1.6	Removing and installing oil filter housing	165
1.7	Checking oil pressure and oil pressure switch	167
1.8	Engine oil	171
1.9	Checking oil level	171
19	- Cooling	172
1	Removing and installing parts of cooling system	172
1.1	Connection diagram - coolant hoses	172
1.2	Draining and filling cooling system	174
1.3	Removing and installing coolant pump	179
1.4	Removing and installing coolant pipe (large)	180
1.5	Removing and installing coolant pipe (small)	183
1.6	Thermostat housing - exploded view of components	185
1.7	Removing and installing thermostat housing with map-controlled engine cooling thermostat F265	186
1.8	Checking map-controlled engine cooling thermostat F265	187
1.9	Removing and installing radiator	191
1.10	Removing and installing radiator cowl	196
1.11	Removing and installing radiator fan	197
1.12	Renewing radiator fan motor	197
1.13	Checking cooling system for leaks	198
26	- Exhaust system	201
1	Removing and installing parts of exhaust system	201
1.1	Exhaust system (front section) - exploded view of components	201
1.2	Exhaust system (rear section) - exploded view of components	204
1.3	Separating centre and rear silencers	205
1.4	Removing and installing starter catalytic converter	206
1.5	Removing and installing front exhaust pipe	210
1.6	Removing and installing main catalytic converter	211
1.7	Removing and installing exhaust manifold	213
1.8	Renewing tailpipe	213
1.9	Stress-free alignment of exhaust system	214

1.10	Tailpipe alignment	214
1.11	Checking exhaust system for leaks	215