

## Contents

<b>00 - Technical data</b>	1
1 <b>Engine number</b>	1
2 <b>Engine data</b>	2
3 <b>Safety precautions</b>	3
3.1     Procedure before opening high-pressure section of injection system	4
4 <b>General repair instructions</b>	5
4.1     Rules for cleanliness when working on fuel supply system and injection system	5
4.2     Checking for leaks in the fuel system	5
4.3     Foreign particles in engine	5
4.4     Contact corrosion!	5
4.5     Routing and attachment of pipes, hoses and wiring	6
4.6     Installing radiators and condensers	6
4.7     Checking vacuum system	6
<b>10 - Removing and installing engine</b>	7
1 <b>Removing engine</b>	7
2 <b>Separating engine and gearbox</b>	30
3 <b>Securing engine to engine and gearbox support</b>	34
4 <b>Installing engine</b>	38
5 <b>Assembly mountings</b>	44
5.1     Assembly mountings - exploded view	44
5.2     Removing and installing engine mountings	45
5.3     Removing and installing mounting for torque reaction support	49
<b>13 - Crankshaft group</b>	58
1 <b>Cylinder block (pulley end)</b>	58
1.1     Poly V-belt drive for alternator - exploded view	58
1.2     Removing and installing poly V-belt	59
1.3     Removing and installing vibration damper	60
1.4     Renewing crankshaft oil seal (pulley end)	61
2 <b>Cylinder block (gearbox end)</b>	64
2.1     Dual-mass flywheel - exploded view	64
2.2     Removing and installing dual-mass flywheel	64
2.3     Extracting and driving in needle bearing for dual-mass flywheel	66
2.4     Renewing crankshaft oil seal (gearbox end)	68
3 <b>Crankshaft</b>	71
3.1     Crankshaft - exploded view	71
3.2     Allocation of main bearing shells for new crankshafts	74
3.3     Allocation of main bearing shells on used and machined crankshafts	75
3.4     Crankshaft dimensions	76
3.5     Measuring axial clearance	76
3.6     Measuring radial clearance	77
4 <b>Pistons and conrods</b>	78
4.1     Pistons and conrods - exploded view	78
4.2     Allocation of conrods and conrod bearing shells to crankshaft	81
4.3     Piston and cylinder dimensions	82
4.4     Measuring radial clearance of conrods	82
<b>15 - Cylinder head, valve gear</b>	83
1 <b>Chain drive</b>	83
1.1     Timing chain covers - exploded view	83



1.2	Removing and installing timing chain covers (left and right) . . . . .	84
1.3	Removing and installing timing chain cover (bottom) . . . . .	88
1.4	Camshaft timing chains for vehicles up to 03.2007 - exploded view . . . . .	92
1.5	Removing timing chains from camshafts - vehicles up to 03.2007 . . . . .	95
1.6	Removing and installing camshaft timing chains - vehicles up to 03.2007 . . . . .	102
1.7	Camshaft timing chains for vehicles from 03.2007 onwards - exploded view . . . . .	105
1.8	Removing timing chains from camshafts - vehicles from 03.2007 onwards . . . . .	109
1.9	Removing and installing camshaft timing chains - vehicles from 03.2007 onwards . . . . .	116
1.10	Drive chain for valve gear for vehicles up to 03.2007 - exploded view . . . . .	118
1.11	Removing and installing drive chain for valve gear - vehicles up to 03.2007 . . . . .	120
1.12	Drive chain for valve gear for vehicles from 03.2007 onwards - exploded view . . . . .	122
1.13	Removing and installing drive chain for valve gear - vehicles from 03.2007 onwards . . . . .	123
1.14	Drive chain for auxiliary drives - exploded view . . . . .	124
1.15	Removing and installing drive chain for auxiliary drives . . . . .	125
1.16	Auxiliary drives - exploded view . . . . .	127
1.17	Renewing oil seal for AC compressor drive . . . . .	128
1.18	Renewing oil seal for power steering pump drive . . . . .	130
1.19	Removing and installing spur gear drive . . . . .	131
<b>2</b>	<b>Cylinder head . . . . .</b>	<b>135</b>
2.1	Cylinder head - exploded view . . . . .	135
2.2	Removing and installing cylinder head cover (left-side) . . . . .	136
2.3	Removing and installing cylinder head cover (right-side) . . . . .	138
2.4	Removing and installing cylinder head . . . . .	141
2.5	Checking compression . . . . .	149
<b>3</b>	<b>Valve gear . . . . .</b>	<b>153</b>
3.1	Valve gear - exploded view . . . . .	153
3.2	Measuring axial clearance of camshafts . . . . .	155
3.3	Measuring radial clearance of camshafts . . . . .	156
3.4	Removing and installing camshafts . . . . .	157
3.5	Renewing valve stem oil seals with cylinder head installed . . . . .	164
3.6	Renewing valve stem oil seals with cylinder head removed . . . . .	168
3.7	Checking hydraulic valve compensation elements . . . . .	172
3.8	Valve dimensions . . . . .	173
3.9	Checking valve guides . . . . .	173
3.10	Checking valves . . . . .	174
<b>17 - Lubrication . . . . .</b>	<b>175</b>	
<b>1</b>	<b>Lubrication system . . . . .</b>	<b>175</b>
1.1	Oil pump, sump (bottom section) - exploded view . . . . .	175
1.2	Removing and installing oil level and oil temperature sender G266 . . . . .	177
1.3	Removing and installing sump (bottom section) . . . . .	177
1.4	Removing and installing oil pump . . . . .	180
1.5	Sump (top section) - exploded view . . . . .	184
1.6	Removing and installing sump (top section) . . . . .	185
1.7	Oil retention valve and spray nozzle valve - exploded view . . . . .	190
1.8	Removing and installing oil retention valve and spray nozzle valve . . . . .	191
1.9	Removing and installing hose for crankcase breather system . . . . .	193
1.10	Oil filter housing - exploded view . . . . .	193
1.11	Removing and installing oil filter housing . . . . .	195
1.12	Removing and installing engine oil cooler on engine . . . . .	195
1.13	Removing and installing engine oil cooler on lock carrier . . . . .	196
1.14	Removing and installing oil pressure switch F1 . . . . .	199
1.15	Checking oil pressure and oil pressure switch F1 . . . . .	199
1.16	Engine oil . . . . .	200
1.17	Checking oil level . . . . .	200

<b>19 - Cooling</b>	<b>201</b>
1 <b>Cooling system</b>	201
1.1   Diagram of coolant hose connections	201
1.2   Draining and filling cooling system	203
1.3   Coolant pump and thermostat - exploded view	208
1.4   Removing and installing coolant pump	209
1.5   Removing and installing thermostat with housing	211
1.6   Checking thermostat	211
1.7   Removing and installing continued coolant circulation pump V51	212
1.8   Coolant pipes - exploded view	213
1.9   Removing and installing coolant pipe (front)	215
1.10   Removing and installing coolant pipe (rear)	215
1.11   Removing and installing coolant pipe (left-side)	221
1.12   Removing and installing coolant pipe (right-side)	221
1.13   Removing and installing radiator	224
1.14   Removing and installing auxiliary radiator (left-side)	229
1.15   Removing and installing auxiliary radiator (right-side)	230
1.16   Removing and installing radiator fan control unit J293	232
1.17   Removing and installing radiator fan V7 (left side)	232
1.18   Removing and installing radiator fan 2 V177 (right side)	233
1.19   Checking cooling system for leaks	234
<b>26 - Exhaust system</b>	<b>236</b>
1 <b>Exhaust system</b>	236
1.1   Exhaust system - exploded view	236
1.2   Separating centre and rear silencers	239
1.3   Removing and installing front exhaust pipe (left-side) with starter catalytic converter and main catalytic converter	240
1.4   Removing and installing front exhaust pipe (right-side) with starter catalytic converter and main catalytic converter	242
1.5   Exhaust manifold - exploded view	245
1.6   Removing and installing exhaust manifold (left-side)	246
1.7   Removing and installing exhaust manifold (right-side)	248
1.8   Stress-free alignment of exhaust system	250
1.9   Checking exhaust system for leaks	251
2 <b>Secondary air system</b>	253
2.1   Principle and function	253
2.2   Secondary air system - exploded view	253
2.3   Removing and installing secondary air pump	255
2.4   Checking combination valves for secondary air system for correct operation and leakage	257
2.5   Removing and installing combination valve for secondary air system (left-side)	258
2.6   Removing and installing combination valve for secondary air system (right-side)	261
3 <b>Exhaust flap</b>	263
3.1   Checking exhaust flap	263
3.2   Checking vacuum unit for exhaust flap	264