

Contents

23 - Mixture preparation - injection	1
1 Servicing diesel direct injection system	1
1.1 Safety precautions	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Rules for cleanliness	1
1.4 Overview of fitting locations	2
1.5 Exploded view - air cleaner	11
1.6 Removing and installing air filter element	12
1.7 Removing and installing air mass meter G70	14
1.8 Exploded view - intake manifold without exhaust gas recirculation cooler	14
1.9 Removing and installing intake manifold without exhaust gas recirculation cooler	15
1.10 Exploded view - intake manifold with exhaust gas recirculation cooler	17
1.11 Removing and installing intake manifold with exhaust gas recirculation cooler	18
1.12 Servicing unit injector	20
1.13 Removing and installing unit injector	21
1.14 Renewing O-rings for unit injector	25
1.15 Removing and installing electrical wiring harness for unit injectors	26
1.16 Wiring and component check with adapter cable, 121-pin V.A.G 1598/31 (test box) - engine codes AVB, AVF, AWX	29
1.17 Wiring and component check with test box V.A.G 1598/42 - engine codes BKE, BPW, BRB, BRC	30
1.18 Removing and installing engine control unit - engine codes AVB, AVF and AWX	31
1.19 Removing and installing engine control unit - engine codes BKE, BPW, BRB, BRC	33
1.20 Removing and installing Lambda probe G39 with Lambda probe heater Z19	37
1.21 Removing and installing exhaust gas pressure sensor 1 G450	40
28 - Glow plug system	41
1 Glow plug system	41
1.1 Different types of glow plugs	41
1.2 Removing and installing ceramic glow plugs	41
1.3 Removing and installing metal glow plugs	45